


CPD-110GS/110EST

SERVICE MANUAL

REVISED

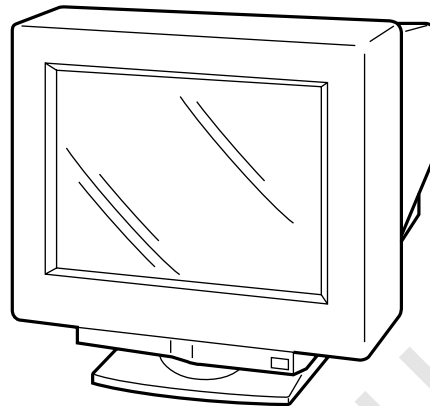

CPD-110GS

US Model

Canadian Model

Chassis No. SCC-L27A-A

CPD-110EST

AEP Model

Chassis No. SCC-L27B-A

X-110 CHASSIS

SPECIFICATIONS

| | |
|--------------------------|--|
| CRT | 0.25 mm aperture grille pitch 15 inches measured diagonally 90-degree deflection |
| Viewable image size | Approx. 285 × 214 mm (w/h) (11 1/4 × 8 1/2 inches) 14.0" viewing image |
| Resolution | Horizontal: Max. 1280 dots Vertical: Max. 1024 lines |
| Standard image area | Approx. 270 × 202 mm (w/h) (10 3/4 × 8 inches) |
| Deflection frequency* | Horizontal: 30 to 70 kHz Vertical: 48 to 120 Hz |
| AC input voltage/current | 100 to 240 V, 50 – 60 Hz, 1.6 – 0.8 A |
| Power consumption | Max. 105 W |
| Dimensions | Approx. 368 × 393 × 389 mm (w/h/d) (14 1/2 × 15 1/2 × 15 3/8 inches) |
| Mass | Approx. 14 kg (30 lb 14 oz) |
| Plug and Play | DDC1/DDC2B |
| Supplied accessories | See page 6 |

* Recommended horizontal and vertical timing condition

- Horizontal sync width should be more than 1.0 µsec.
- Horizontal blanking width should be more than 3.6 µsec.
- Vertical blanking width should be more than 500 µsec.

Design and specifications are subject to change without notice.

TRINITRON® COLOR COMPUTER DISPLAY
SONY®



DIAGNOSIS

| Failure | Power LED |
|----------------------------|--|
| HV or H STOP or +B Failure | Blink Amber (On 0.5 sec, Off 0.5 sec) |
| V Stop Failure | Blink Amber (On 1.5 sec, Off 0.5 sec) |
| Aging/Self-Test | Blink Amber (On 0.5 sec, Off 0.5 sec) Blink Green (On 0.5 sec, Off 0.5 sec) |
| Out of Range | On Green (OSD Indication) |
| No Input Signal | On Green (OSD Indication) |

TIMING SPECIFICATION

| PRIMARY MODE MODE AT PRODUCTION | MODE 1 | MODE 2 | MODE 3 | MODE 4 | MODE 5 | MODE 6 | PRIMARY MODE 7 | MODE 8 | MODE 9 |
|------------------------------------|------------|------------|------------|------------|------------|------------|-------------------|------------|-------------|
| RESOLUTION | 640 X 480 | 640 X 480 | 720 X 400 | 800 X 600 | 800 X 600 | 832 X 624 | 1024 X 768 | 1024 X 768 | 1280 X 1024 |
| CLOCK | 25.175 MHZ | 36.000 MHZ | 28.322 MHZ | 49.500 MHZ | 56.250 MHZ | 57.283 MHZ | 78.750 MHZ | 94.500 MHZ | 108.000 MHZ |
| — HORIZONTAL — | | | | | | | | | |
| H-FREQ | 31.469 kHz | 43.269 kHz | 31.469 kHz | 46.875 kHz | 53.674 kHz | 49.725 kHz | 60.024 kHz | 68.677 kHz | 63.981 kHz |
| | usec | usec | usec | usec | usec | usec | usec | usec | usec |
| H. TOTAL | 31.778 | 23.111 | 31.777 | 21.333 | 18.631 | 20.111 | 16.660 | 14.561 | 15.630 |
| H. BLK | 6.356 | 5.333 | 6.355 | 5.172 | 4.409 | 5.586 | 3.657 | 3.725 | 3.778 |
| H. FP | 0.636 | 1.556 | 0.636 | 0.323 | 0.569 | 0.559 | 0.203 | 0.508 | 0.444 |
| H. SYNC | 3.813 | 1.556 | 3.813 | 1.616 | 1.138 | 1.117 | 1.219 | 1.016 | 1.037 |
| H. BP | 1.907 | 2.222 | 1.907 | 3.232 | 2.702 | 3.910 | 2.235 | 2.201 | 2.296 |
| H. ACTIV | 25.422 | 17.778 | 25.422 | 16.162 | 14.222 | 14.524 | 13.003 | 10.836 | 11.852 |
| — VERTICAL — | | | | | | | | | |
| V. FREQ(HZ) | 59.940 Hz | 85.008 Hz | 70.087 Hz | 75.000 Hz | 85.061 Hz | 74.550 Hz | 75.030 Hz | 84.997 Hz | 60.020 Hz |
| | lines | lines | lines | lines | lines | lines | lines | lines | lines |
| V. TOTAL | 525 | 509 | 449 | 625 | 631 | 667 | 800 | 808 | 1066 |
| V. BLK | 45 | 29 | 49 | 25 | 31 | 43 | 32 | 40 | 42 |
| V. FP | 10 | 1 | 12 | 1 | 1 | 1 | 1 | 1 | 1 |
| V. SYNC | 2 | 3 | 2 | 3 | 3 | 3 | 3 | 3 | 3 |
| V. BP | 33 | 25 | 35 | 21 | 27 | 39 | 28 | 36 | 38 |
| V. ACTIV | 480 | 480 | 400 | 600 | 600 | 624 | 768 | 768 | 1024 |
| — SYNC — | | | | | | | | | |
| INT(G) | NO | NO | NO | NO | NO | NO | NO | NO | NO |
| EXT(H/V)/POLARITY | YES -/- | YES -/- | YES -/+ | YES +/+ | YES +/+ | YES -/- | YES +/+ | YES +/+ | YES +/+ |
| EXT(CS)/POLARITY | NO | NO | NO | NO | NO | NO | NO | NO | NO |
| INT/NON INT | NON INT | NON INT | NON INT | NON INT | NON INT | NON INT | NON INT | NON INT | NON INT |

98.12.10 VER.

Power saving function

This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption in three stages as shown below.

* When your computer enters the "active off" mode, the input signal is cut and NO INPUT SIGNAL appears on the screen. After 20 seconds, the monitor enters the power saving mode.

| Power mode | Power consumption | ⏻ (power) indicator |
|------------------|--|----------------------------|
| normal operation | ≤ 110 W (CPD-210GS) ≤ 105 W (CPD-110GS) | green |
| 1 standby | ≤ 15 W | green and orange alternate |
| 2 suspend | ≤ 15 W | green and orange alternate |
| 3 active off* | ≤ 5 W | orange |
| power off | 0 W | off |

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described below.

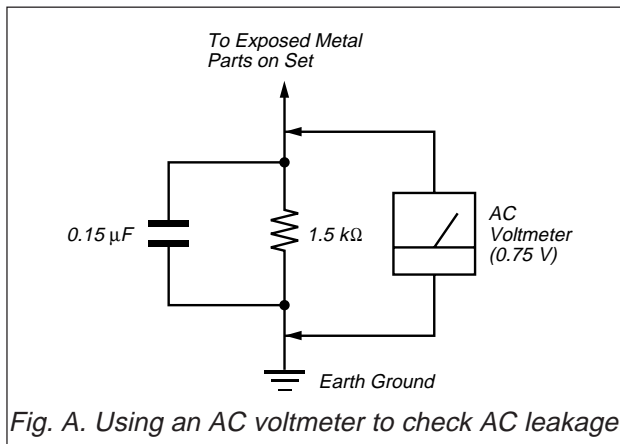


Fig. A. Using an AC voltmeter to check AC leakage.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

WARNING!!

NEVER TURN ON THE POWER IN A CONDITION IN WHICH THE DEGAUSS COIL HAS BEEN REMOVED.

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY SHADING AND MARK \triangle ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

AVERTISSEMENT!!

NE JAMAIS METTRE SOUS TENSION QUAND LA BOBINE DE DEMAGNETISATION EST ENLEVÉE.

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE \triangle SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

TABLE OF CONTENTS

| <i>Section</i> | <i>Title</i> | <i>Page</i> |
|----------------|--|-------------|
| 1. | GENERAL | 1-1 |
| 2. | DISASSEMBLY | |
| 2-1. | Cabinet Removal | 2-1 |
| 2-2. | Service Position | 2-1 |
| 2-3. | D Board Removal | 2-1 |
| 2-4. | Picture Tube Removal | 2-2 |
| 2-5. | Harnes Location | 2-3 |
| 3. | SAFETY RELATED ADJUSTMENT | 3-1 |
| 4. | ADJUSTMENTS | 4-1 |
| 5. | DIAGRAMS | |
| 5-1. | Block Diagrams (with Frame Schematic Diagram) | 5-1 |
| 5-2. | Circuit Boards Location | 5-5 |
| 5-3. | Schematic Diagrams and Printed Wiring Boards | 5-5 |
| (1) | Schematic Diagram of D-a Board | 5-6 |
| (2) | Schematic Diagram of D-b Board | 5-9 |
| (3) | Schematic Diagram of D-c Board | 5-13 |
| (4) | Schematic Diagram of A Board | 5-17 |
| 5-4. | Semiconductors | 5-20 |
| 6. | EXPLODED VIEWS | |
| 6-1. | Chassis | 6-1 |
| 6-2. | Packing Materials | 6-2 |
| 7. | ELECTRICAL PARTS LIST | 7-1 |

SECTION 1 GENERAL

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

Precautions

Warning on power connections

- Use the supplied power cord. If you use a different power cord, be sure that it is compatible with your local power supply.
For the customers in the U.S.A.
If you do not use the appropriate cord, this monitor will not conform to mandatory FCC standards.

Example of plug types



for 100 to 120 V AC



for 200 to 240 V AC

- Before disconnecting the power cord, wait at least 30 seconds after turning off the power to allow the static electricity on the screen's surface to discharge.
- After the power is turned on, the screen is demagnetized (degaussed) for about 5 seconds. This generates a strong magnetic field around the screen which may affect data stored on magnetic tapes and disks placed near the monitor. Be sure to keep magnetic recording equipment, tapes, and disks away from the monitor.

The equipment should be installed near an easily accessible outlet.

Installation

Do not install the monitor in the following places:

- on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies, etc.) that may block the ventilation holes
- near heat sources such as radiators or air ducts, or in a place subject to direct sunlight
- in a place subject to severe temperature changes
- in a place subject to mechanical vibration or shock
- on an unstable surface
- near equipment which generates magnetism, such as a transformer or high voltage power lines
- near or on an electrically charged metal surface

Maintenance


- Clean the screen with a soft cloth. If you use a glass cleaning liquid, do not use any type of cleaner containing an anti-static solution or similar additive as this may scratch the screen's coating.
- Do not rub, touch, or tap the surface of the screen with sharp or abrasive items such as a ballpoint pen or screwdriver. This type of contact may result in a scratched picture tube.
- Clean the cabinet, panel and controls with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzene.

Transportation

When you transport this monitor for repair or shipment, use the original carton and packing materials.

Use of the tilt-swivel


This monitor can be adjusted within the angles shown below. To turn the monitor vertically or horizontally, hold it at the bottom with both hands.

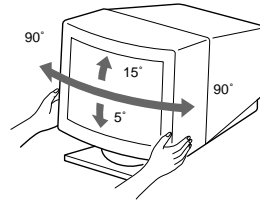

Identifying parts and controls


See the pages in parentheses for further details.

Front

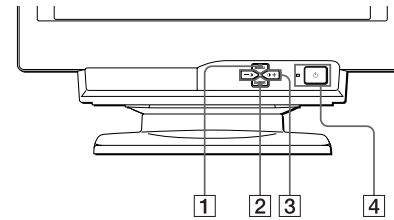


- MENU button (page 9)**
This button displays the MENU OSD.
- ENTER button (page 9)**
This button selects the menu and adjustment items.
- (contrast) +/- buttons (page 9)**
These buttons display the CONTRAST/BRIGHTNESS menu and function as the +/- buttons when adjusting other items.
- (power) switch and indicator (pages 6, 13, 16)**
This button turns the monitor on and off. The power indicator lights up in green when the monitor is turned on, and either flashes in green and orange, or lights up in orange when the monitor is in power saving mode.

Rear

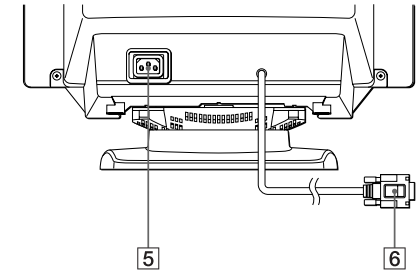

- AC IN connector (page 6)**
This connector provides AC power to the monitor.
- Video input connector (HD15) (page 6)**
This connector inputs RGB video signals (0.700 Vp-p, positive) and sync signals.

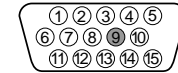

| Pin No. | Signal |
|---------|----------------------------|
| 1 | Red |
| 2 | Green |
| 3 | Blue |
| 4 | ID (Ground) |
| 5 | DDC Ground* |
| 6 | Red Ground |
| 7 | Green Ground |
| 8 | Blue Ground |
| 9 | - |
| 10 | Ground |
| 11 | ID (Ground) |
| 12 | Bi-Directional Data (SDA)* |
| 13 | H. Sync |
| 14 | V. Sync |
| 15 | Data Clock (SCL)* |

* DDC (Display Data Channel) is a standard of VESA.

Setup


Before using your monitor, check that the following accessories are included in your carton:

- Power cord (1)
- Windows Monitor Information Disk (1)
- Warranty card (1)
- Notes on cleaning the screen's surface (1)
- This instruction manual (1)

Step 1: Connect your monitor to your computer


Turn off the monitor and computer before connecting.

■ Connecting to an IBM PC/AT or compatible computer

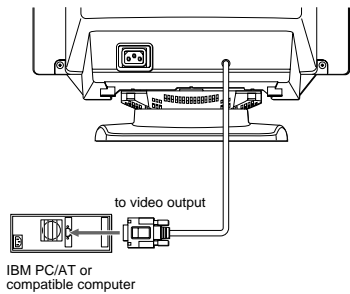


■ Connecting to a Macintosh or compatible computer

You will need a Macintosh adapter (not supplied).

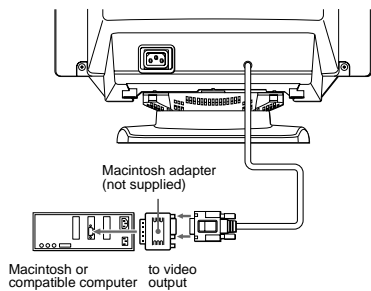

Step 2: Connect the power cord

With the monitor and computer switched off, first connect the power cord to the monitor, then connect it to a power outlet.

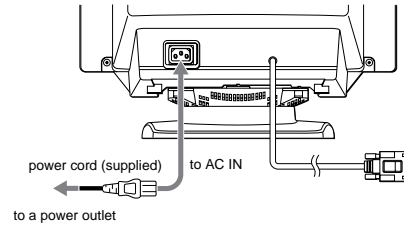

Step 3: Turn on the monitor and computer

First turn on the monitor, then turn on the computer.



The installation of your monitor is complete.
If necessary, use the monitor's controls to adjust the picture.

If no picture appears on your screen

- Check that the monitor is correctly connected to the computer.
- If NO INPUT SIGNAL appears on the screen, confirm that your computer's graphic board is completely seated in the correct bus slot.
- If you are replacing an old monitor with this model and OUT OF SCAN RANGE appears on the screen, reconnect the old monitor. Then adjust the computer's graphic board so that the horizontal frequency is between 30 – 70 kHz, and the vertical frequency is between 48 – 120 Hz.

For more information about the on-screen messages, see "Trouble symptoms and remedies" on page 14.

For customers using Windows 95/98

To maximize the potential of your monitor, install the new model information file from the supplied Windows Monitor Information Disk onto your PC. This monitor complies with the "VESA DDC" Plug & Play standard. If your PC/graphics board complies with DDC, select "Plug & Play Monitor (VESA DDC)" or this monitor's model name as the monitor type in the "Control Panel" of Windows 95/98. If your PC/graphics board has difficulty communicating with this monitor, load the Windows Monitor Information Disk and select this monitor's model name as the monitor type.

For customers using Windows NT4.0

Monitor setup in Windows NT4.0 is different from Windows 95/98 and does not involve the selection of monitor type. Refer to the Windows NT4.0 instruction manual for further details on adjusting the resolution, refresh rate, and number of colors.

Adjusting the monitor's resolution and color number

Adjust the monitor's resolution and color number by referring to your computer's instruction manual. The color number may vary according to your computer or video board. The color palette setting and the actual number of colors are as follows:

- High Color (16 bit) → 65,536 colors
- True Color (24 bit) → about 16.77 million colors


In true color mode (24 bit), speed may be slower.

Selecting the on-screen menu language (LANGUAGE/ INFORMATION)

English, French, German, Spanish, and Italian versions of the on-screen menus are available. The default setting is English.


1 Press the MENU button.

See page 9 for more information on using the MENU button.

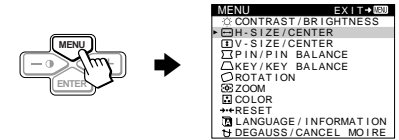

2 Press the +/- buttons to highlight LANGUAGE/ INFORMATION and press the ENTER button.

 See page 9 for more information on using the +/- and ENTER buttons.



US

3 Press the ENTER button to select LANGUAGE and press +/- buttons to select a language.

- ENGLISH
- FRANÇAIS: French
- DEUTSCH: German
- ESPAÑOL: Spanish
- ITALIANO: Italian

To close the menu

Press the MENU button once to return to the main menu, and twice to return to normal viewing. If no buttons are pressed, the menu closes automatically after about 30 seconds.

To reset to English


See "Resetting the adjustments (RESET)" on page 12.

Customizing Your Monitor

You can make numerous adjustments to your monitor using the on-screen menu.


Navigating the menu

Press the MENU button to display the main MENU on your screen. See page 9 for more information on using the MENU button.

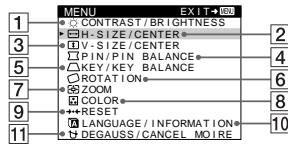


Use the +/- and ENTER buttons to select one of the following menus. See page 9 for more information on using the +/- and ENTER buttons.

 
- 1 CONTRAST/BRIGHTNESS (page 9)**
Select the CONTRAST/BRIGHTNESS menu to adjust the picture's contrast and brightness.




- 2 H-SIZE/CENTER (page 10)**
Select the H-SIZE/CENTER menu to adjust the picture's horizontal size and centering.

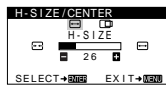


- 3 V-SIZE/CENTER (page 10)**
Select the V-SIZE/CENTER menu to adjust the picture's vertical size and centering.

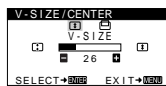


- 4 PIN/PIN BALANCE (page 10)**
Select the PIN/PIN BALANCE menu to adjust the curvature picture's sides.

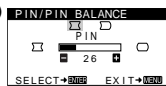


- 5 KEY/KEY BALANCE (page 10)**
Select the KEY/KEY BALANCE menu to adjust the angle of the picture's sides.

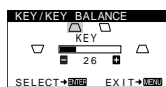

- 6 ROTATION (page 11)**
Select the ROTATION menu to adjust the picture's rotation.

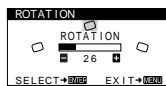


- 7 ZOOM (page 11)**
Select the ZOOM menu to enlarge or reduce the picture.

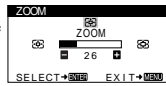


- 8 COLOR (page 11)**
Select the COLOR menu to adjust the picture's color temperature. You can use this to match the monitor's colors to a printed picture's colors.




- 9 RESET (page 12)**
Select the RESET menu to reset the adjustments.

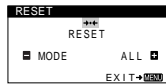


- 10 LANGUAGE/INFORMATION (page 7, 15)**
Select the LANGUAGE/INFORMATION menu to choose the on-screen menu's language and display this monitor's information box.

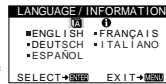

- 11 DEGAUSS/CANCEL MOIRE (page 12)**
Select the DEGAUSS/CANCEL MOIRE menu to degauss the screen and cancel the moire.

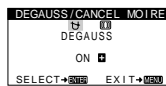

- Displaying the current input signal**
The horizontal and vertical frequencies of the current input signal are displayed in the CONTRAST/BRIGHTNESS menu. If the signal matches one of this monitor's factory preset modes, the resolution is also displayed.

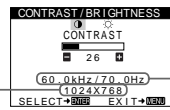


the resolution of the current input signal


the horizontal and vertical frequencies of the current input signal

■ Using the MENU, ENTER, and +/- buttons

 
- 1 Select the menu you want to adjust.**
Press the +/- buttons to highlight the desired menu. Press the ENTER button to select the menu and adjustment items.



 - 2 Adjust the menu.**
Press the +/- buttons to make the adjustment.



 - 3 Close the menu.**
Press the MENU button once to return to the main menu, and twice to return to normal viewing. If no buttons are pressed, the menu closes automatically after about 30 seconds.




■ Resetting the adjustments

You can reset the adjustments using the RESET menu. See page 12 for more information on resetting the adjustments.

Adjusting the contrast and brightness (CONTRAST/BRIGHTNESS)

These settings are stored in memory for all input signals.

 - 1 Press either one of the (CONTRAST) +/- buttons.**
The CONTRAST/BRIGHTNESS menu appears on the screen.






- 2 Press the ENTER button to select (CONTRAST) or (BRIGHTNESS).**

- 3 Press the +/- buttons to adjust either the contrast (CONTRAST) or brightness (BRIGHTNESS).**
The menu automatically disappears after about 30 seconds.

Adjusting the horizontal size or centering of the picture (H-SIZE/CENTER)


These settings are stored in memory for the current input signal.



- 1 Press the MENU button.**
The main MENU appears on the screen.
- 2 Press the +/- buttons to highlight  H-SIZE/CENTER, and press the ENTER button.**
The H-SIZE/CENTER menu appears on the screen.
- 3 First press the ENTER button to select the desired adjustment item. Then press the +/- buttons to make the adjustment.**

| Select | To |
|--|---------------------------------|
|  H-SIZE | adjust the horizontal size |
|  H-CENTER | adjust the horizontal centering |

Adjusting the vertical size or centering of the picture (V-SIZE/CENTER)


These settings are stored in memory for the current input signal.



- 1 Press the MENU button.**
The main MENU appears on the screen.
- 2 Press the +/- buttons to highlight  V-SIZE/CENTER, and press the ENTER button.**
The V-SIZE/CENTER menu appears on the screen.
- 3 First press the ENTER button to select the desired adjustment item. Then press the +/- buttons to make the adjustment.**

| Select | To |
|--|-------------------------------|
|  V-SIZE | adjust the vertical size |
|  V-CENTER | adjust the vertical centering |

Adjusting the curvature of the picture's sides (PIN/PIN BALANCE)

  
These settings are stored in memory for the current input signal.


 
- 1 Press the MENU button.**
The main MENU appears on the screen.
- 2 Press the +/- buttons to highlight  PIN/PIN BALANCE, and press the ENTER button.**
The PIN/PIN BALANCE menu appears on the screen.
- 3 First press the ENTER button to select the desired adjustment item. Then press the +/- buttons to make the adjustment.**

| Select | To |
|---|--|
|  PIN | expand or contract the picture sides |
|  PIN BALANCE | shift the picture sides to the left or right |

Adjusting the angle of the picture's sides (KEY/KEY BALANCE)


These settings are stored in memory for the current input signal.

- 1 Press the MENU button.**
The main MENU appears on the screen.
- 2 Press the +/- buttons to highlight  KEY/KEY BALANCE, and press the ENTER button.**
The KEY/KEY BALANCE menu appears on the screen.
- 3 First press the ENTER button to select the desired adjustment item. Then press the +/- buttons to make the adjustment.**

| Select | To |
|---|---|
|  KEY | adjust the picture width at the top of the screen |
|  KEY BALANCE | shift the picture to the left or right at the top of the screen |

 
Adjusting the picture's rotation (ROTATION)

This setting is stored in memory for all input signals.

- 1 Press the MENU button.**
The main MENU appears on the screen.
- 2 Press the +/- buttons to highlight  ROTATION, and press the ENTER button.**
The ROTATION menu appears on the screen.
- 3 Press the +/- buttons to rotate the picture.**

Enlarging or reducing the picture (ZOOM)

This setting is stored in memory for the current input signal.


- 1 Press the MENU button.**
The main MENU appears on the screen.
- 2 Press the +/- buttons to highlight  ZOOM and press the ENTER button.**
The ZOOM menu appears on the screen.
- 3 Press the +/- buttons to enlarge or reduce the picture.**


Note

Adjustment stops when either the horizontal or vertical size reaches its maximum or minimum value.

Adjusting the color of the picture (COLOR)

The COLOR settings allow you to adjust the picture's color temperature by changing the color level of the white color field. Colors appear reddish if the temperature is low, and bluish if the temperature is high. This adjustment is useful for matching the monitor's colors to a printed picture's colors. This setting is stored in memory for all input signals.

- 1 Press the MENU button.**
The main MENU appears on the screen.
- 2 Press the +/- buttons to highlight  COLOR and press the ENTER button.**
The COLOR menu appears on the screen.
- 3 Press the +/- buttons to select a color temperature.**
The preset color temperatures are 5000K, 6500K, and 9300K. Since the default setting is 9300K, the whites will change from a bluish hue to a reddish hue as the temperature is lowered to 6500K and 5000K.
- 4 If necessary, fine tune the color temperature.**
First press the +/- buttons to select USER. Then press the ENTER button to select R (red), G (green), or B (blue) and press the +/- buttons to make the adjustment.

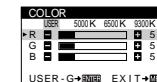

If you fine tune the color temperature, the new color settings are stored in memory and recalled whenever you select USER.

US

Additional settings (DEGAUSS/ CANCEL MOIRE)

You can manually degauss (demagnetize) the screen, and cancel the moire.

- 1 Press the MENU button.**
The main MENU appears on the screen.
- 2 Press the +/- buttons to highlight DEGAUSS/ CANCEL MOIRE and press the ENTER button.**
The DEGAUSS/CANCEL MOIRE menu appears on the screen.
- 3 Press the ENTER button to select the desired adjustment item.**
Adjust the selected item according to the following instructions.

Degaussing the screen

The monitor is automatically demagnetized when the power is turned on.

To manually degauss the monitor, first press the ENTER button to select DEGAUSS. Then press the + button.

The screen is degaussed for about 5 seconds. If a second degauss cycle is needed, allow a minimum interval of 20 minutes for the best result.

Cancelling the moire

If elliptical or wavy patterns appear on the screen, adjust the moire cancellation level.

To adjust the amount of moire cancellation, first press the ENTER button to select CANCEL MOIRE. Then press the +/- buttons until the moire effect is at a minimum.

* Moire is a type of natural interference which produces soft, wavy lines on your screen. It may appear due to interference between the pattern of the picture on the screen and the phosphor pitch pattern of the monitor.

Example of moire



Resetting the adjustments (RESET)

This monitor has the following two reset methods. Use the RESET menu to reset the adjustments.

- 1 Press the MENU button.**
The main MENU appears on the screen.
- 2 Press the +/- buttons to highlight RESET and press the ENTER button.**
The RESET menu appears on the screen.
Reset the settings according to the following instructions.

Resetting all of the adjustment data for the current input signal (MODE)

Press the - button.

The MODE item is selected. All of the adjustment data for the current input signal is reset.

Note that the following items are not reset by this method:

- on-screen menu language (page 7)
- picture's rotation (page 11)

Resetting all of the adjustment data to factory preset levels (ALL)

Press the + button.

The ALL item is selected. With the exception of the USER settings in the COLOR menu, all of the adjustment data for all input signals is reset to the factory preset levels.

Note

The monitor's buttons will not operate for about 5 seconds when ALL is selected.

Technical Features

Preset and user modes

When the monitor receives an input signal, it automatically matches the signal to one of the factory preset modes stored in the monitor's memory to provide a high quality picture at the center of the screen. (See Appendix for a list of the factory preset modes.) For input signals that do not match one of the factory preset modes, the digital Multiscan technology of this monitor ensures that a clear picture appears on the screen for any timing in the monitor's frequency range (horizontal: 30 – 70 kHz, vertical: 48 – 120 Hz). If the picture is adjusted, the adjustment data is stored as a user mode and automatically recalled whenever the same input signal is received.

Note for Windows users

For Windows users, check your video board manual or the utility program which comes with your graphic board and select the highest available refresh rate to maximize monitor performance.

Power saving function

This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption in three stages as shown below.

| Power mode | Power consumption | ⏻ (power) indicator |
|------------------|--|----------------------------|
| normal operation | ≤ 110 W (CPD-210GS) ≤ 105 W (CPD-110GS) | green |
| 1 standby | ≤ 15 W | green and orange alternate |
| 2 suspend | ≤ 15 W | green and orange alternate |
| 3 active off* | ≤ 5 W | orange |
| power off | 0 W | off |

 
* When your computer enters the "active off" mode, the input signal is cut and NO INPUT SIGNAL appears on the screen. After 20 seconds, the monitor enters the power saving mode.

Troubleshooting

Before contacting technical support, refer to this section.


If thin lines appear on your screen (damper wires)

The lines you are experiencing on your screen are normal for the Trinitron monitor and are not a malfunction. These are shadows from the damper wires used to stabilize the aperture grille and are most noticeable when the screen's background is light (usually white). The aperture grille is the essential element that makes a Trinitron picture tube unique by allowing more light to reach the screen, resulting in a brighter, more detailed picture.



On-screen messages

 If there is something wrong with the input signal, one of the following messages appears on the screen. To solve the problem, see "Trouble symptoms and remedies" on page 14.



The input signal condition

OUT OF SCAN RANGE

 
 
 
 
indicates that the input signal is not supported by the monitor's specifications.

NO INPUT SIGNAL

indicates that no signal is being input to the monitor.

Trouble symptoms and remedies



If the problem is caused by the connected computer or other equipment, please refer to the connected equipment's instruction manual. Use the self-diagnosis function (page 16) if the following recommendations do not resolve the problem.

| Symptom | Check these items |
|--|---|
| No picture | |
| If the  (power) indicator is not lit | <ul style="list-style-type: none"> Check that the power cord is properly connected. Check that the  (power) switch is in the "on" position. |
| If the NO INPUT SIGNAL message appears on the screen, or if the  (power) indicator is either orange or alternating between green and orange | <ul style="list-style-type: none"> Check that the video signal cable is properly connected and all plugs are firmly seated in their sockets (page 6). Check that the HD15 video input connector's pins are not bent or pushed in. Problems caused by the connected computer or other equipment <ul style="list-style-type: none"> The computer is in power saving mode. Try pressing any key on the computer keyboard. Check that the computer's power is "on." Check that the graphic board is completely seated in the proper bus slot. |
| If the OUT OF SCAN RANGE message appears on the screen | <ul style="list-style-type: none"> Problems caused by the connected computer or other equipment <ul style="list-style-type: none"> Check that the video frequency range is within that specified for the monitor. If you replaced an old monitor with this monitor, reconnect the old monitor and adjust the frequency range to the following. Horizontal: 30~70 kHz Vertical: 48~120 Hz |
| If no message is displayed and the  (power) indicator is green or flashing orange | <ul style="list-style-type: none"> Use the Self-diagnosis function (page 16). |
| If using Windows 95/98 | <ul style="list-style-type: none"> If you replaced an old monitor with this monitor, reconnect the old monitor and do the following. Install the Windows Monitor Information Disk (page 7) and select this monitor ("CPD-110GS" or "CPD-210GS") from among the Sony monitors in the Windows 95/98 monitor selection screen. |
| If using a Macintosh system | <ul style="list-style-type: none"> Check that the Macintosh adapter (not supplied) and the video signal cable are properly connected (page 6). |
| Picture flickers, bounces, oscillates, or is scrambled | <ul style="list-style-type: none"> Isolate and eliminate any potential sources of electric or magnetic fields such as other monitors, laser printers, electric fans, fluorescent lighting, or televisions. Move the monitor away from power lines or place a magnetic shield near the monitor. Try plugging the monitor into a different AC outlet, preferably on a different circuit. Try turning the monitor 90° to the left or right. Problems caused by the connected computer or other equipment <ul style="list-style-type: none"> Check your graphics board manual for the proper monitor setting. Confirm that the graphics mode (VESA, Macintosh 16" Color, etc.) and the frequency of the input signal are supported by this monitor (Appendix). Even if the frequency is within the proper range, some video boards may have a sync pulse that is too narrow for the monitor to sync correctly. Adjust the computer's refresh rate (vertical frequency) to obtain the best possible picture. |
| Picture is fuzzy | <ul style="list-style-type: none"> Adjust the contrast and brightness (page 9). Degauss the monitor* (page 12). Decrease the moire cancellation effect (page 12). |

| Symptom | Check these items |
|--|---|
| Picture is ghosting | <ul style="list-style-type: none"> Eliminate the use of video cable extensions and/or video switch boxes. Check that all plugs are firmly seated in their sockets. |
| Picture is not centered or sized properly | <ul style="list-style-type: none"> Adjust the size or centering (page 10). Note that some video modes do not fill the screen to the edges. |
| Edges of the image are curved | <ul style="list-style-type: none"> Adjust the shape of the picture (page 10). |
| Wavy or elliptical pattern (moire) is visible | <ul style="list-style-type: none"> Cancel the moire (page 12). Problems caused by the connected computer or other equipment <ul style="list-style-type: none"> Change your desktop pattern. |
| Color is not uniform | <ul style="list-style-type: none"> Degauss the monitor* (page 12). If you place equipment that generates a magnetic field, such as a speaker, near the monitor, or if you change the direction the monitor faces, color may lose uniformity. |
| White does not look white | <ul style="list-style-type: none"> Adjust the color temperature (page 11). |
| A hum is heard right after the power is turned on | <ul style="list-style-type: none"> This is the sound of the auto-degauss cycle. When the power is turned on, the monitor is automatically degaussed for 5 seconds. |

* If a second degauss cycle is needed, allow a minimum interval of 20 minutes for the best result. A humming noise may be heard, but this is not a malfunction.

Displaying this monitor's name, serial number, and date of manufacture (INFORMATION)


- 1 Press the MENU button.**
The main MENU appears on the screen.
- 2 Press the +/- buttons to highlight  LANGUAGE/INFORMATION and press the ENTER button.**
The LANGUAGE/INFORMATION menu appears on the screen.
- 3 Press the ENTER button to select  (INFORMATION).**
This monitor's information box appears on the screen.

If the problem persists, call your authorized Sony dealer and give the following information.

- Model name: CPD-110GS or CPD-210GS
- Serial number
- Name and specifications of your computer and graphics board.


US

Example

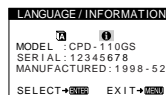


Self-diagnosis function

This monitor is equipped with a self-diagnosis function. If there is a problem with your monitor or computer, the screen will go blank and the ⏻ (power) indicator will either light up green or flash orange. If the ⏻ (power) indicator is lit in orange, the computer is in power saving mode. Try pressing any key on the keyboard.

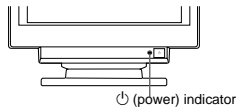

If the ⏻ (power) indicator is green

- 1 **Disconnect the video input cable, or turn off the connected computer.**
- 2 **Press the ⏻ (power) button to turn the monitor off and on.**
- 3 **Press and hold the + button for 2 seconds before the monitor enters power saving mode.**

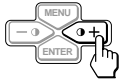

If all three color bars appear (red, green, blue), the monitor is working properly. Reconnect the video input cables and check the condition of your computer.

If the color bars do not appear, there is a potential monitor failure. Inform your authorized Sony dealer of the monitor's condition.

If the ⏻ (power) indicator is flashing orange


Press the ⏻ (power) button to turn the monitor off and on.

If the ⏻ (power) indicator lights up green, the monitor is working properly.


If the ⏻ (power) indicator is still flashing, there is a potential monitor failure. Count the number of seconds between orange flashes of the ⏻ (power) indicator and inform your authorized Sony dealer of the monitor's condition. Be sure to note the model name and serial number of your monitor. Also note the make and model of your computer and video board.

SECTION 2 DISASSEMBLY


2-1. CABINET REMOVAL

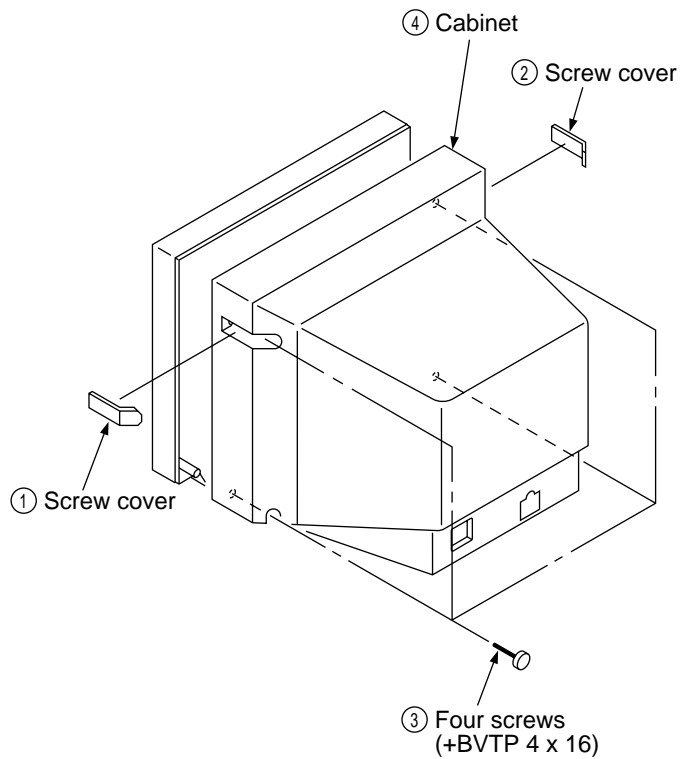


2-2. SERVICE POSITION

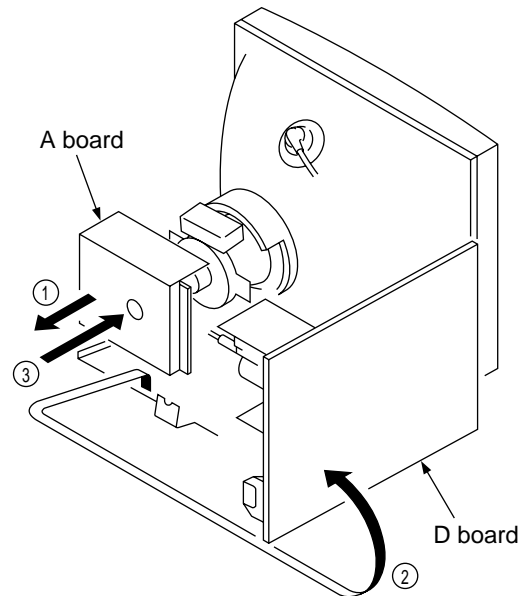

2-3. D BOARD REMOVAL

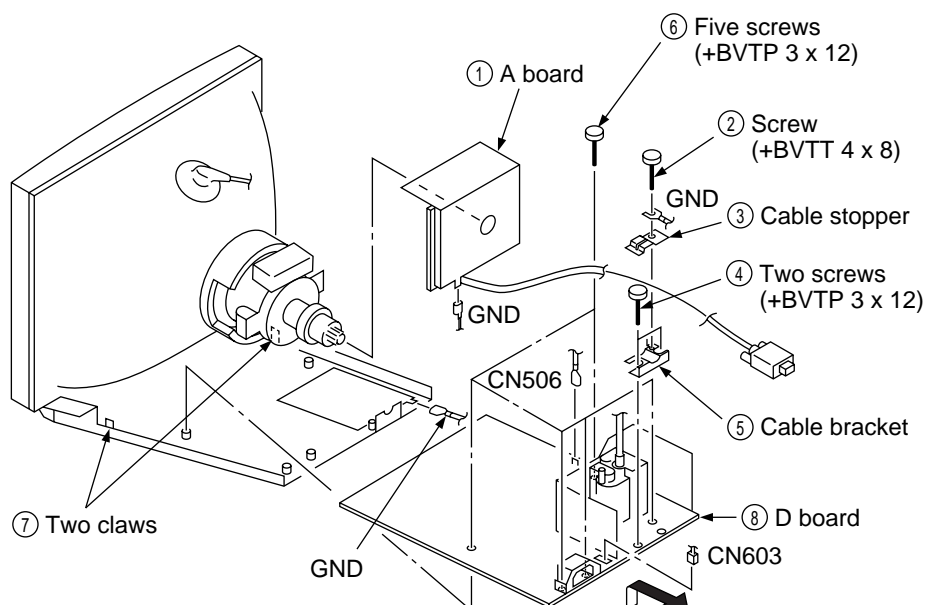


2-4. PICTURE TUBE REMOVAL

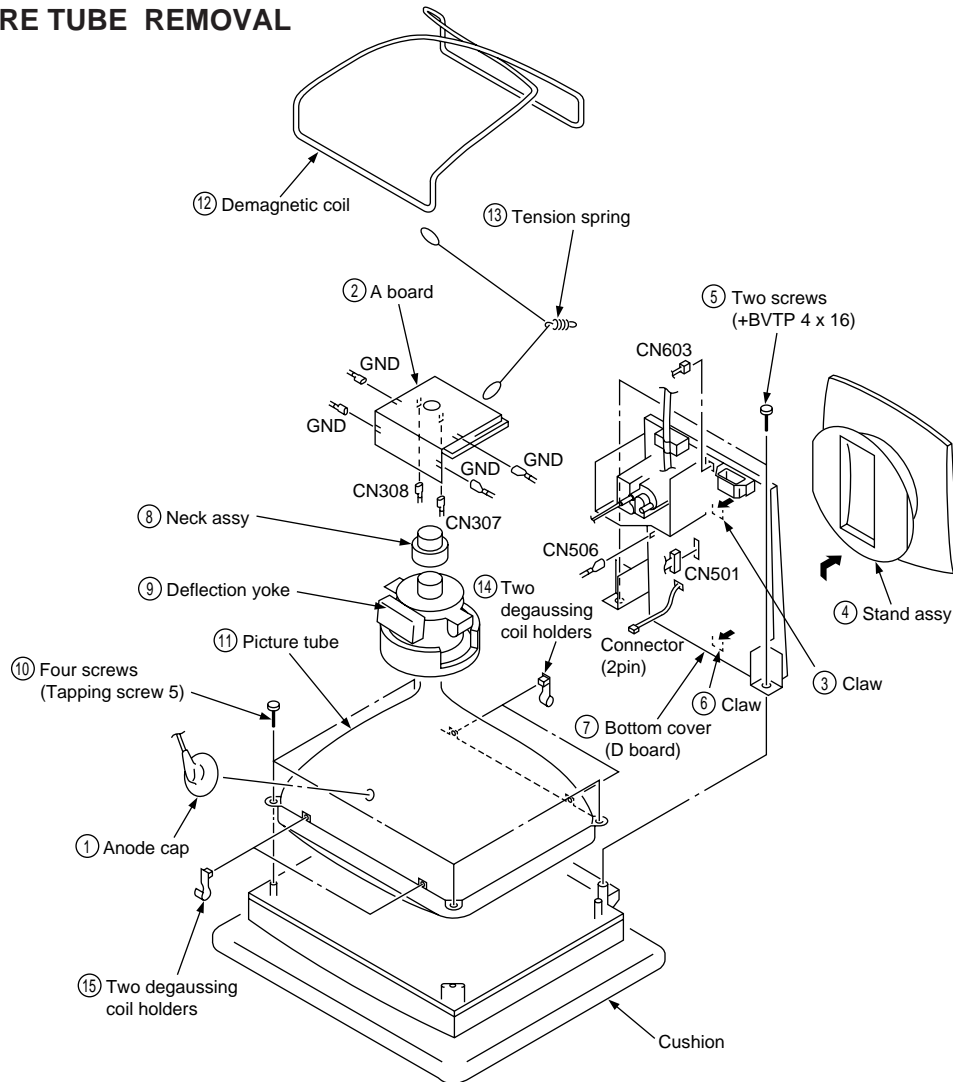

• REMOVAL OF ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.


• REMOVING PROCEDURES

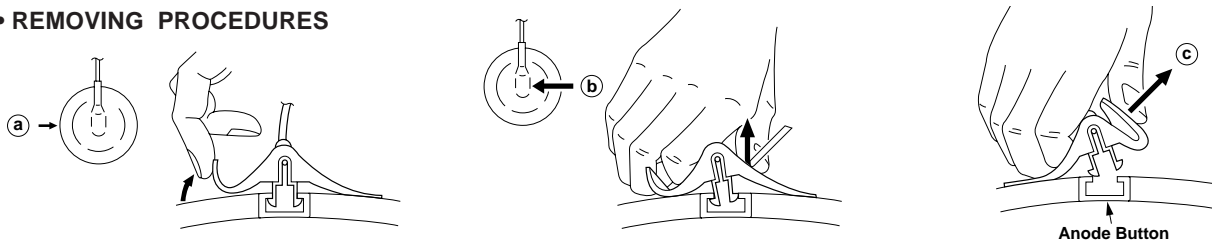


- ① Turn up one side of the rubber cap in the direction indicated by the arrow (a).
- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow (b).
- ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow (c).

• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

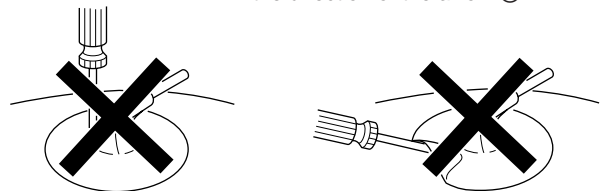

2-5. HARNESS LOCATION

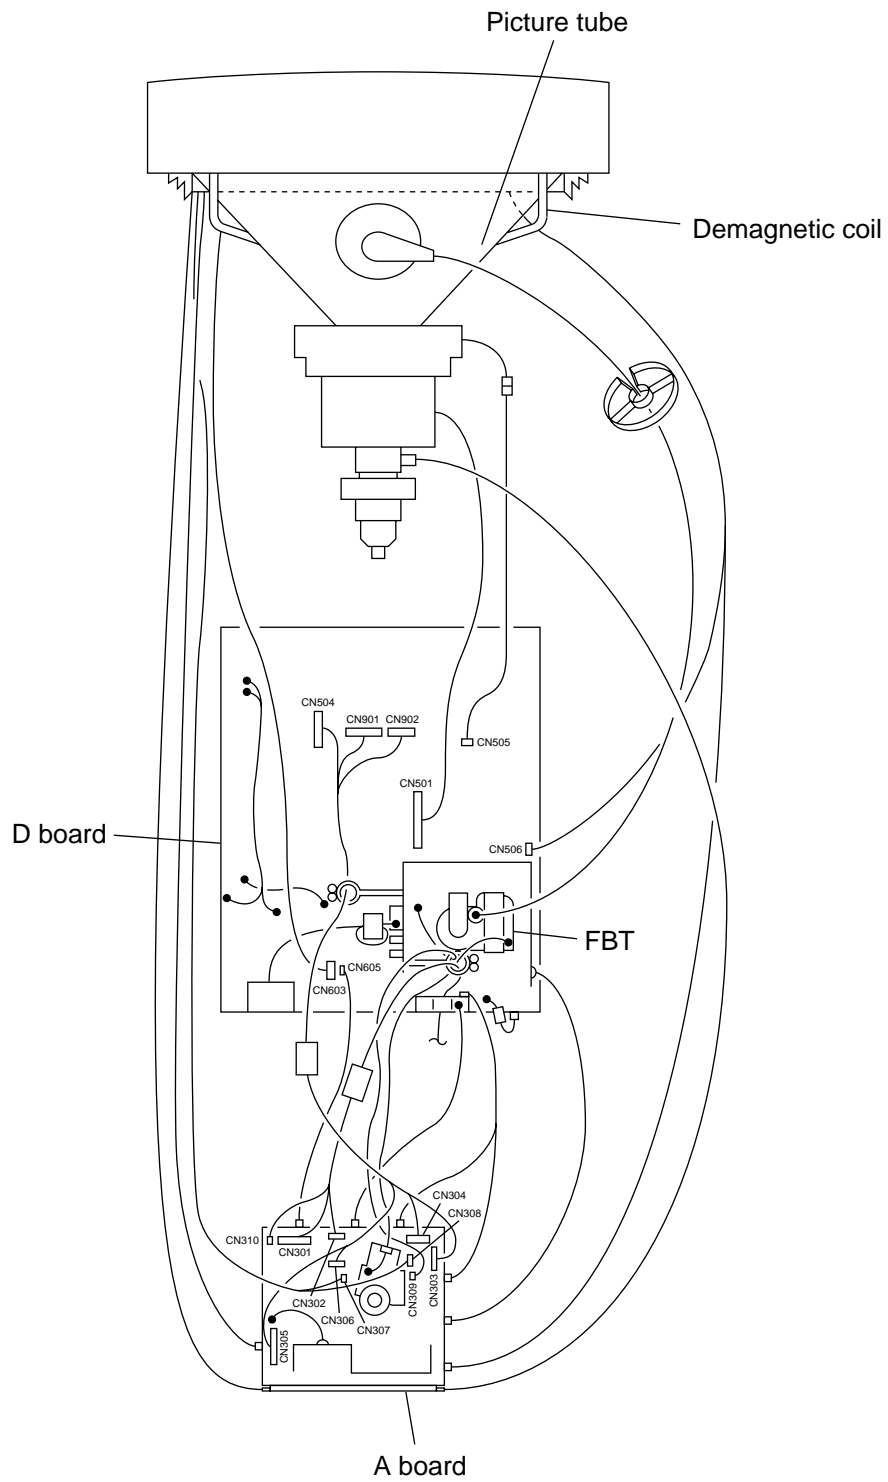

SAFETY RELATED ADJUSTMENT

When replacing or repairing the shown below table, the following operational checks must be performed as a safety precaution against X-rays emissions from the unit.

| | Part Replaced (☒) |
|--------------------------------------|---|
| HV ADJ | RV501 |
| | Part Replaced (☑) |
| HV Regulator Circuit Check | D board IC502, IC503, C501, C535, C553, C597, C598, R592, R593, R596, RV501, T501 (FBT) |
| HV Hold-down Circuit Check | D board IC501, D521, C585, C599, R598, R599, R5C7, T501 (FBT) |
| Beam Current Protector Circuit Check | D board Q533, D592, C590, C591, C598, R5A5, R5C0, R5C3, L502, T501 (FBT) |

* Confirm one minute later turning on the power.

- **HV Protector Circuit Check**

Confirm that the voltage between cathode of D521 on D board and GND is more than 28.5 V DC and Using external DC Power Supply, apply the voltage shown below between cathode of D521 and GND, and confirm that the HV HOLD DOWN circuite works. (TV Rester disappears)

Standard voltage : Less than 34 V DC

Check Condition

- Input voltage : 100 – 120 V AC
- Input signal : White Cross hatch at Max fH
- Beam control : CONT : 255, BRT : 80

- **Beam Current Protector Check**

Connect a variable resistor (250 kΩ or more) and an ammeter in series between FBT pin ① on D board and GND. Decrease gradually the resistance of the variable resistor from maximum to minimum, and confirm that the Beam Current Protector Circuite works (TV Rester disappears). The current must be within the range shown below.

- Standard current : Less than 1.50 mA

Check Condition

- Input voltage : 100 – 120 V AC
- Input signal : White Cross hatch at Max fH
- Beam control : CONT : 255, BRT : 80

- **B+ Voltage Check**


Standard voltage : 152 ± 5.0 V DC

Check Condition

- Input voltage : 100 – 120 V AC
Note : Use NF power supply or make sure that distortion factor is 3% or less.
- Input signal : White Cross hatch at 64.0 kHz
- Beam control : CONT : 255, BRT : 80

SECTION 4 ADJUSTMENTS

Connect the communication cable of the computer to the connector located on the D board on the monitor. Run the service software and then follow the instruction.

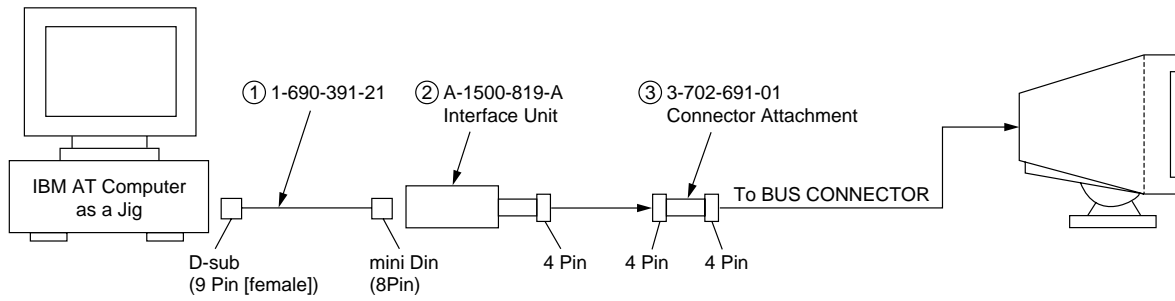

*The parts above (①) ~ (③) are necessary for DAS adjustment.

• Landing Fine Adjustment

< Measurement condition >

Magnetic field : BH=0, BV=45μT

CRT size : 270 × 202

Measurement point : 240 × 180

Temperature : 25°C (after aging for 12 hours)

< Adjustment target >

1) The value shall be within the following specification after 0.5 hours of aging in the product condition, all white and with luminance 100cd/m².

| | | |
|----|----|----|
| -2 | -1 | 1 |
| -1 | 0 | 0 |
| 1 | 0 | -1 |

2) The value shall be within the following specification after 3 hours of aging in product condition, 1/2Σ 1K (not including dark current).

| | | |
|---|---|---|
| 0 | 0 | 0 |
| 0 | 0 | 0 |
| 0 | 0 | 0 |

Tolerance +/- 7.


1. Put the set inside the Helmholtz coil.
2. Input the single green signal.
3. Demagnetize the CRT surface with the hand degausser.
4. Attach the wobbling coil to the designated part of the CRT neck.
5. Attach the sensor of the landing adjustment unit on the CRT surface.
6. Adjust the DY position and purity, and the DY tilt.
7. Fasten DY with screw.

Note: Torque 22 ±2kgcm (2.2 ± 0.2Nm)

• Convergence Adjustment


* Set DY four-pole magnet at mechanical center before adjustment.

* This should be prime mode.

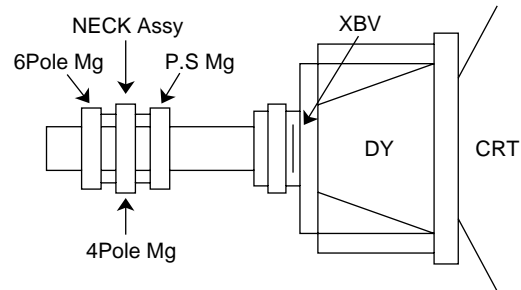

Correcting XBV

In case

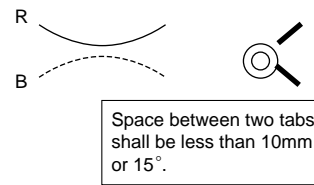

Open 4 pole magnet of DY, Be careful don't not to change H-STAT.

In this case




1) Open 4 pole magnet of DY. Shall not change HSTAT.

2) Re-adjust V-STAT with 4 pole magnet of neck ass'y.

Don't not perform the XBV correction excessively unless otherwise necessary.


1. Receive R.B. cross-hatch.
2. Adjust H.STAT nad V.STAT at four-pole magnet.

<4 Pole Magnet>

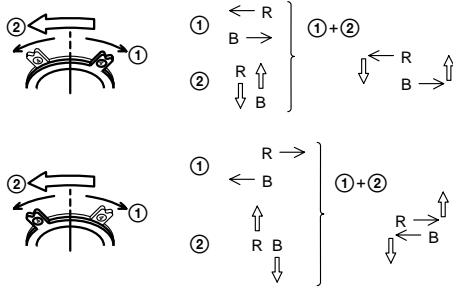


3. Receive White cross-hatch.
4. Adjust HMC and VMC at six-pole magnet.

<6 Pole Magnet>

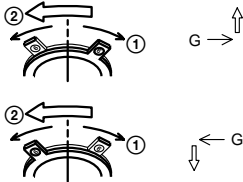


5. Receive R.B. cross-hatch.
6. Adjust XBV with four-pole magnet of DY.
7. Repeat adjustment step from above step 1) to 6) and make R.G.B of bote vertical and horizontal line to be overlay at both x and y axes.
8. Adjust H.TILT by swinging the DY neck right and left.
9. Light tighten the lock on the magnet ass'y Neck ass'y so that the magnet will be move easily.
10. Adjust XCV with XCV core.

XCV movement

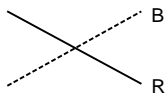


11. Adjust V.TILT with TLV VR.

 TLV movement




12. Adjust Y.CLOTH with YCH VR.

YCH movement

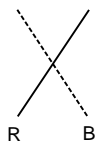


13. Paint lock the four-pole and six-pole magnet of neck ass'y and also four-pole magnet of DY.


<VR Adjustment on DY>

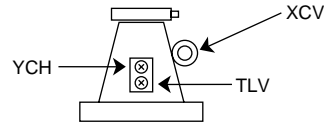

• Vertical and Horizontal Position and Size Specification

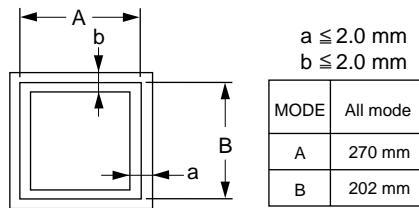

• Convergence Specification

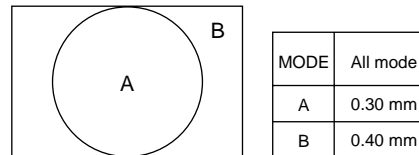


• White Balance Adjustment Specification

- (1) 9300K
 $x = 0.283 \pm 0.01$
 $y = 0.287 \pm 0.01$
- (2) 6500K
 $x = 0.313 \pm 0.01$
 $y = 0.329 \pm 0.01$
- (3) 5000K
 $x = 0.346 \pm 0.01$
 $y = 0.359 \pm 0.01$


• Focus adjustment


Adjustment focus (V) and focus (H) for optimum focus.

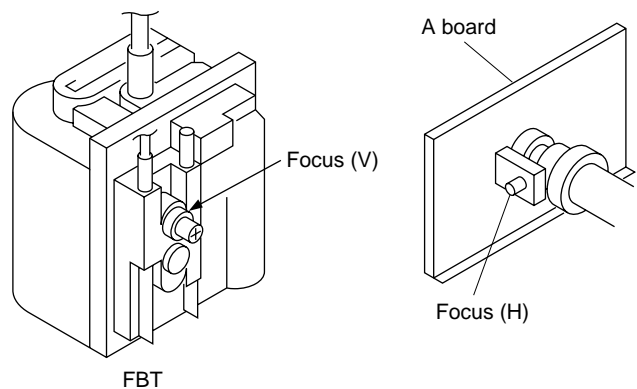

SECTION 5 DIAGRAMS


5-1. BLOCK DIAGRAMS (with FRAME SCHEMATIC DIAGRAM)

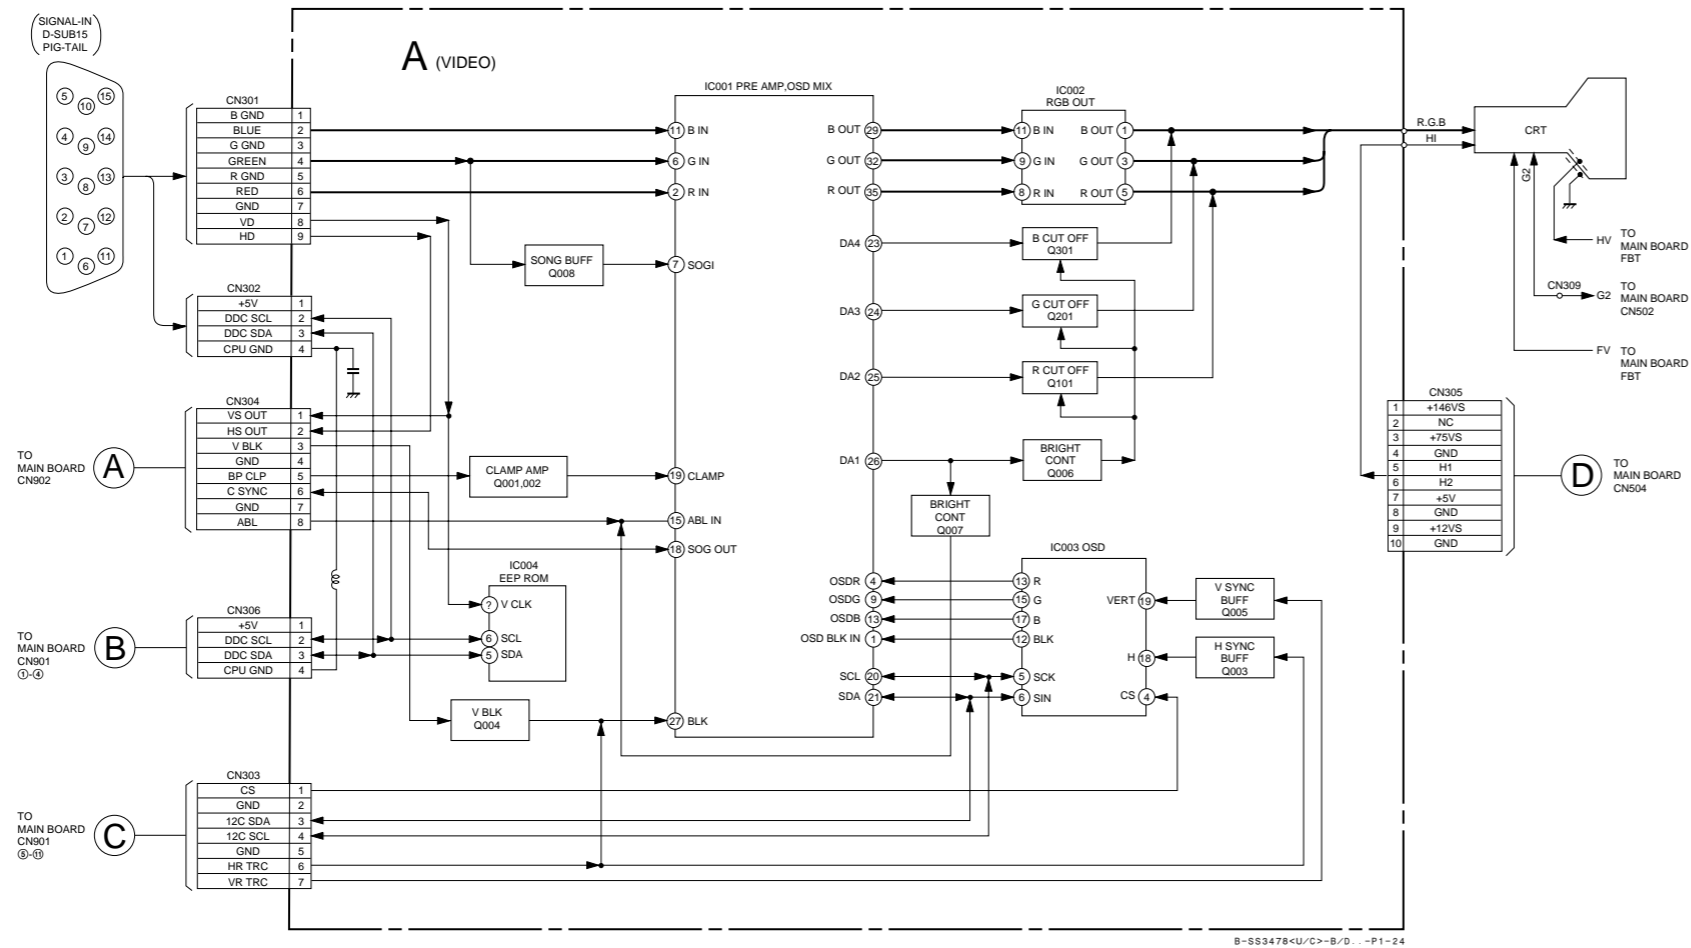

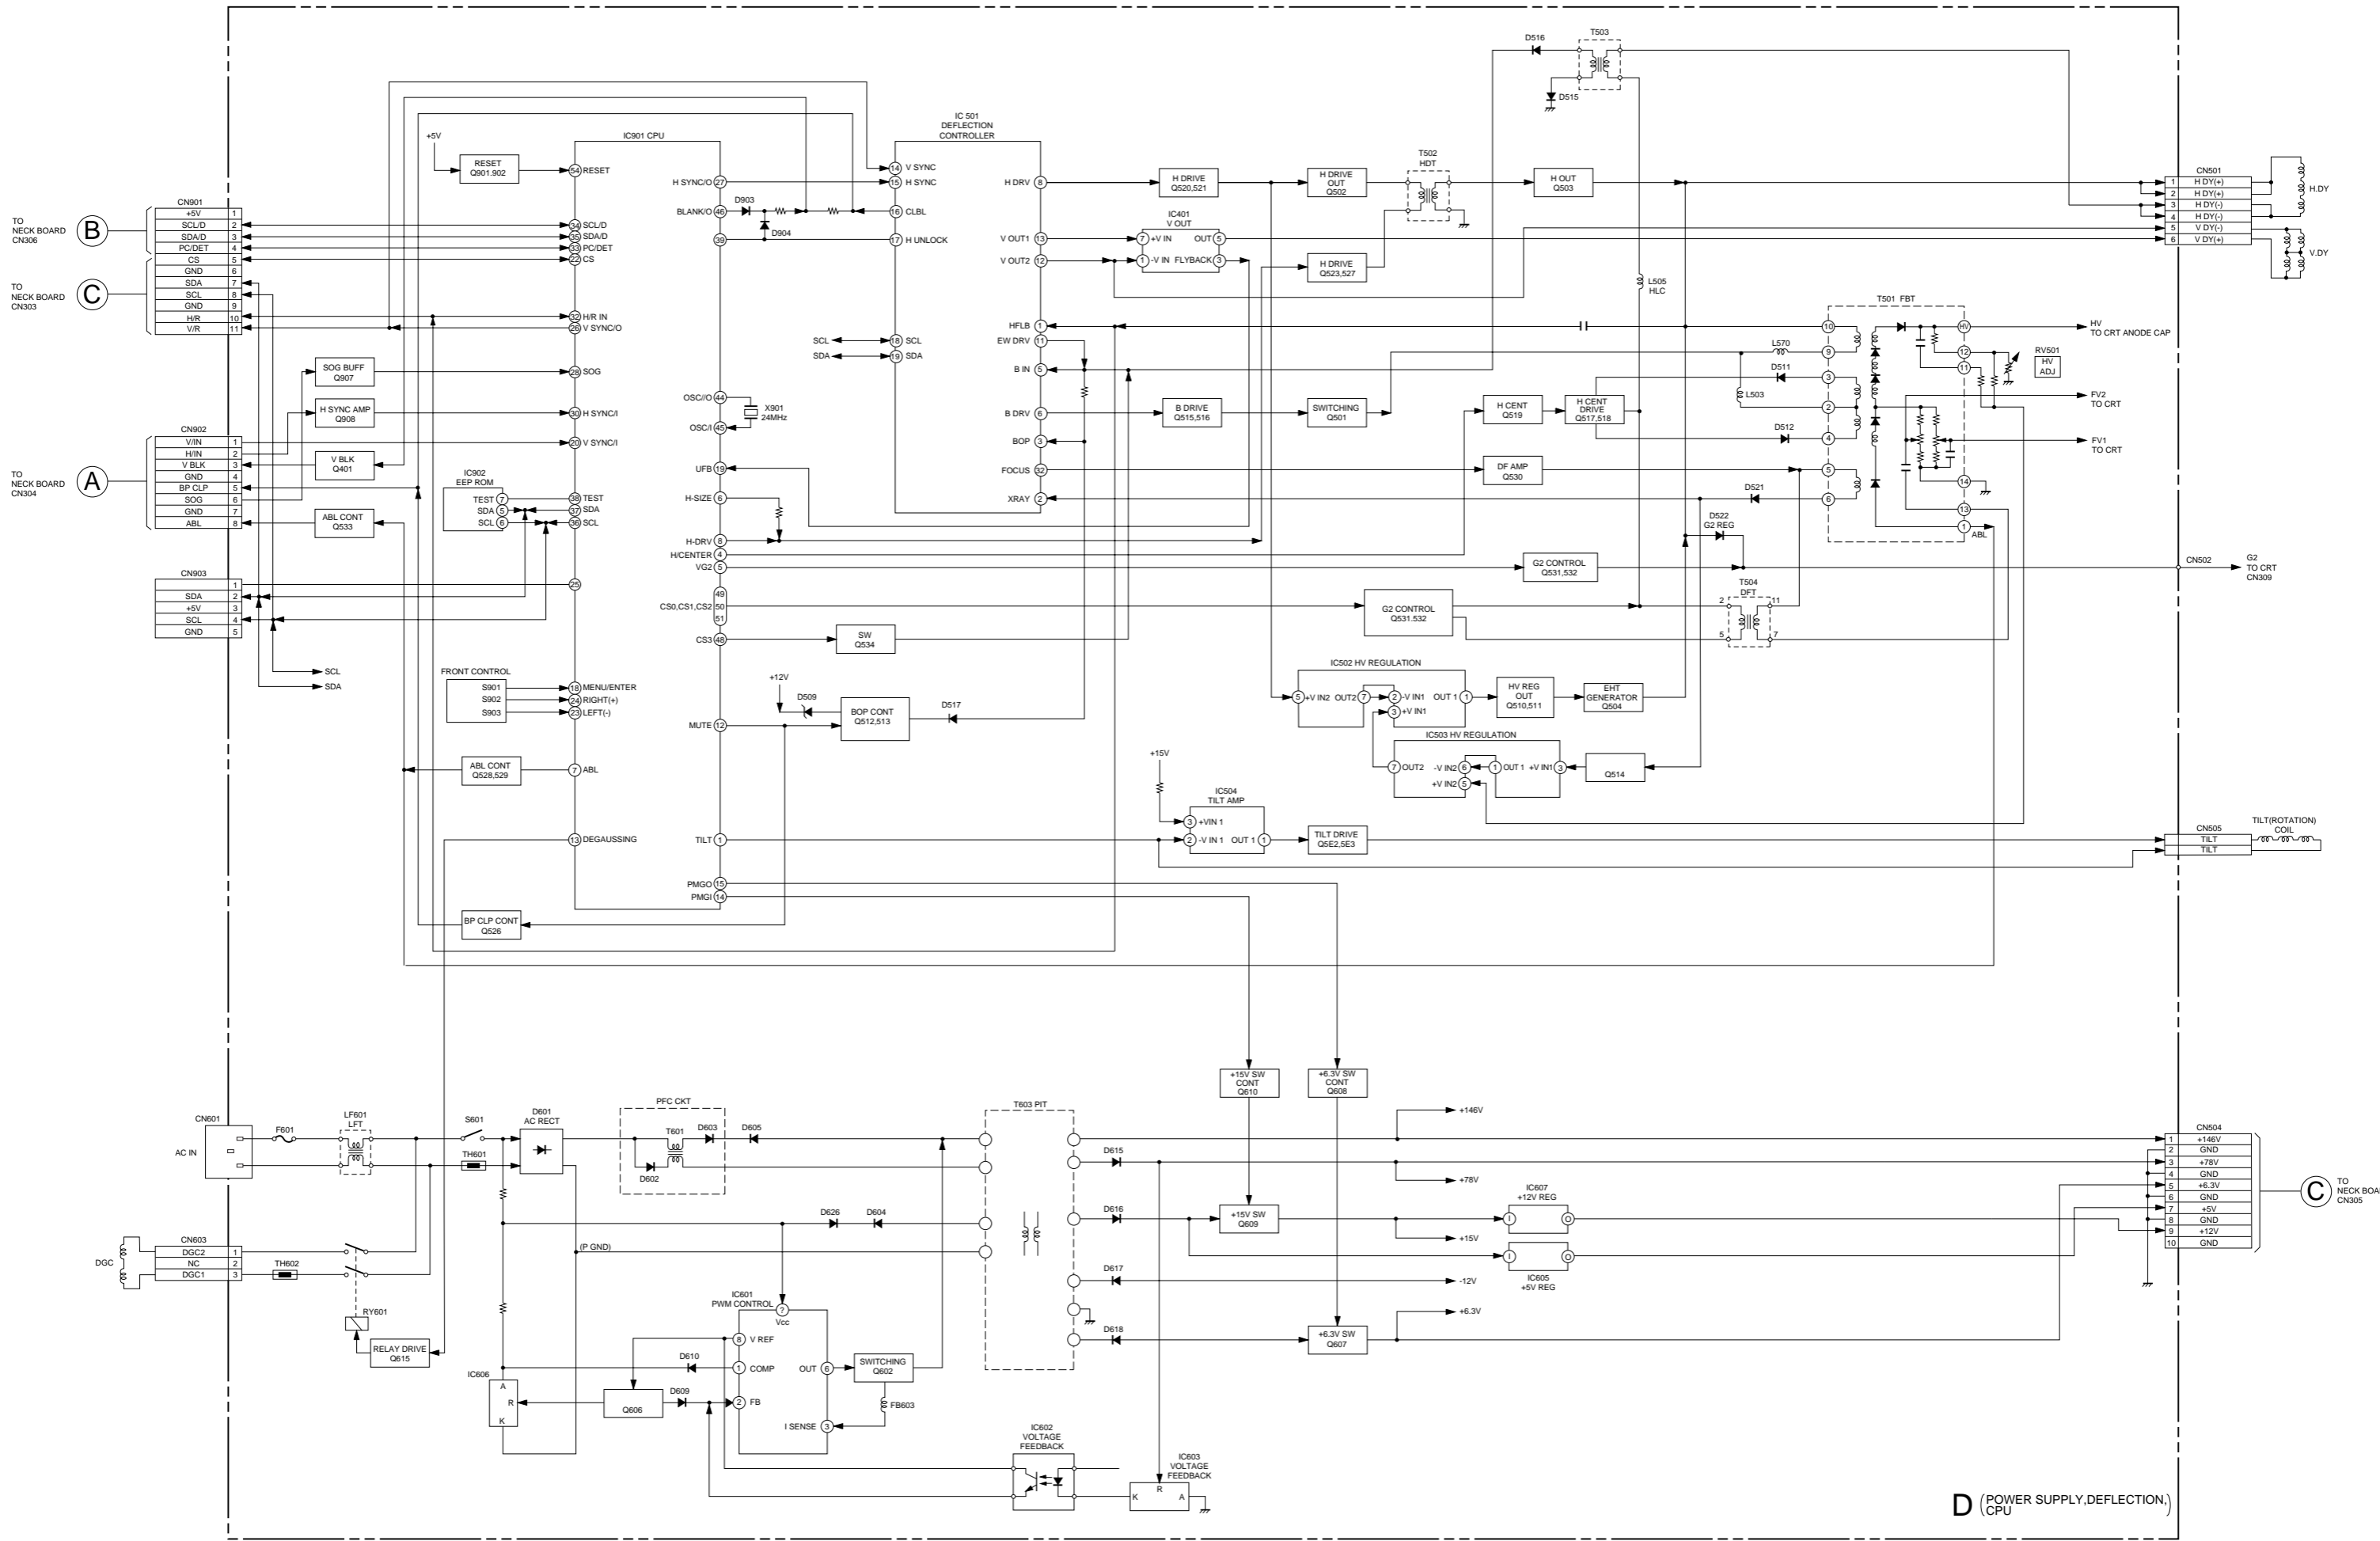

D (POWER SUPPLY, DEFLECTION, CPU)

5-2. CIRCUIT BOARDS LOCATION

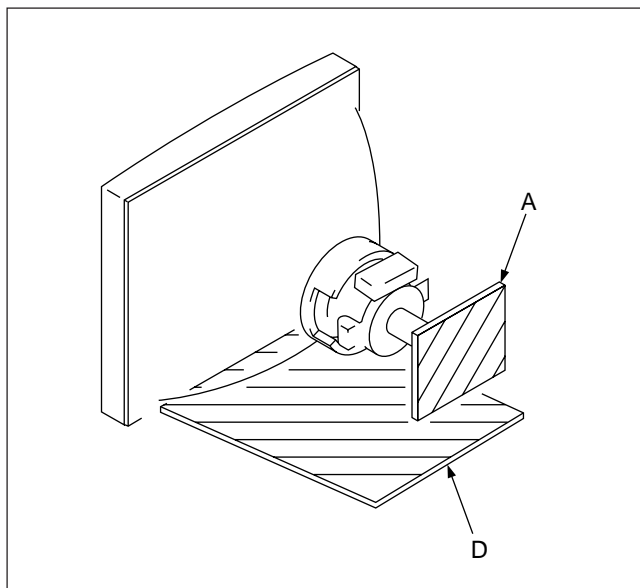
 



 
 


5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in μF unless otherwise noted. (pF : $\mu\mu\text{F}$)
Capacitors without voltage indication are all 50 V.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

 
Pitch: 5 mm
Rating electrical power 1/4 W (CHIP : 1/10 W)


- All resistors are in ohms.
-  : nonflammable resistor.
-  : fusible resistor.
- Δ : internal component.
-  : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- \perp : earth-ground.
- /// : earth-chassis.
- All voltages are in V.
- Readings are taken with a 10 M Ω digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- * : Can not be measured.
- Circled numbers are waveform references.
-  : B + bus.
-  : B - bus.
- The components identified by  in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- When replacing components identified by  , make the necessary adjustments indicated. (See page 3-1)
- When replacing the part in below table, be sure to perform the related adjustment.


Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

- Divided circuit diagram

One sheet of D board circuit diagram is divided into three sheets, each having the code D-a to D-c . For example, the destination (ab1) on the D-a sheet is connected to (ab1) on the D-b sheet.




| | Part replaced () |
|--------|---|
| HV ADJ | RV501 |

| | Part replaced () | |
|--|---|--|
| HV Regulator Circuit Check | D Board | IC502, IC503, C501 C535, C553, C597 C598, R592, R593 R596, RV501, T501 (FBT) |
| HV Hold-down Circuit Check | D Board | IC501, D521, C585 C599, R598, R599 R5C7, T501 (FBT) |
| Beam Current Protector Circuit Check | D Board | Q533, D592, C590 C591, C598, R5A5 R5C0, R5C3, L502 T501 (FBT) |

Note: Les composants identifiés per un tramé et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Divided circuit diagram


One sheet of D board circuit diagram is divided into three sheets, each having the code D-a to D-c . For example, the destination (ab1) on the D-a sheet is connected to (ab1) on the D-b sheet.

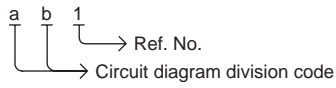


- D BOARD WAVEFORMS

| | | |
|------------------------|------------------------|---------------------------|
| ① 3.0 Vp-p (H) | ② 3.0 Vp-p (H) | ③ 3.4 Vp-p (H) |
| ④ 4.8 Vp-p (V) | ⑤ 5.0 Vp-p (H) | ⑥ 1.2 Vp-p (24MHz) |
| ⑦ 5.0 Vp-p (H) | ⑧ 5.0 Vp-p (V) | ⑨ 2.8 Vp-p (V) |
| ⑩ 2.0 Vp-p (V) | ⑪ 12.0 Vp-p (H) | ⑫ 50.0 Vp-p (V) |
| ⑬ 1.2 Vp-p (V) | ⑭ 1k Vp-p (H) | ⑮ 60.0 Vp-p (H) |
| ⑯ 12.0 Vp-p (H) | ⑰ 100 Vp-p (H) | |

(1) Schematic Diagram of D-a Board

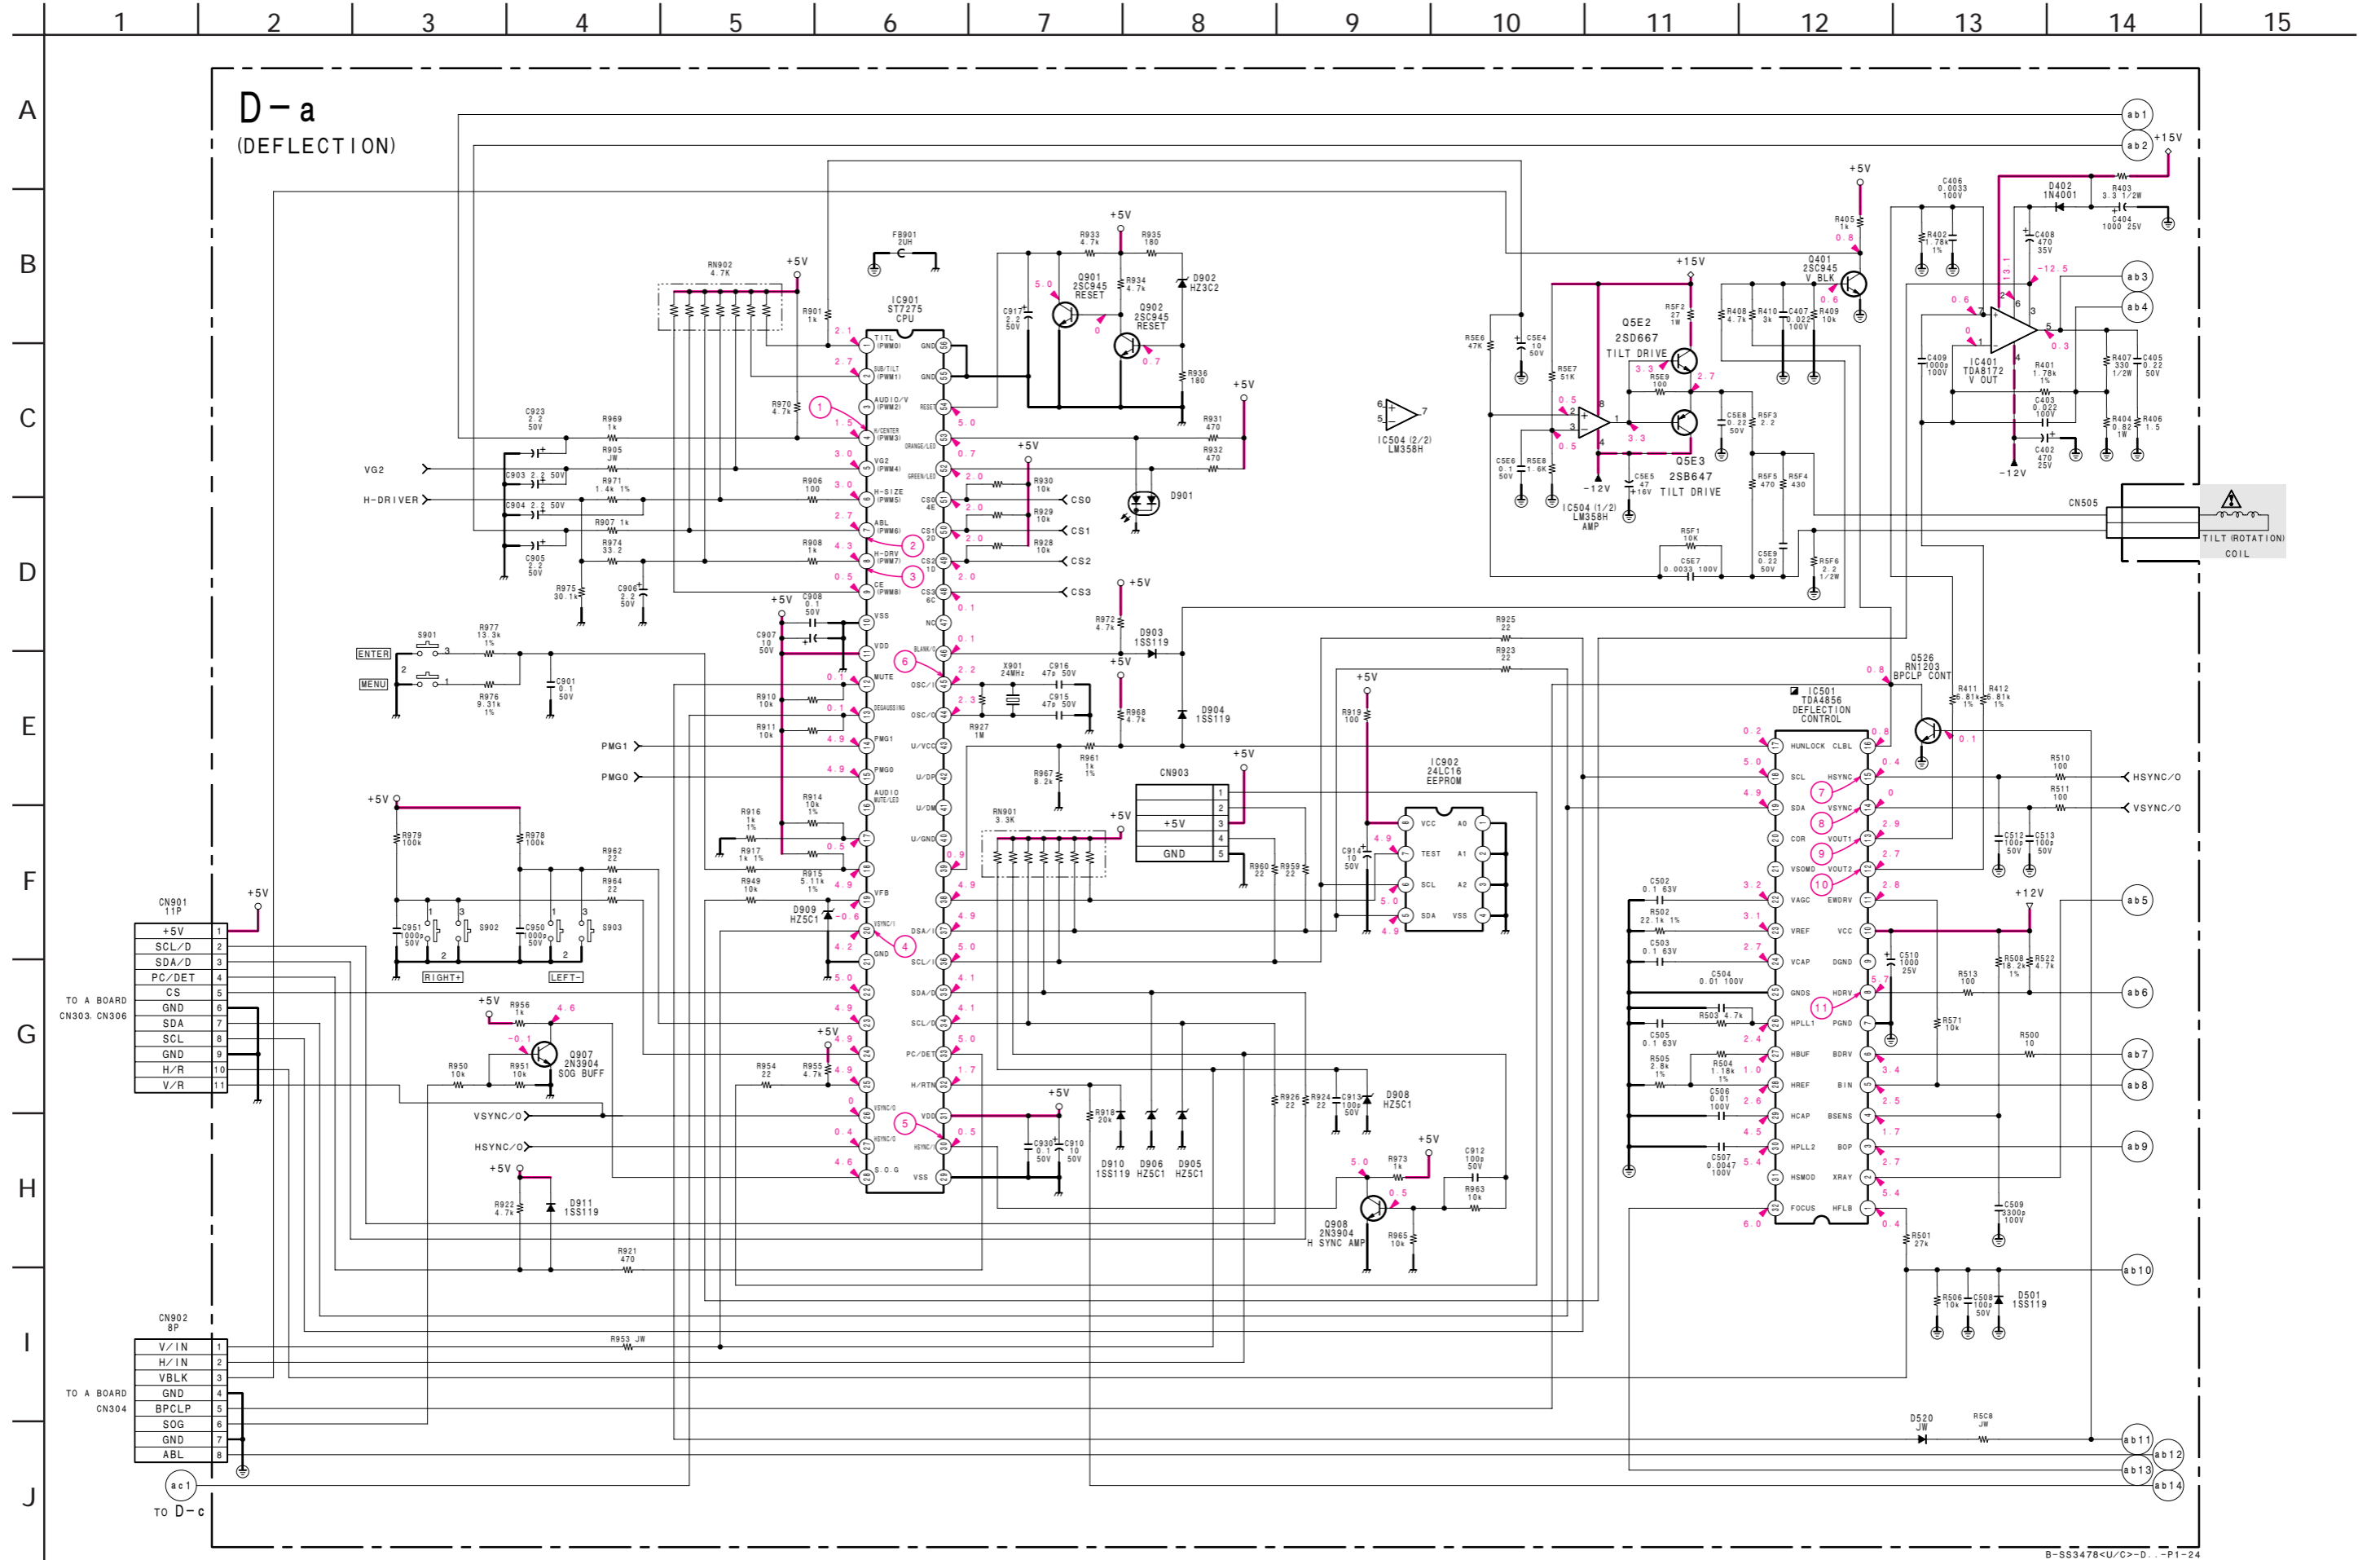

(2) Schematic Diagram of D-b Board

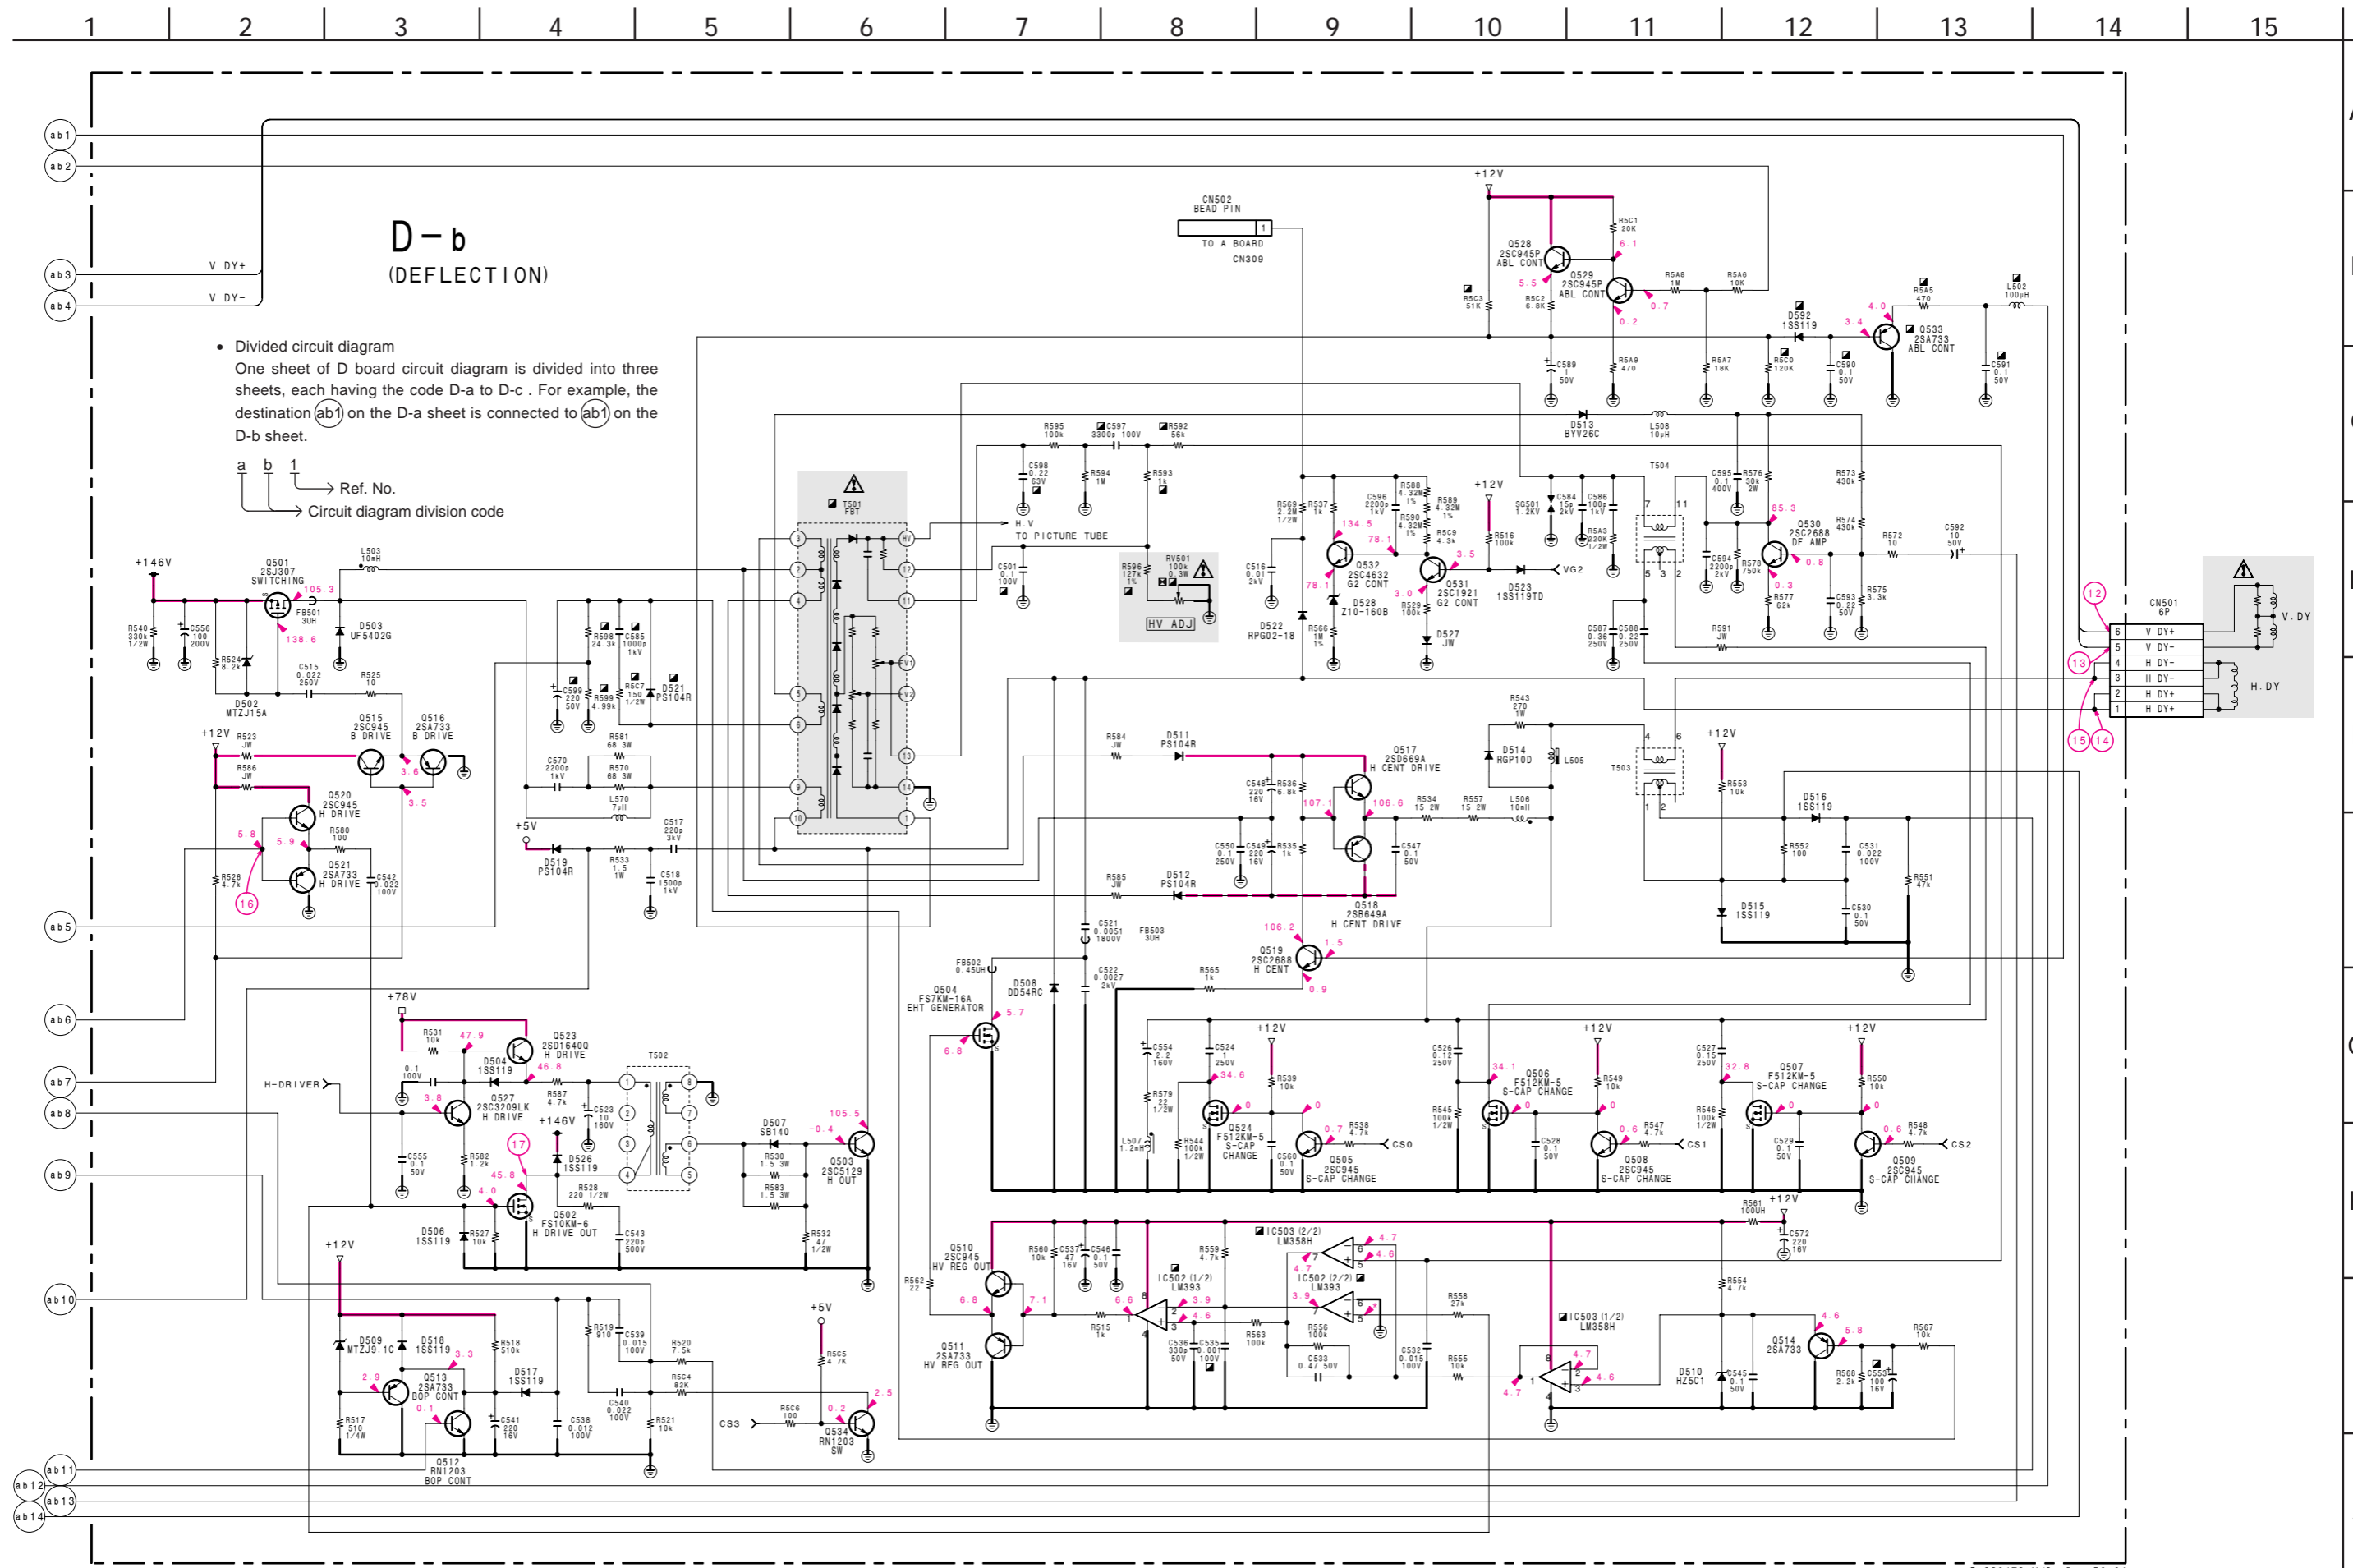


• Divided circuit diagram
 One sheet of D board circuit diagram is divided into three sheets, each having the code D-a to D-c . For example, the destination (ab1) on the D-a sheet is connected to (ab1) on the D-b sheet.

a b 1 → Ref. No.
 → Circuit diagram division code


D-b
 (DEFLECTION)

• **D BOARD SEMICONDUCTOR LOCATION**

| IC | | DIODE | |
|------------|-----|-------------------|-----|
| IC401 | E-3 | D402 | E-4 |
| IC501 | D-6 | D501 | D-5 |
| IC502 | D-1 | D502 | C-2 |
| IC503 | D-1 | D503 | C-2 |
| IC504 | D-5 | D504 | C-4 |
| IC601 | A-4 | D506 | D-3 |
| IC602 | A-4 | D507 | D-3 |
| IC603 | A-4 | D508 | C-3 |
| IC605 | A-5 | D509 | D-5 |
| IC606 | A-4 | D510 | D-1 |
| IC607 | A-5 | D511 | C-1 |
| IC901 | B-6 | D512 | C-1 |
| IC902 | C-6 | D513 | D-1 |
| | | D514 | D-4 |
| | | D515 | C-3 |
| | | D516 | C-3 |
| | | D517 | D-6 |
| | | D518 | D-5 |
| | | D519 | D-5 |
| | | D520 | D-6 |
| | | D521 | D-1 |
| | | D522 | D-2 |
| | | D523 | C-4 |
| | | D524 | E-1 |
| | | D601 | A-2 |
| | | D604 | A-3 |
| | | D605 | A-3 |
| | | D606 | A-3 |
| | | D607 | A-2 |
| | | D608 | A-4 |
| | | D609 | A-4 |
| | | D610 | A-3 |
| | | D611 | B-1 |
| | | D612 | A-4 |
| | | D613 | B-3 |
| | | D615 | B-3 |
| | | D616 | B-4 |
| | | D617 | B-4 |
| | | D618 | B-4 |
| | | D626 | A-3 |
| | | D901 | A-6 |
| | | D902 | C-6 |
| | | D903 | C-6 |
| | | D904 | E-6 |
| | | D905 | C-5 |
| | | D906 | C-5 |
| | | D907 | C-5 |
| | | D908 | C-5 |
| | | D909 | B-5 |
| | | D910 | C-5 |
| TRANSISTOR | | VARIABLE RESISTOR | |
| Q401 | E-4 | RV501 | E-1 |
| Q501 | C-2 | CRYSTAL | |
| Q502 | D-3 | X901 | C-6 |
| Q503 | D-3 | | |
| Q504 | C-2 | | |
| Q505 | C-4 | | |
| Q506 | D-4 | | |
| Q507 | D-4 | | |
| Q508 | D-4 | | |
| Q509 | D-4 | | |
| Q510 | D-1 | | |
| Q511 | D-1 | | |
| Q512 | D-6 | | |
| Q513 | D-5 | | |
| Q514 | E-1 | | |
| Q515 | D-5 | | |
| Q516 | D-5 | | |
| Q517 | B-1 | | |
| Q518 | C-1 | | |
| Q519 | C-1 | | |
| Q520 | D-5 | | |
| Q521 | D-5 | | |
| Q523 | C-4 | | |
| Q524 | C-4 | | |
| Q526 | E-6 | | |
| Q527 | C-4 | | |
| Q528 | C-1 | | |
| Q529 | C-3 | | |
| Q530 | D-1 | | |
| Q531 | C-2 | | |
| Q532 | C-2 | | |
| Q533 | E-1 | | |
| Q534 | D-6 | | |
| Q5E2 | D-5 | | |
| Q5E3 | D-5 | | |
| Q601 | A-4 | | |
| Q602 | A-3 | | |
| Q607 | B-4 | | |
| Q608 | A-4 | | |
| Q609 | B-5 | | |
| Q610 | B-5 | | |
| Q615 | B-1 | | |
| Q901 | C-6 | | |
| Q902 | C-6 | | |
| Q907 | C-5 | | |
| Q908 | C-5 | | |

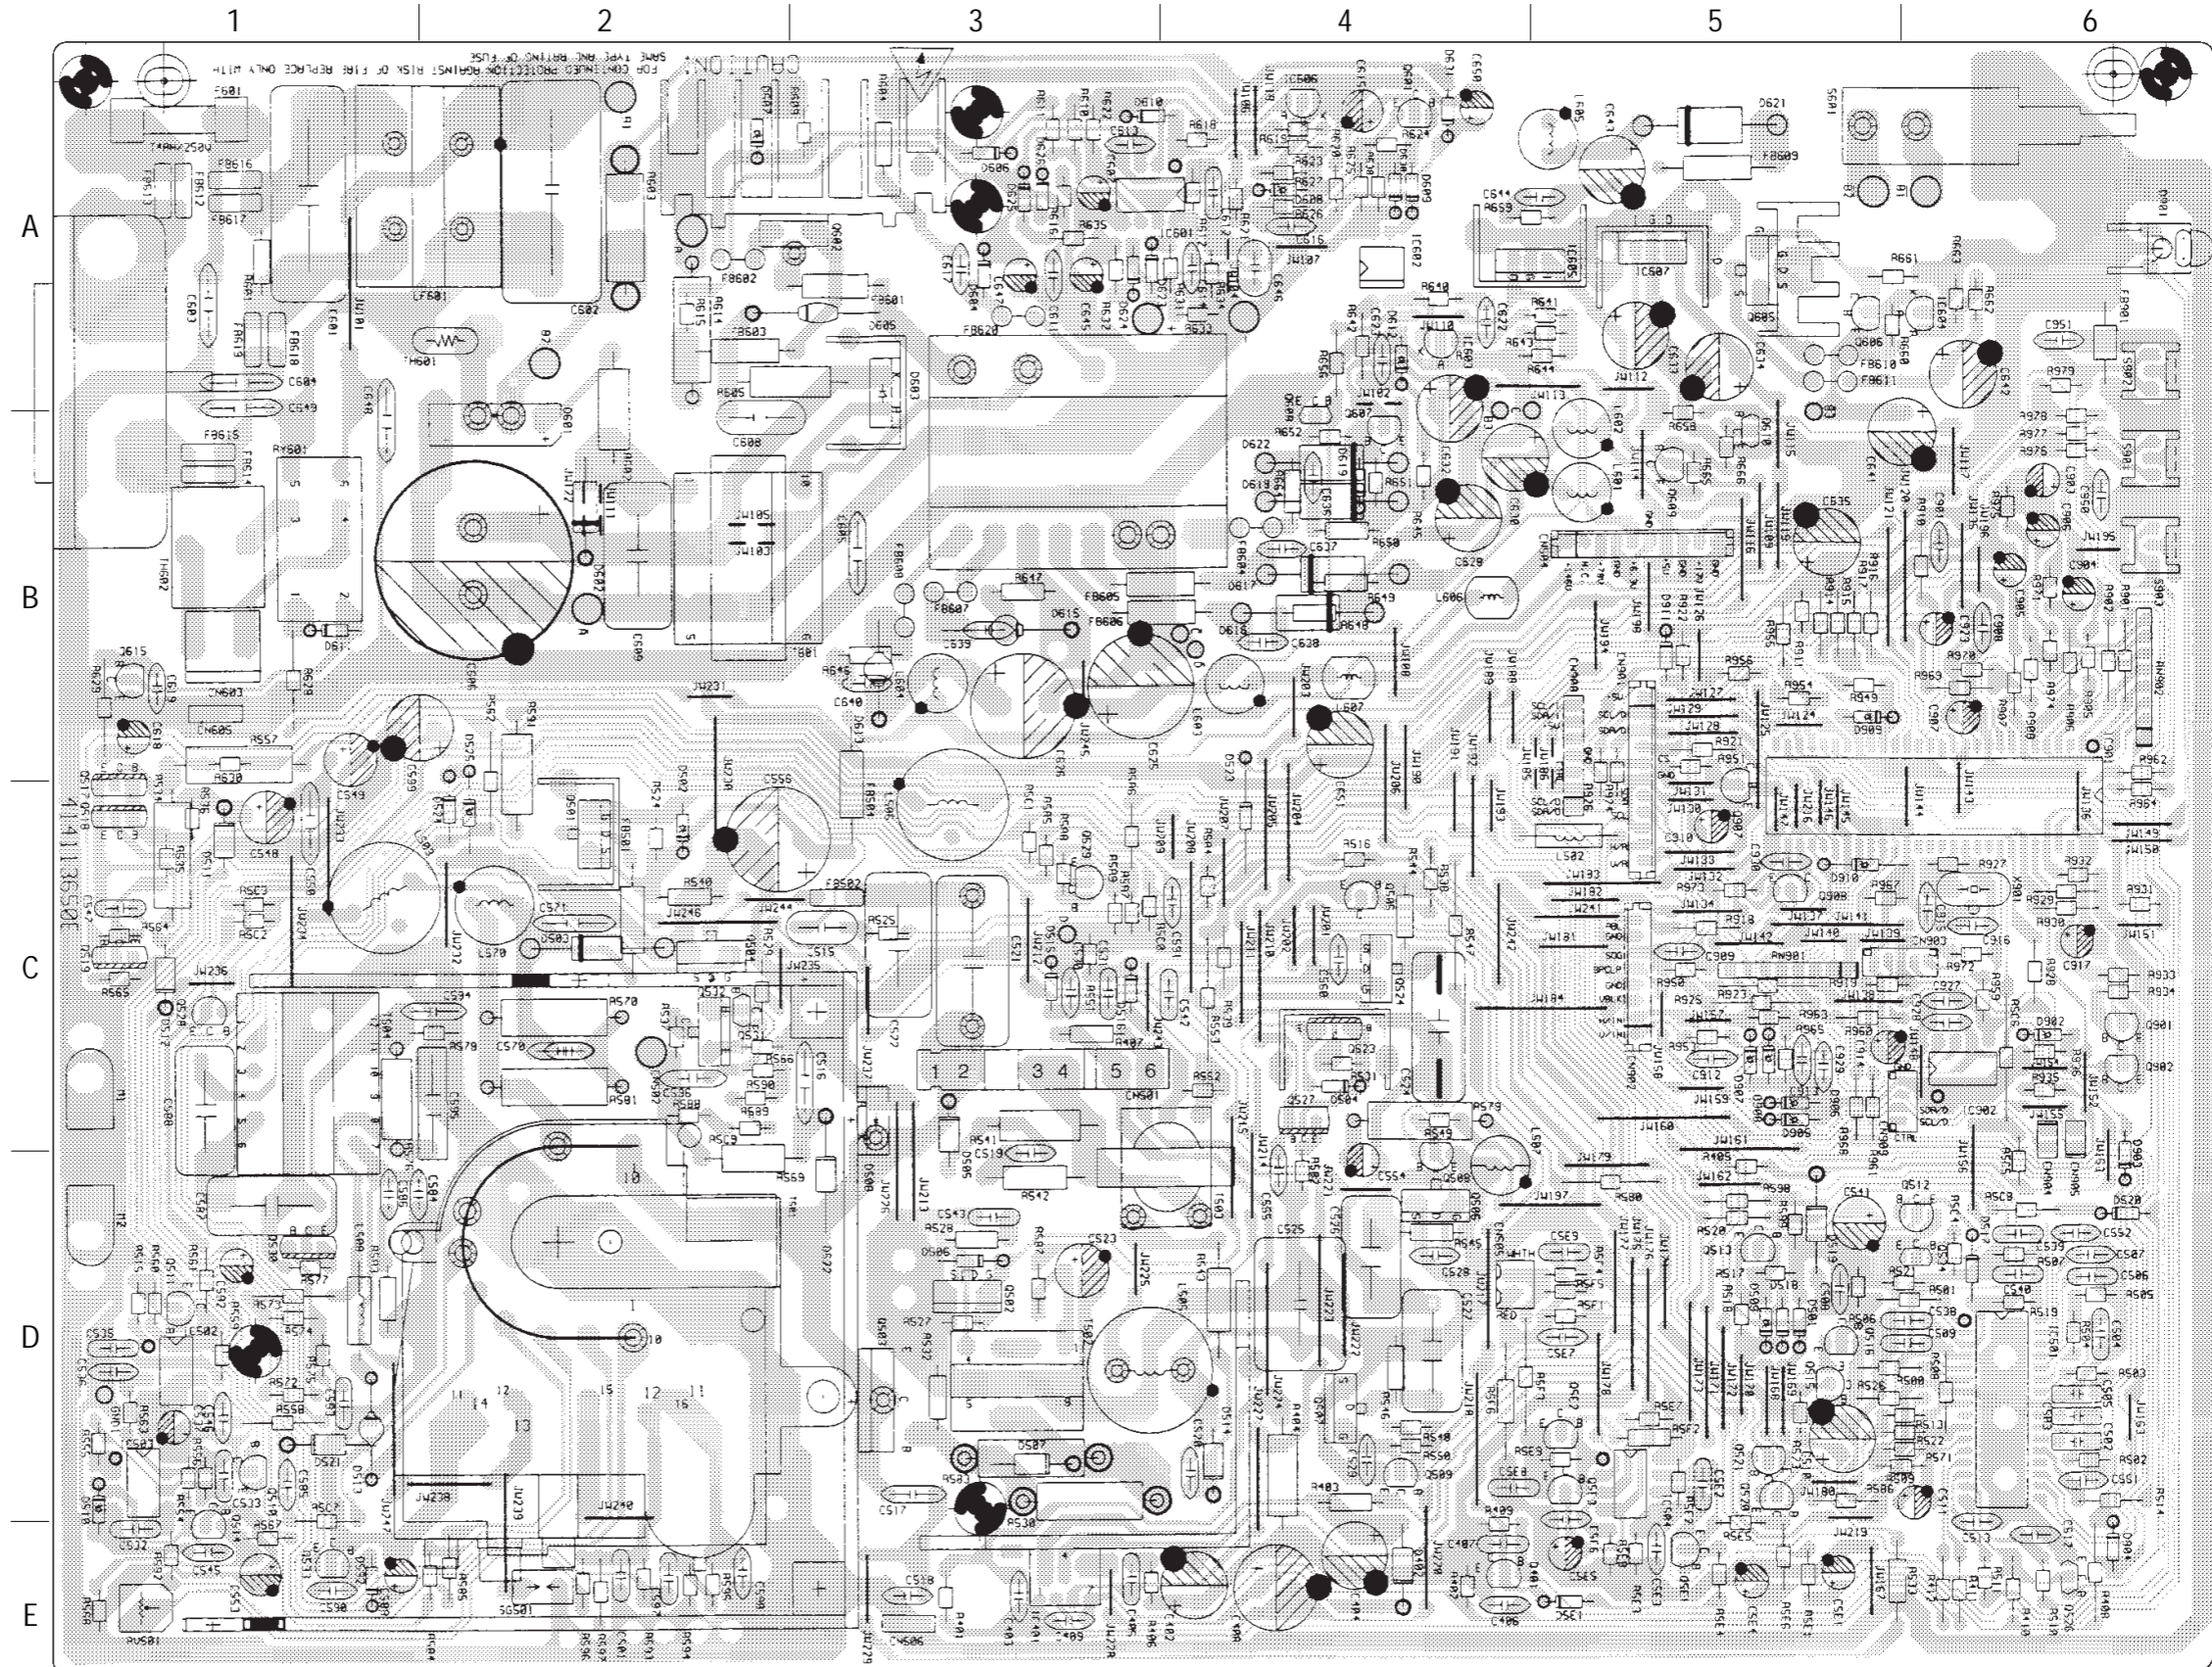


(3) Schematic Diagram of D-c Board

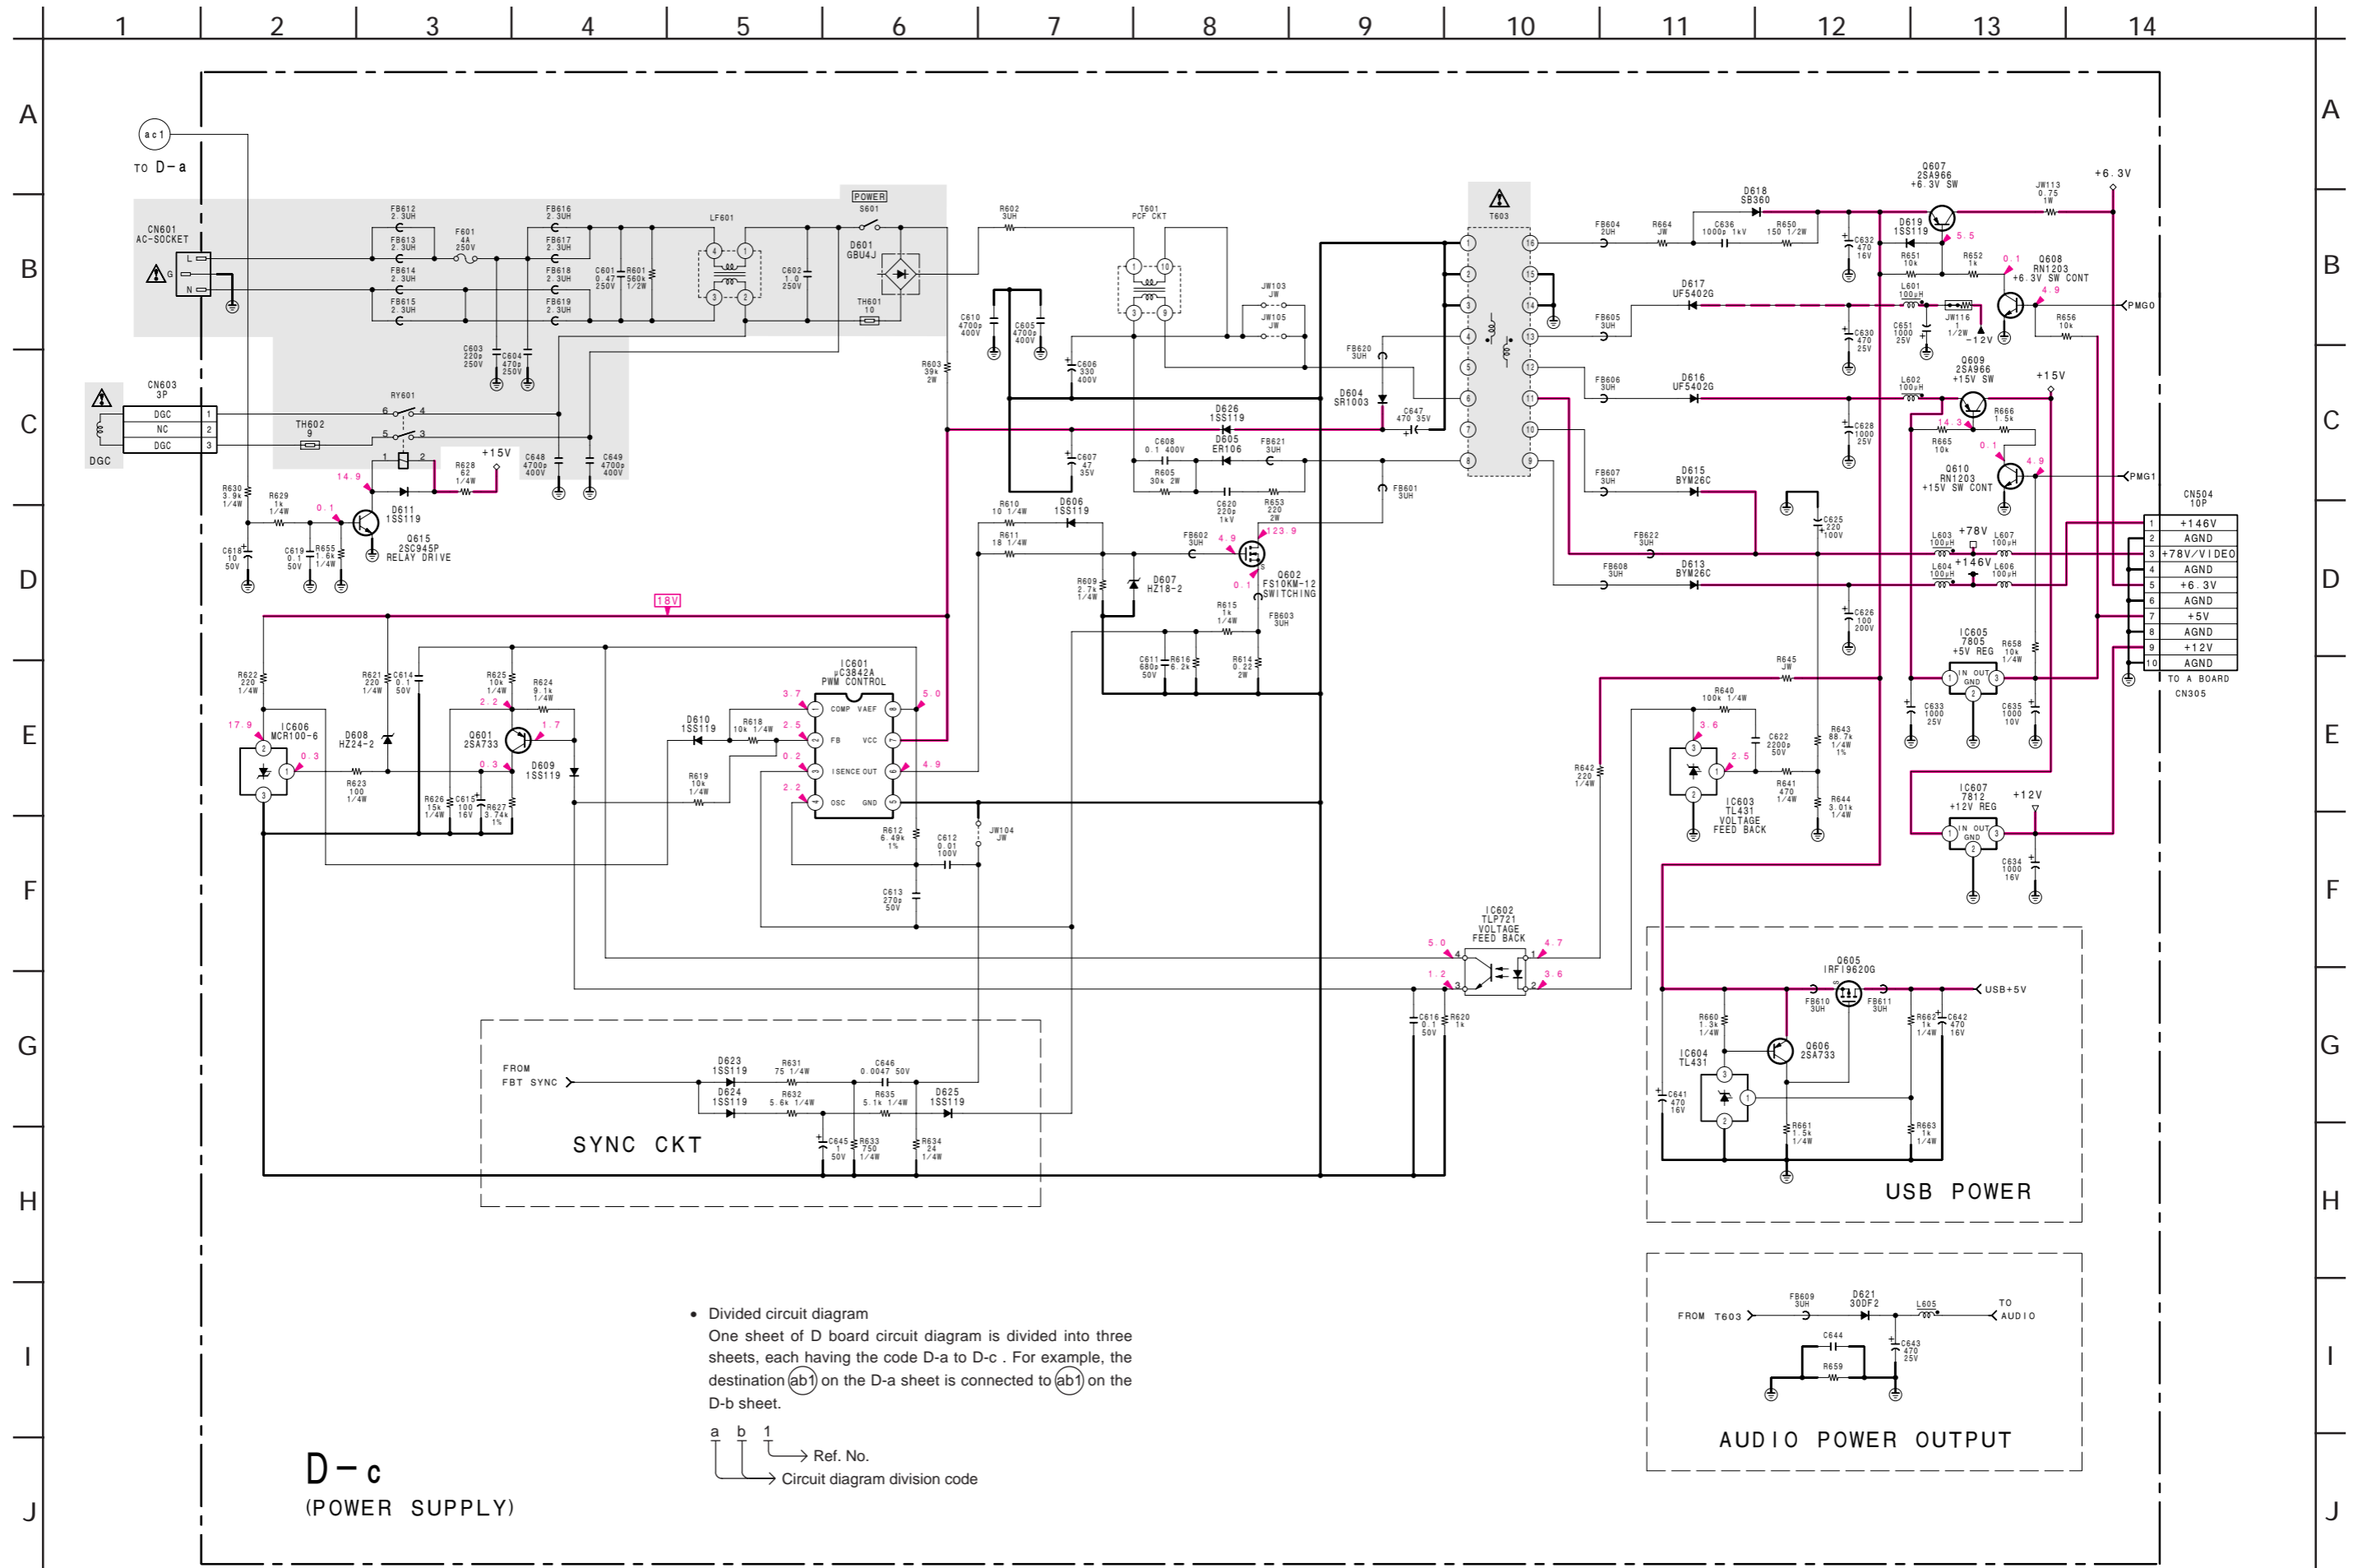


D-c
(POWER SUPPLY)

 - Divided circuit diagram
One sheet of D board circuit diagram is divided into three sheets, each having the code D-a to D-c . For example, the destination (ab1) on the D-a sheet is connected to (ab1) on the D-b sheet.



— A BOARD (Conductor Side) —

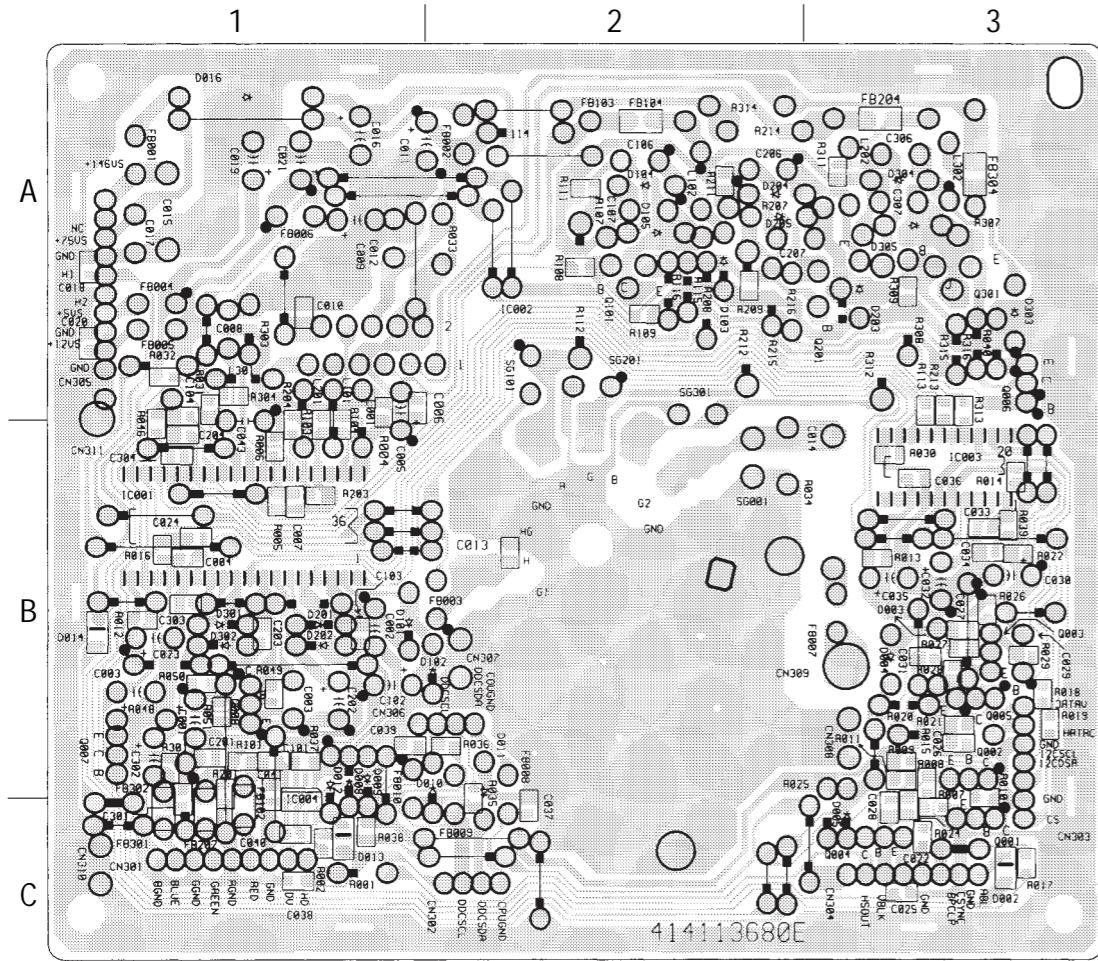


• A BOARD SEMICONDUCTOR LOCATION


| IC | (Conductor Side) | (Component Side) |
|-------|------------------|------------------|
| | IC001 | B-1 |
| IC002 | A-1 | B-3 |
| IC003 | B-3 | B-1 |
| IC004 | B-1 | B-3 |

| TRANSISTOR | (Conductor Side) | (Component Side) |
|------------|------------------|------------------|
| | Q001 | C-3 |
| Q002 | B-3 | B-1 |
| Q003 | B-3 | B-1 |
| Q004 | C-3 | C-1 |
| Q005 | B-3 | B-1 |
| Q006 | A-3 | A-1 |
| Q007 | B-1 | B-3 |
| Q008 | B-1 | B-3 |
| Q101 | A-2 | A-2 |
| Q201 | A-2 | A-2 |
| Q301 | A-3 | A-1 |

| DIODE | (Conductor Side) | (Component Side) |
|-------|------------------|------------------|
| | D002 | C-3 |
| D003 | B-3 | B-1 |
| D004 | B-3 | B-1 |
| D005 | C-3 | C-1 |
| D008 | B-1 | B-2 |
| D009 | B-1 | B-2 |
| D010 | B-1 | B-2 |
| D011 | B-2 | B-2 |
| D012 | B-1 | B-3 |
| D013 | C-1 | B-1 |
| D016 | A-1 | A-3 |
| D101 | B-1 | B-2 |
| D102 | B-1 | B-2 |
| D103 | A-2 | A-1 |
| D104 | A-2 | A-2 |
| D105 | A-2 | A-2 |
| D201 | B-1 | B-3 |
| D202 | B-1 | B-3 |
| D203 | A-3 | A-1 |
| D204 | A-2 | A-1 |
| D205 | A-2 | A-1 |
| D301 | B-1 | B-3 |
| D302 | B-1 | B-3 |
| D303 | A-3 | A-1 |
| D304 | A-3 | A-1 |
| D305 | A-3 | A-1 |

 


— A BOARD (Component Side) —

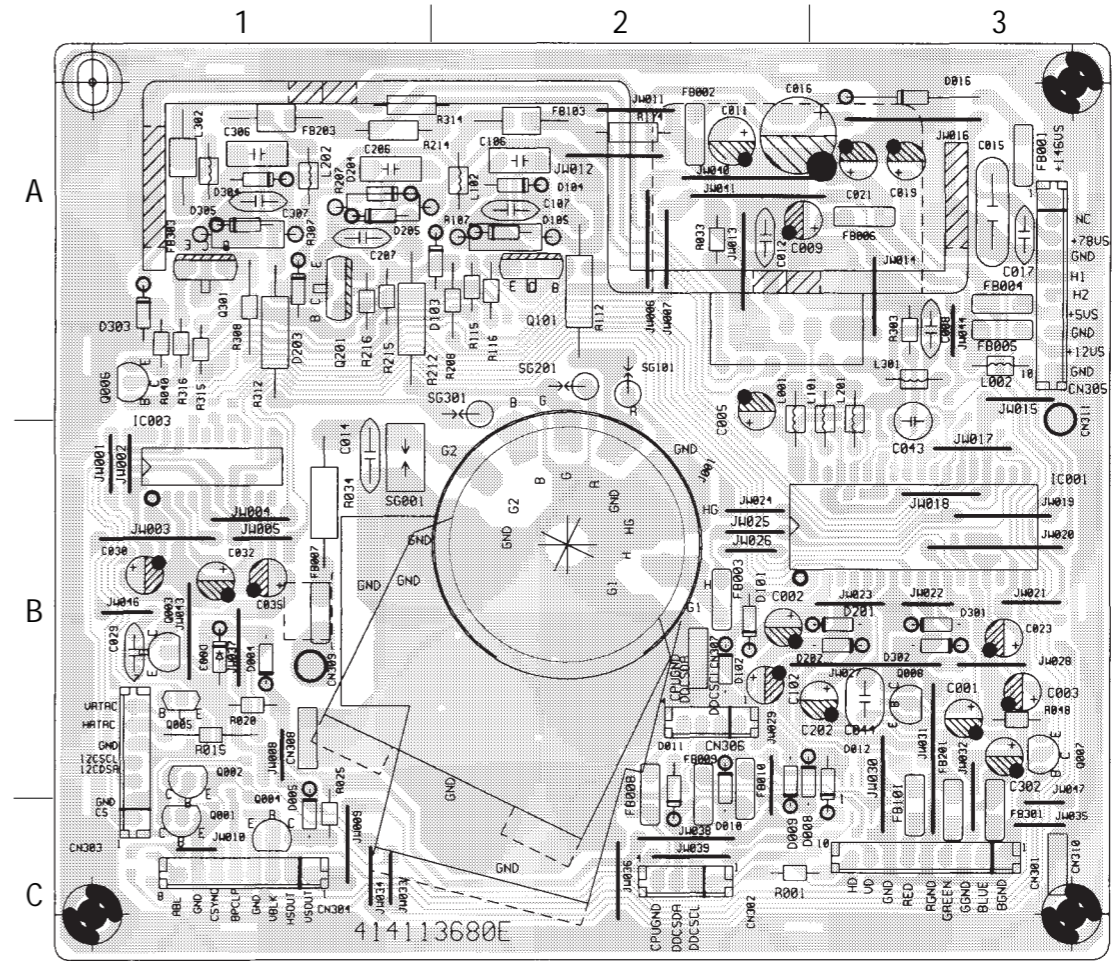


• Pattern of the rear side.

(4) Schematic Diagram of A Board

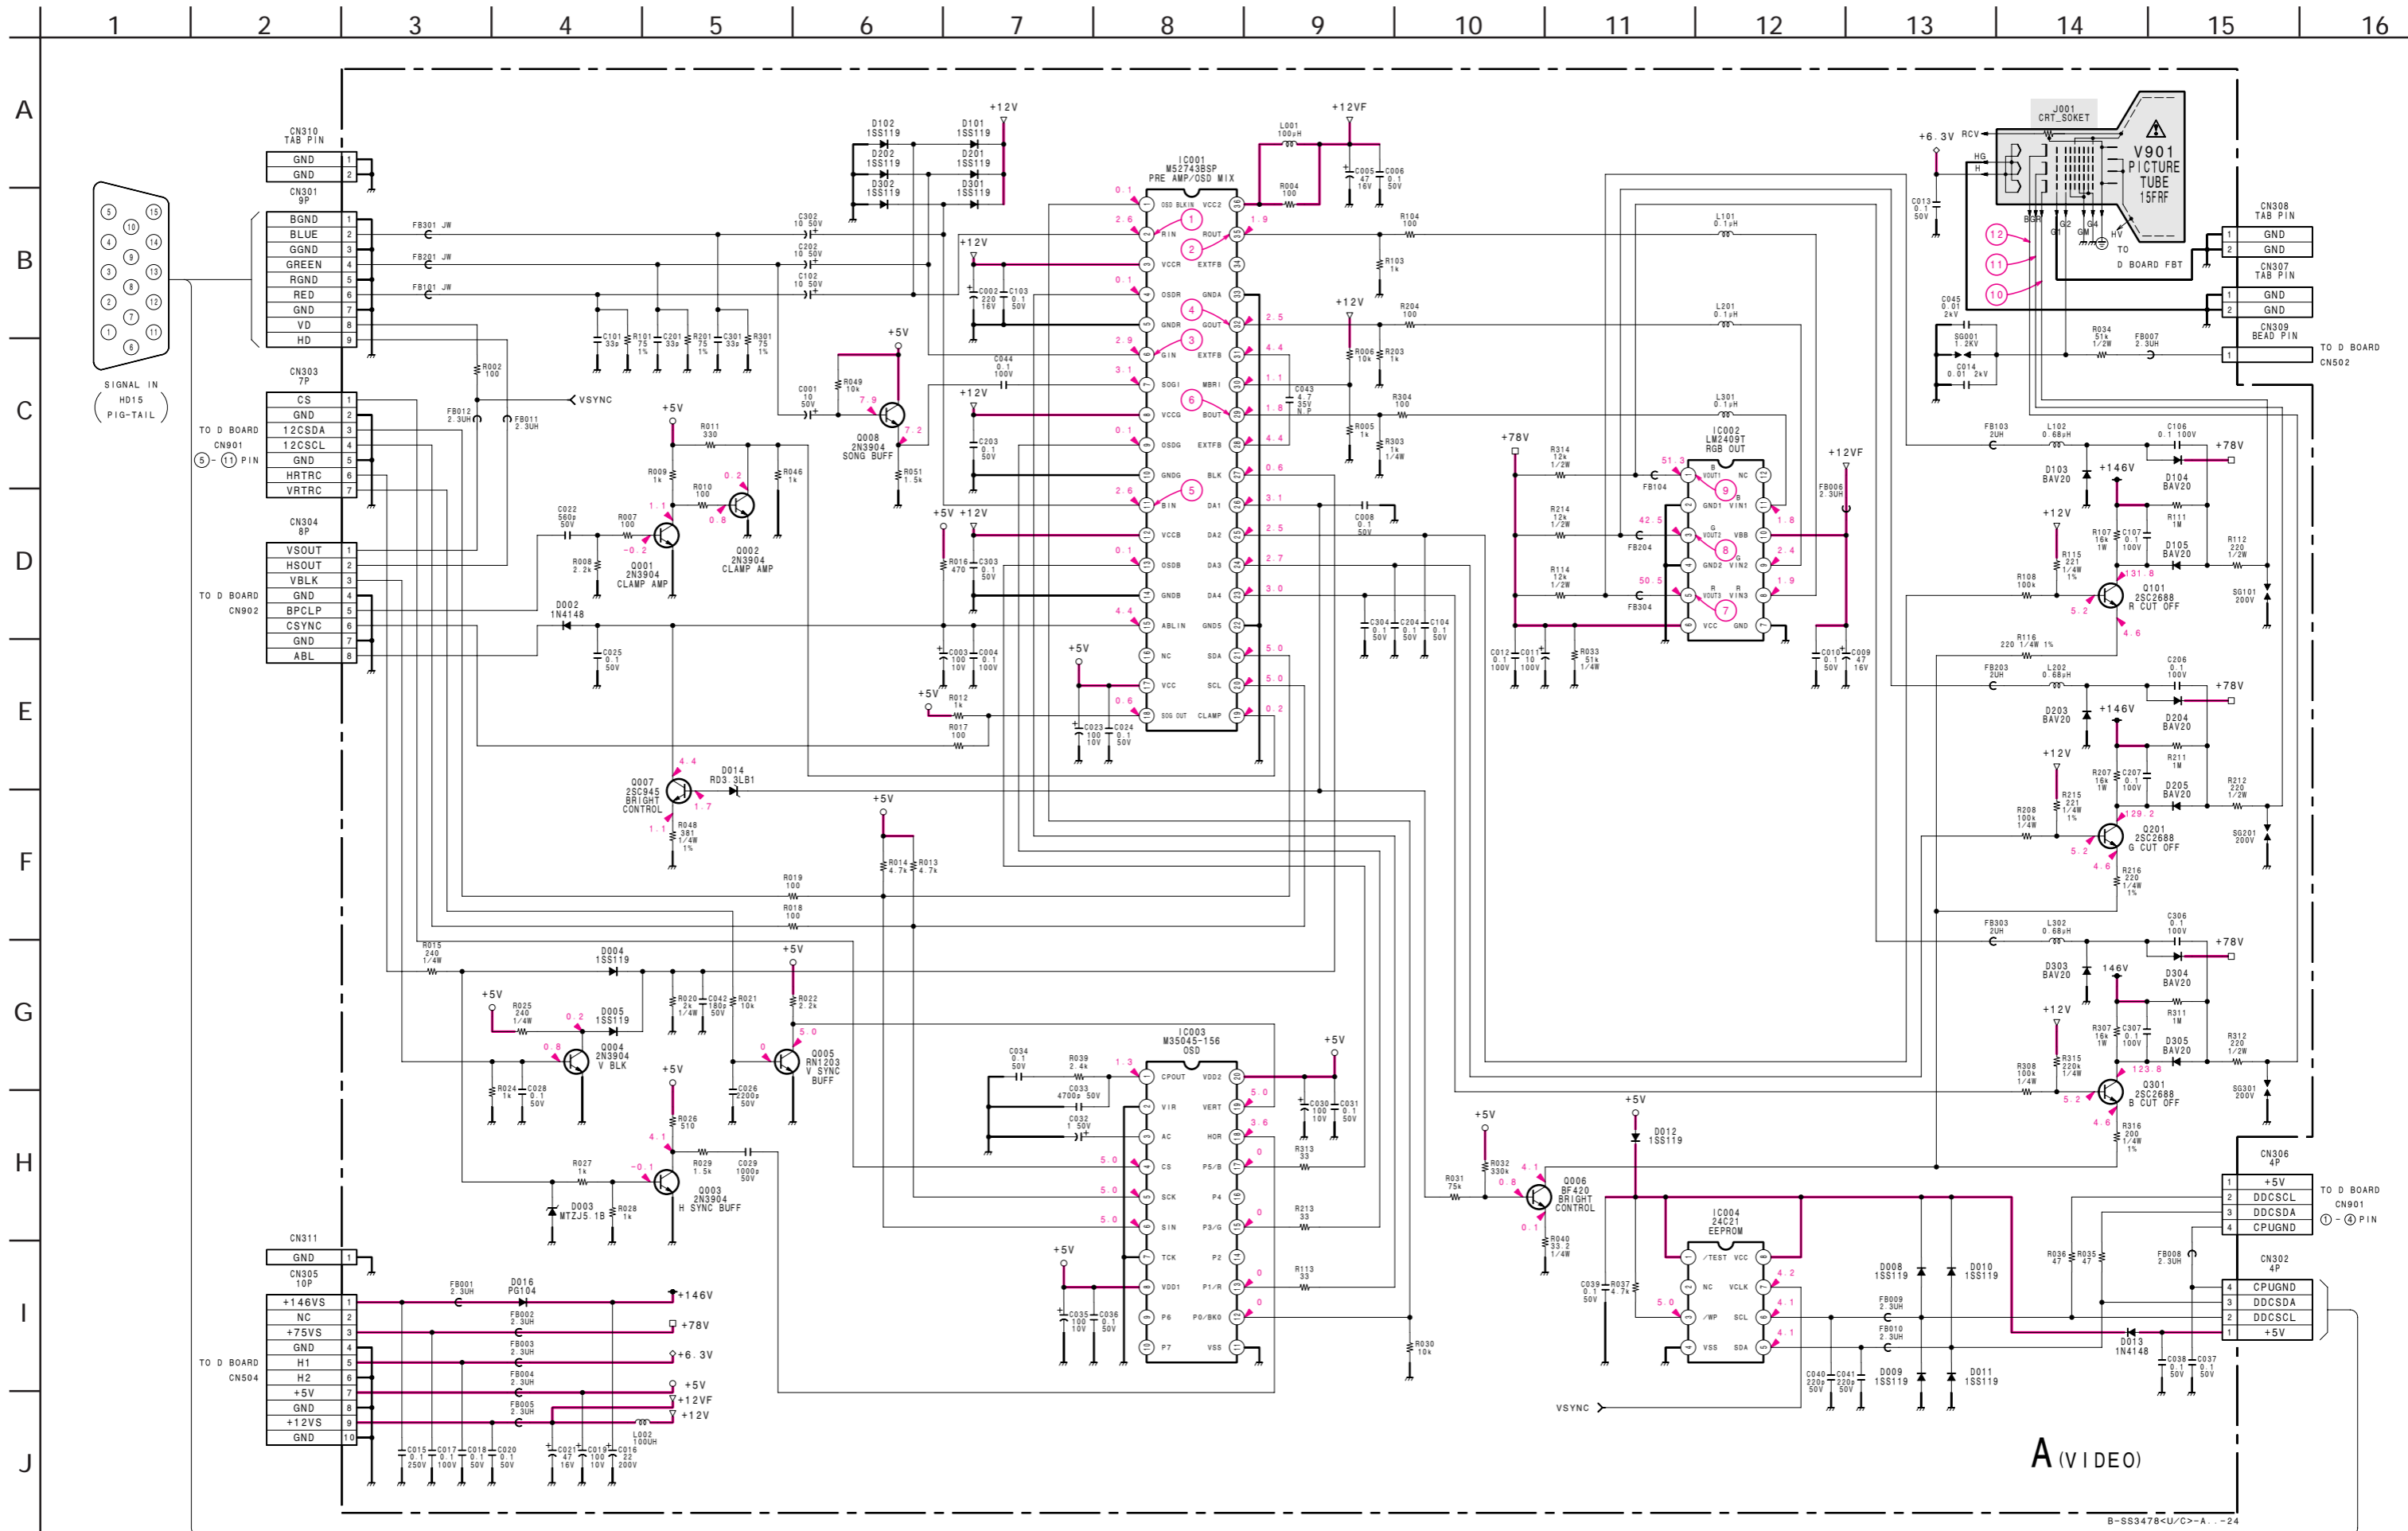


A (VIDEO)

• A BOARD WAVEFORMS

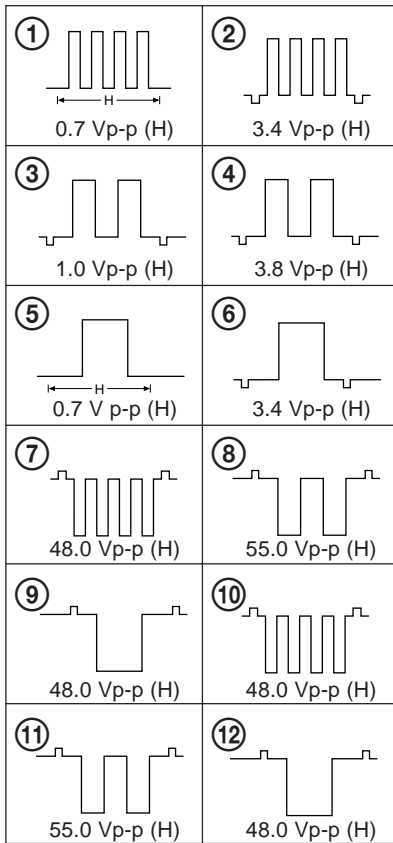


5-4. SEMICONDUCTORS


LM2409

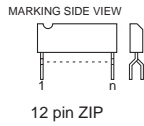


LM358M
LM393M
24LC16B7/SN
24LC21T/SN

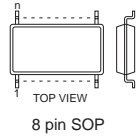


MCT7812CT
TA7805S

 


M35045

 


M52743BSP

 


PC123F2

 


ST72T75

 


TDA4856

 


TDA8172

 


TL431

 


uC3842A

 


DTC124ESA

 

 
FS10KM-6
FS10KM-12
FS12KM-5
FS7KM-16A
2SJ449



IRFI9620G

 

2N3904

 


2SA1221-L
2SC3209LK



2SA733-Q
2SC945-P




2SB649A
2SC2688-LK
2SD1640Q,R
2SD669A-C

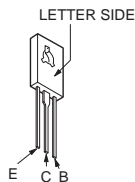


2SC1921



 
2SC2383-O




2SC4632LS-CB7

 


2SC5129

 


DD54RC

 


GBU4J

 


HZ18-2
MTZJ-T-73-15A
SB140
1N4001
1N4148
31DF6

 


MTZJ-5.1A
MTZJ-5.1B
RD3.3ESB2
RD5.1ESB2
RD9.1ESB3
1SS119-25

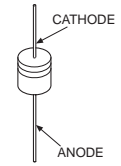

RD3.3LB1

 

RGP02-18
RH-1A
30DF2

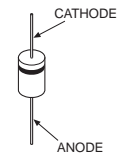

SECTION 6 EXPLODED VIEWS

NOTE:


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par un tramé et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-1. CHASSIS

- 7-685-648-79 +BVTP 3X12
- 7-685-663-71 +BVTP 4X16
- ◆ 7-685-881-09 +BVTT 4X8

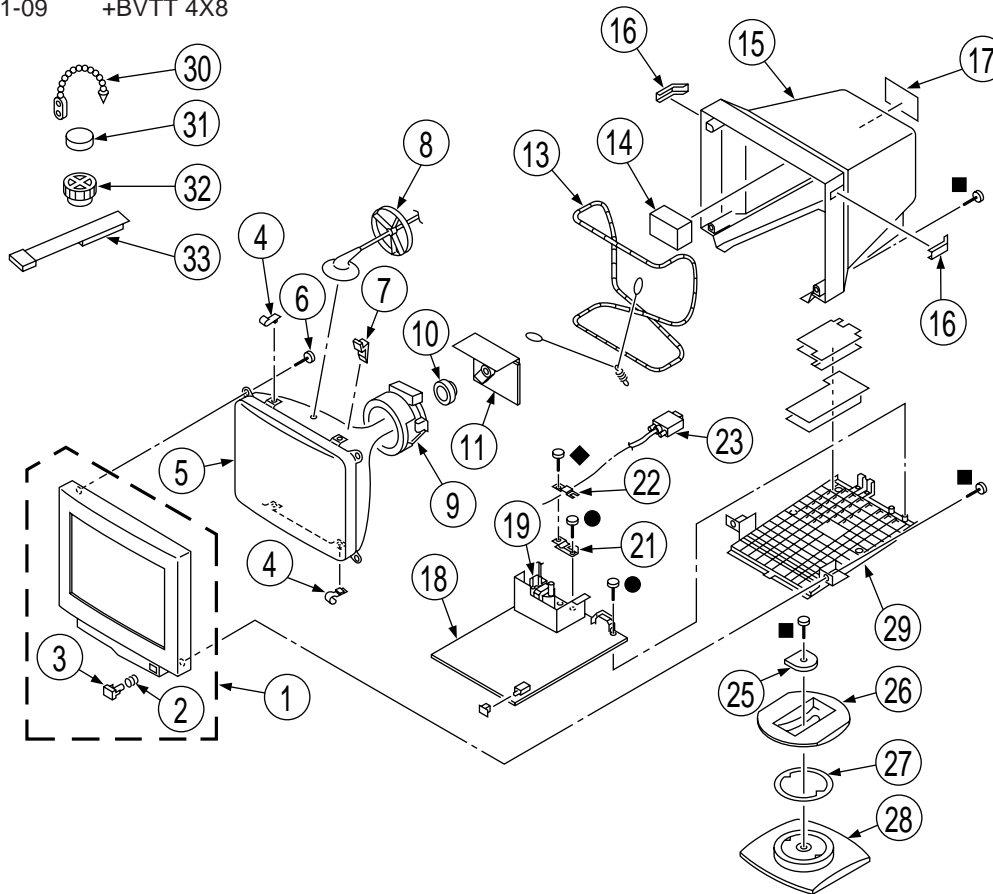


| REF.NO. | PART NO. | DESCRIPTION | REMARK | REF.NO. | PART NO. | DESCRIPTION | REMARK |
|---------|-----------------------|-----------------------------|--------|---------|-----------------------|--------------------------------------|--------|
| 1 | X-4036-502-1 | BEZEL ASSY (110GS) | 2,3 | 17 | 4-069-052-01 | LABEL, INFORMATION (110GS) | |
| 1 | X-4036-566-1 | BEZEL ASSY (110EST) | 2,3 | 17 | 4-069-052-21 | LABEL, INFORMATION (110EST) | |
| 2 | 4-060-162-01 | SPRING, COMPRESSION | | 18 | * A-1343-657-A | D BOARD, COMPLETE | 19 |
| 3 | 4-060-157-01 | BUTTON, POWER (110GS) | | 19 | Δ 1-453-301-11 | TRANSFORMER, FLYBACK | |
| 3 | 4-060-157-11 | BUTTON, POWER (110EST) | | 21 | * 4-060-150-01 | BRACKET, CABLE | |
| 4 | 4-045-123-01 | HOLDER, DEGAUSSING COIL | | 22 | * 4-060-151-01 | STOPPER, CABLE | |
| 5 | Δ 8-734-832-05 | PICTURE TUBE (15FRF)(MIZ) | | 23 | 1-790-576-11 | CABLE ASSY (I/O) | |
| 6 | 4-365-808-01 | SCREW (5), TAPPING | | 25 | * 4-060-183-01 | STOPPER (A) | |
| 7 | 4-060-166-01 | SPACER, DY | | 26 | 4-060-179-01 | SLIDER (110GS) | |
| 8 | 4-060-155-01 | HOLDER, HV CABLE | | 26 | 4-060-613-01 | SLIDER (110EST) | |
| 9 | Δ 8-451-469-21 | DEFLECTION YOKE (Y15FRF2M2) | | 27 | * 4-060-180-01 | RING, TILT SWIVEL | |
| 10 | Δ 1-452-756-11 | NECK ASSY (NA293) | | 28 | * X-4034-791-1 | BASE ASSY, STAND (110GS) | |
| 11 | * A-1294-563-A | A BOARD, COMPLETE | | 28 | * X-4034-879-1 | BASE ASSY, STAND (110EST) | |
| 13 | Δ 1-409-799-11 | COIL, DEMAGNETIC | | 29 | * 4-060-177-01 | COVER, BOTTOM (110GS) | |
| 14 | * 4-060-175-01 | CUSHION, A BOARD | | 29 | 4-060-612-21 | COVER, BOTTOM (110EST) | |
| 15 | 4-060-149-01 | CABINET (110GS) | | 30 | 4-308-870-00 | CLIP, LEAD WIRE | |
| 15 | 4-060-149-11 | CABINET (110EST) | | 31 | 1-452-032-00 | MAGNET, DISC ; 10mm ϕ | |
| 16 | 4-060-165-01 | COVER, SCREW (110GS) | | 32 | 1-452-094-00 | MAGNET, ROTATABLE DISK ; 15mm ϕ | |
| 16 | 4-060-165-21 | COVER, SCREW (110EST) | | 33 | * X-4034-792-1 | PERMALLOY ASSY | |

CPD-110GS/110EST

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par un tramé et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-2. PACKING MATERIALS

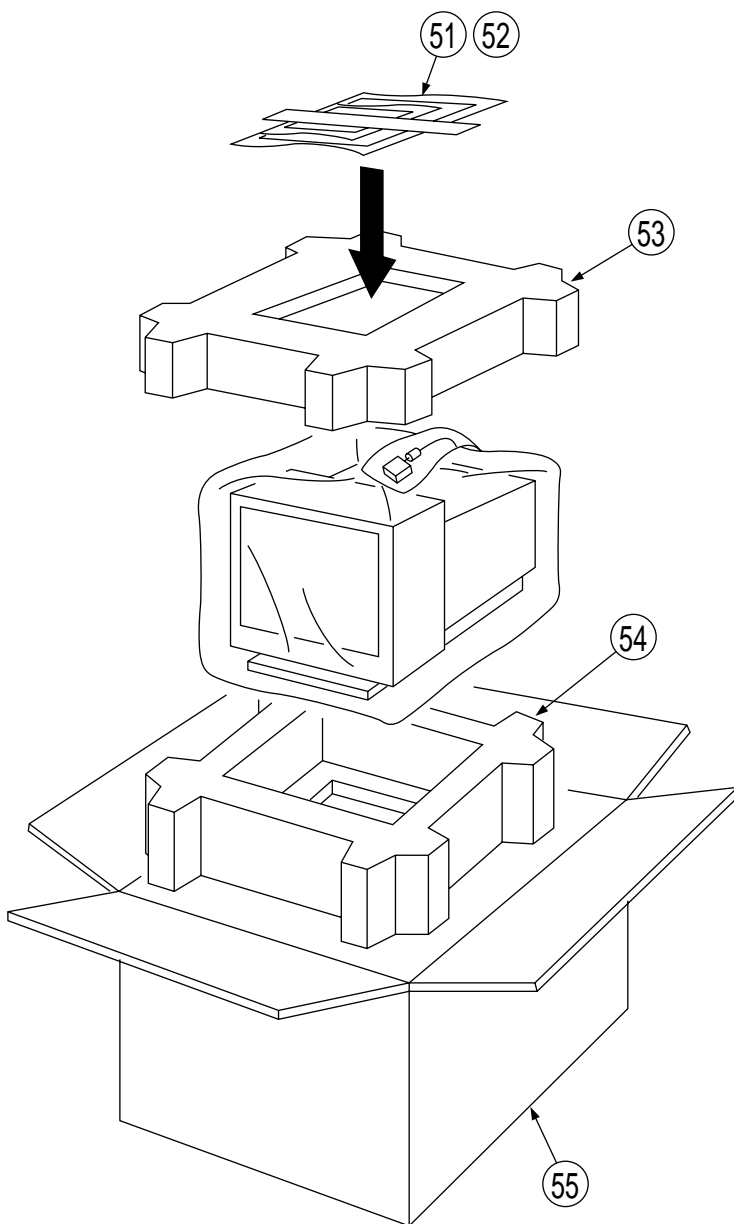

| REF.NO. | PART NO. | DESCRIPTION | REMARK | REF.NO. | PART NO. | DESCRIPTION | REMARK |
|---------|--------------------------|------------------------------|--------|---------|----------------|----------------------------|--------|
| 51 | \triangle 1-765-719-11 | CORD SET, POWER (110EST) | | 53 | * 4-060-187-01 | CUSHION (UPPER) | |
| 51 | \triangle 1-776-027-41 | CORD SET, POWER (110GS) | | 54 | * 4-060-192-01 | CUSHION (LOWER) | |
| 52 | 3-865-633-11 | MANUAL, INSTRUCTION (110EST) | | 55 | * 4-069-228-01 | INDIVIDUAL CARTON (110GS) | |
| 52 | 3-865-633-21 | MANUAL, INSTRUCTION (110GS) | | 55 | * 4-069-229-01 | INDIVIDUAL CARTON (110EST) | |

SECTION 7 ELECTRICAL PARTS LIST



NOTE:

The components identified by mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

The components identified by \boxtimes in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

- All resistors are in ohms
- F : nonflammable
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

CAPACITORS

MF : μ F

COILS

UH : μ H

| REF.NO. | PART NO. | DESCRIPTION | REMARK | REF.NO. | PART NO. | DESCRIPTION | REMARK |
|---------|----------------|---------------------------------|----------|-------------|--------------|-------------------------------|-----------|
| | * A-1294-563-A | A BOARD, COMPLETE ***** | | C039 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V |
| | 4-382-854-01 | SCREW (M3X8), P, SW (+) (IC002) | | C040 | 1-163-125-00 | CERAMIC CHIP 220PF | 5% 50V |
| | <CAPACITOR> | | | C041 | 1-163-125-00 | CERAMIC CHIP 220PF | 5% 50V |
| C001 | 1-126-964-11 | ELECT 10MF | 20% 50V | C043 | 1-107-713-11 | ELECT 4.7MF | 20% 35V |
| C002 | 1-104-664-11 | ELECT 470MF | 20% 25V | C044 | | 0.1MF | 100V |
| C003 | 1-126-933-11 | ELECT 100MF | 20% 16V | C101 | 1-163-894-91 | CERAMIC CHIP 7PF | 0.5PF 50V |
| C004 | 1-136-189-00 | FILM 0.1MF | 10% 250V | C102 | 1-126-964-11 | ELECT 10MF | 20% 50V |
| C005 | 1-104-664-11 | ELECT 47MF | 20% 25V | C103 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V |
| C006 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | C104 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V |
| C008 | 1-136-165-00 | FILM 0.1MF | 5% 50V | C106 | 1-136-189-00 | FILM 0.1MF | 10% 250V |
| C009 | 1-104-664-11 | ELECT 47MF | 20% 25V | C107 | 1-127-980-11 | CERAMIC 0.1MF | 0 100V |
| C010 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | C201 | 1-163-105-00 | CERAMIC CHIP 33PF | 5% 50V |
| C011 | 1-128-582-11 | ELECT 10MF | 20% 100V | C202 | 1-126-964-11 | ELECT 10MF | 20% 50V |
| C012 | 1-127-980-11 | CERAMIC 0.1MF | 0 100V | C203 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V |
| C013 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | C204 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V |
| C014 | 1-115-349-51 | CERAMIC 0.01MF | 2KV | C206 | 1-136-189-00 | FILM 0.1MF | 10% 250V |
| C015 | 1-137-528-11 | FILM 0.1MF | 10% 250V | C207 | 1-127-980-11 | CERAMIC 0.1MF | 0 100V |
| C016 | 1-107-645-11 | ELECT 22MF | 20% 200V | C301 | 1-163-105-00 | CERAMIC CHIP 33PF | 5% 50V |
| C017 | 1-127-980-11 | CERAMIC 0.1MF | 0 100V | C302 | 1-126-964-11 | ELECT 10MF | 20% 50V |
| C018 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | C303 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V |
| C019 | 1-126-933-11 | ELECT 100MF | 20% 16V | C304 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V |
| C020 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | C306 | 1-136-189-00 | FILM 0.1MF | 10% 250V |
| C021 | 1-104-664-11 | ELECT 47MF | 20% 25V | C307 | 1-127-980-11 | CERAMIC 0.1MF | 0 100V |
| C022 | 1-163-199-00 | CERAMIC CHIP 560PF | 5% 50V | <CONNECTOR> | | | |
| C023 | 1-126-933-11 | ELECT 100MF | 20% 16V | CN301* | 1-564-512-11 | PLUG, CONNECTOR 9P | |
| C024 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | CN302* | 1-564-507-11 | PLUG, CONNECTOR 4P | |
| C025 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | CN303* | 1-564-510-11 | PLUG, CONNECTOR 7P | |
| C026 | 1-164-161-11 | CERAMIC CHIP 0.0022MF | 10% 50V | CN304* | 1-564-511-11 | PLUG, CONNECTOR 8P | |
| C028 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | CN305 | 1-564-513-11 | OUTPUT CORD | |
| C029 | 1-102-074-00 | CERAMIC 0.001MF | 10% 50V | CN306* | 1-564-507-11 | PLUG, CONNECTOR 4P | |
| C030 | 1-126-933-11 | ELECT 100MF | 20% 16V | CN307 | 1-695-915-11 | TAB (CONTACT) | |
| C031 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | CN308 | 1-695-915-11 | TAB (CONTACT) | |
| C032 | 1-126-960-11 | ELECT 1MF | 20% 50V | CN309 | 1-506-108-41 | PIN, CONNECTOR (TERMINAL PIN) | |
| C033 | 1-163-017-00 | CERAMIC CHIP 0.0047MF | 10% 50V | CN310 | 1-695-915-11 | TAB (CONTACT) | |
| C034 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | <DIODE> | | | |
| C035 | 1-126-933-11 | ELECT 100MF | 20% 16V | D002 | 8-719-070-90 | DIODE 1N4148 | |
| C036 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | D003 | 8-719-921-42 | ZENER DIODE MTZJ-5.1A | |
| C037 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | D004 | 8-719-900-23 | DIODE GL-2AR1 | |
| C038 | 1-115-339-11 | CERAMIC CHIP 0.1MF | 10% 50V | D005 | 8-719-900-23 | DIODE GL-2AR1 | |
| | | | | D008 | 8-719-900-23 | DIODE GL-2AR1 | |



Les composants identifiés par une
marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce
portant le numéro spécifié.

The components identified by mark Δ
are critical for safety.
Replace only with part number specified.

| REF.NO. | PART NO. | DESCRIPTION | REMARK | REF.NO. | PART NO. | DESCRIPTION | REMARK |
|----------------|-----------------------|-----------------------|--------|--------------|--------------|-----------------------|---------------|
| D009 | 8-719-900-23 | DIODE GL-2AR1 | | <TRANSISTOR> | | | |
| D010 | 8-719-900-23 | DIODE GL-2AR1 | | Q001 | 8-729-139-04 | TRANSISTOR 2N3904 | |
| D011 | 8-719-900-23 | DIODE GL-2AR1 | | Q002 | 8-729-139-04 | TRANSISTOR 2N3904 | |
| D012 | 8-719-900-23 | DIODE GL-2AR1 | | Q003 | 8-729-139-04 | TRANSISTOR 2N3904 | |
| D013 | 8-719-070-90 | DIODE 1N4148 | | Q004 | 8-729-139-04 | TRANSISTOR 2N3904 | |
| D014 | 8-719-109-66 | ZENER DIODE RD3.3ESB2 | | Q005 | 8-729-029-86 | TRANSISTOR DTC124ESA | |
| D016 | 8-719-074-25 | DIODE RGP10D | | Q006 | 8-729-048-20 | TRANSISTOR BF420 | |
| D101 | 8-719-900-23 | DIODE GL-2AR1 | | Q007 | 9-910-999-34 | TRANSISTOR 2SC945-P | |
| D102 | 8-719-900-23 | DIODE GL-2AR1 | | Q008 | 8-729-139-04 | TRANSISTOR 2N3904 | |
| D103 | 8-719-074-15 | DIODE BAV20 | | Q101 | 8-729-119-80 | TRANSISTOR 2SC2688-LK | |
| D104 | 8-719-074-15 | DIODE BAV20 | | Q201 | 8-729-119-80 | TRANSISTOR 2SC2688-LK | |
| D105 | 8-719-074-15 | DIODE BAV20 | | Q301 | 8-729-119-80 | TRANSISTOR 2SC2688-LK | |
| D201 | 8-719-900-23 | DIODE GL-2AR1 | | <RESISTOR> | | | |
| D202 | 8-719-900-23 | DIODE GL-2AR1 | | R001 | 1-247-815-91 | CARBON | 220 5% 1/4W |
| D203 | 8-719-074-15 | DIODE BAV20 | | R002 | 1-216-025-91 | RES,CHIP | 100 5% 1/10W |
| D204 | 8-719-074-15 | DIODE BAV20 | | R004 | 1-216-025-91 | RES,CHIP | 100 5% 1/10W |
| D205 | 8-719-074-15 | DIODE BAV20 | | R005 | 1-216-049-91 | RES,CHIP | 1K 5% 1/10W |
| D301 | 8-719-900-23 | DIODE GL-2AR1 | | R006 | 1-216-073-00 | RES,CHIP | 10K 5% 1/10W |
| D302 | 8-719-900-23 | DIODE GL-2AR1 | | R007 | 1-216-025-91 | RES,CHIP | 100 5% 1/10W |
| D303 | 8-719-074-15 | DIODE BAV20 | | R008 | 1-216-057-00 | RES,CHIP | 2.2K 5% 1/10W |
| D304 | 8-719-074-15 | DIODE BAV20 | | R009 | 1-216-049-91 | RES,CHIP | 1K 5% 1/10W |
| D305 | 8-719-074-15 | DIODE BAV20 | | R010 | 1-216-025-91 | RES,CHIP | 100 5% 1/10W |
| <FERRITE BEAD> | | | | R011 | 1-216-037-00 | RES,CHIP | 330 5% 1/10W |
| FB001 | 1-412-911-11 | FERRITE | 2.3UH | R012 | 1-216-049-91 | RES,CHIP | 1K 5% 1/10W |
| FB002 | 1-412-911-11 | FERRITE | 2.3UH | R013 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W |
| FB003 | 1-412-911-11 | FERRITE | 2.3UH | R014 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W |
| FB004 | 1-412-911-11 | FERRITE | 2.3UH | R015 | 1-247-816-11 | CARBON | 240 5% 1/4W |
| FB005 | 1-412-911-11 | FERRITE | 2.3UH | R016 | 1-216-041-11 | METAL CHIP | 470 5% 1/10W |
| FB006 | 1-412-911-11 | FERRITE | 2.3UH | R017 | 1-216-025-91 | RES,CHIP | 100 5% 1/10W |
| FB007 | 1-412-911-11 | FERRITE | 2.3UH | R018 | 1-216-025-91 | RES,CHIP | 100 5% 1/10W |
| FB008 | 1-412-911-11 | FERRITE | 2.3UH | R019 | 1-216-025-91 | RES,CHIP | 100 5% 1/10W |
| FB009 | 1-412-911-11 | FERRITE | 2.3UH | R020 | 1-247-838-00 | CARBON | 2K 5% 1/4W |
| FB010 | 1-412-911-11 | FERRITE | 2.3UH | R021 | 1-216-061-00 | RES,CHIP | 3.3K 5% 1/10W |
| <IC> | | | | R022 | 1-216-057-00 | RES,CHIP | 2.2K 5% 1/10W |
| IC001 | 8-759-582-06 | IC M52743BSP | | R024 | 1-216-049-91 | RES,CHIP | 1K 5% 1/10W |
| IC002 | 8-759-582-08 | IC LM2409 | | R025 | 1-247-816-11 | CARBON | 240 5% 1/4W |
| IC003 | 8-759-582-07 | IC M35045 | | R026 | 1-216-042-00 | RES,CHIP | 510 5% 1/10W |
| IC004 | 8-759-370-08 | IC 24LC21T/SN | | R027 | 1-216-049-91 | RES,CHIP | 1K 5% 1/10W |
| <JACK> | | | | R028 | 1-216-049-91 | RES,CHIP | 1K 5% 1/10W |
| J001 | Δ 1-251-335-11 | SOCKET, PICTURE TUBE | | R029 | 1-216-053-00 | RES,CHIP | 1.5K 5% 1/10W |
| <COIL> | | | | R030 | 1-216-073-00 | RES,CHIP | 10K 5% 1/10W |
| L001 | 1-469-400-11 | INDUCTOR 100UH | | R031 | 1-216-094-00 | RES,CHIP | 75K 5% 1/10W |
| L002 | 1-469-400-11 | INDUCTOR 100UH | | R032 | 1-216-109-00 | RES,CHIP | 330K 5% 1/10W |
| L101 | 1-469-398-11 | INDUCTOR 0.1UH | | R033 | 1-247-872-11 | CARBON | 51K 5% 1/4W |
| L102 | 1-469-399-11 | INDUCTOR 0.68UH | | R034 | 1-260-192-91 | CARBON | 51K 5% 1/2W |
| L201 | | INDUCTOR 0.1UH | | R035 | 1-216-017-00 | METAL CHIP | 47 5% 1/10W |
| L202 | 1-469-399-11 | INDUCTOR 0.68UH | | R036 | 1-216-017-00 | METAL CHIP | 47 5% 1/10W |
| L301 | | INDUCTOR 0.1UH | | R037 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W |
| L302 | 1-469-399-11 | INDUCTOR 0.68UH | | R038 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W |
| | | | | R039 | 1-216-058-00 | RES,CHIP | 2.4K 5% 1/10W |
| | | | | R040 | 1-240-888-11 | METAL | 33.2 1% 1/4W |
| | | | | R046 | 1-216-049-91 | RES,CHIP | 1K 5% 1/10W |
| | | | | R048 | 1-215-417-00 | METAL | 680 1% 1/4W |

CPD-110GS/110EST



Les composants identifiés par une
marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce
portant le numéro spécifié.

The components identified by mark Δ
are critical for safety.
Replace only with part number specified.

| REF.NO. | PART NO. | DESCRIPTION | REMARK | REF.NO. | PART NO. | DESCRIPTION | REMARK |
|---------------|--------------|--------------|-------------------|----------------|--------------|------------------------------|-------------------|
| C528 | 1-136-165-00 | FILM | 0.1MF 5% 50V | C616 | 1-136-165-00 | FILM | 0.1MF 5% 50V |
| C529 | 1-136-165-00 | FILM | 0.1MF 5% 50V | C618 | 1-126-964-11 | ELECT | 10MF 20% 50V |
| C530 | 1-136-165-00 | FILM | 0.1MF 5% 50V | C619 | 1-136-165-00 | FILM | 0.1MF 5% 50V |
| C531 | 1-137-395-91 | FILM | 0.022MF 5% 100V | C620 | 1-128-982-11 | CERAMIC | 330PF 1KV |
| C532 | 1-136-298-00 | FILM | 0.0033MF 5% 100V | C622 | 1-102-121-00 | CERAMIC | 0.0022MF 10% 50V |
| C533 | 1-137-378-11 | FILM | 0.22MF 5% 50V | C623 | 1-136-165-00 | FILM | 0.1MF 5% 50V |
| C535 | 1-106-343-00 | MYLAR | 0.001MF 10% 100V | C625 | 1-125-700-11 | ELECT (BLOCK) | 220MF 20% 200V |
| C536 | 1-102-112-00 | CERAMIC | 330PF 10% 50V | C626 | 1-107-955-11 | ELECT | 100MF 20% 200V |
| C537 | 1-104-664-11 | ELECT | 47MF 20% 16V | C628 | 1-107-914-11 | ELECT | 1000MF 20% 25V |
| C538 | 1-137-455-11 | FILM | 0.012MF 5% 100V | C630 | 1-128-528-11 | ELECT | 470MF 20% 25V |
| C539 | 1-137-350-11 | FILM | 0.015MF 5% 100V | C632 | 1-126-935-11 | ELECT | 470MF 20% 16V |
| C540 | 1-137-464-11 | FILM | 0.039MF 5% 100V | C633 | 1-107-914-11 | ELECT | 1000MF 20% 25V |
| C541 | 1-126-934-11 | ELECT | 220MF 20% 16V | C634 | 1-107-884-11 | ELECT | 1000MF 20% 16V |
| C542 | 1-137-395-91 | FILM | 0.022MF 5% 100V | C635 | 1-126-926-11 | ELECT | 1000MF 20% 10V |
| C543 | 1-102-244-00 | CERAMIC | 220PF 10% 500V | C636 | 1-164-143-11 | CERAMIC | 0.001MF 10% 1KV |
| C545 | 1-136-165-00 | FILM | 0.1MF 5% 50V | C647 | 1-126-947-11 | ELECT | 47MF 20% 35V |
| C546 | 1-136-165-00 | FILM | 0.1MF 5% 50V | C648 Δ | 1-113-924-91 | CERAMIC | 0.0047MF 20% 250V |
| C547 | 1-130-495-00 | FILM | 0.1MF 5% 50V | C649 Δ | 1-113-924-91 | CERAMIC | 0.0047MF 20% 250V |
| C548 | 1-126-934-11 | ELECT | 220MF 20% 16V | C651 | 1-107-914-11 | ELECT | 1000MF 20% 25V |
| C549 | 1-126-934-11 | ELECT | 220MF 20% 16V | C901 | 1-136-165-00 | FILM | 0.1MF 5% 50V |
| C550 | 1-128-986-11 | FILM | 0.01MF 5% 250V | C903 | 1-126-961-11 | ELECT | 2.2MF 20% 50V |
| C553 | 1-104-664-11 | ELECT | 47MF 20% 16V | C904 | 1-126-961-11 | ELECT | 2.2MF 20% 50V |
| C554 | 1-107-667-11 | ELECT | 2.2MF 20% 160V | C905 | 1-126-961-11 | ELECT | 2.2MF 20% 50V |
| C555 | 1-136-165-00 | FILM | 0.1MF 5% 50V | C906 | 1-126-961-11 | ELECT | 2.2MF 20% 50V |
| C556 | 1-107-955-11 | ELECT | 100MF 20% 200V | C907 | 1-126-964-11 | ELECT | 10MF 20% 50V |
| C560 | 1-136-165-00 | FILM | 0.1MF 5% 50V | C908 | 1-136-165-00 | FILM | 0.1MF 5% 50V |
| C570 | 1-104-331-11 | CERAMIC | 0.0022MF 10% 1KV | C910 | 1-126-964-11 | ELECT | 10MF 20% 50V |
| C584 | 1-109-878-11 | CERAMIC | 15PF 5% 2KV | C912 | 1-102-112-00 | CERAMIC | 330PF 10% 50V |
| C585 | 1-164-143-11 | CERAMIC | 0.001MF 10% 1KV | C913 | 1-102-973-00 | CERAMIC | 100PF 5% 50V |
| C586 | 1-107-792-11 | CERAMIC | 100PF 5% 1KV | C914 | 1-126-964-11 | ELECT | 10MF 20% 50V |
| C587 | 1-127-979-11 | MYLAR | 0.36MF 5% 400V | C915 | 1-162-815-11 | CERAMIC | 47PF 5% 500V |
| C588 | 1-136-191-11 | FILM | 0.22MF 5% 250V | C916 | 1-162-815-11 | CERAMIC | 47PF 5% 500V |
| C589 | 1-126-960-11 | ELECT | 1MF 20% 50V | C917 | 1-126-961-11 | ELECT | 2.2MF 20% 50V |
| C590 | 1-136-165-00 | FILM | 0.1MF 5% 50V | C923 | 1-126-961-11 | ELECT | 2.2MF 20% 50V |
| C591 | 1-136-165-00 | FILM | 0.1MF 5% 50V | C927 | 1-162-815-11 | CERAMIC | 47PF 5% 500V |
| C592 | 1-126-964-11 | ELECT | 10MF 20% 50V | C928 | 1-162-815-11 | CERAMIC | 47PF 5% 500V |
| C593 | 1-137-378-11 | FILM | 0.22MF 5% 50V | C929 | 1-102-973-00 | CERAMIC | 100PF 5% 500V |
| C594 | 1-117-216-11 | CERAMIC | 0.0022MF 10% 3KV | C930 | 1-136-165-00 | FILM | 0.1MF 5% 50V |
| C595 | 1-136-209-11 | FILM | 0.1MF 5% 400V | C950 | 1-102-074-00 | CERAMIC | 0.001MF 10% 50V |
| C596 | 1-104-331-11 | CERAMIC | 0.0022MF 10% 1KV | C951 | 1-102-074-00 | CERAMIC | 0.001MF 10% 50V |
| C597 | 1-136-298-00 | FILM | 0.0033MF 5% 100V | <CONNECTOR> | | | |
| C598 | 1-136-169-00 | FILM | 0.22MF 5% 50V | CN501* | 1-580-798-11 | CONNECTOR PIN (DY) 6P | |
| C599 | 1-126-969-11 | ELECT | 220MF 20% 50V | CN504* | 1-564-513-11 | PLUG, CONNECTOR 10P | |
| C601 Δ | 1-104-708-51 | FILM | 0.47MF 20% 250V | CN506 | 1-695-915-11 | TAB CONTACT | |
| C602 Δ | 1-107-533-51 | FILM | 1MF 20% 250V | CN601 Δ | 1-251-444-11 | INLET, AC | |
| C603 Δ | 1-113-905-91 | CERAMIC | 220PF 10% 250V | CN603* | 1-691-960-11 | PIN, CONNECTOR (PC BOARD) 3P | |
| C604 Δ | 1-113-920-91 | CERAMIC | 0.0022MF 20% 250V | CN901 | 1-764-334-11 | PLUG, CONNECTOR 11P | |
| C605 | 1-113-924-11 | CERAMIC | 0.0047MF 20% 250V | CN902* | 1-564-511-11 | PLUG, CONNECTOR 8P | |
| C606 | 1-113-707-11 | ELECT(BLOCK) | 220MF 20% 450V | <DIODE> | | | |
| C607 | 1-126-947-11 | ELECT | 47MF 20% 35V | D402 | 8-719-052-88 | DIODE 1N4002 | |
| C608 | 1-136-209-11 | FILM | 0.1MF 5% 400V | D501 | 8-719-911-19 | DIODE 1SS119-25 | |
| C611 | 1-102-002-00 | CERAMIC | 680PF 10% 500V | D502 | 8-719-923-03 | ZENER DIODE MTZJ-T-73-15A | |
| C612 | 1-137-393-11 | FILM | 0.01MF 5% 100V | | | | |
| C613 | 1-102-244-00 | CERAMIC | 220PF 10% 500V | | | | |
| C614 | 1-136-165-00 | FILM | 0.1MF 5% 50V | | | | |
| C615 | 1-126-933-11 | ELECT | 100MF 20% 16V | | | | |

The components identified by mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



| REF.NO. | PART NO. | DESCRIPTION | REMARK | REF.NO. | PART NO. | DESCRIPTION | REMARK |
|---------------|--------------|---------------------------|--------|----------------|--------------|----------------------------|--------|
| D503 | 8-719-200-89 | DIODE 31DF2-FA | | FB604 | 1-469-403-11 | INDUCTOR 2UH | |
| D504 | 8-719-911-19 | DIODE 1SS119-25 | | FB605 | 1-469-402-11 | INDUCTOR 3UH | |
| D506 | 8-719-911-19 | DIODE 1SS119-25 | | FB606 | 1-469-402-11 | INDUCTOR 3UH | |
| D508 | 8-719-074-14 | DIODE BY459F-1500 | | FB607 | 1-469-401-11 | INDUCTOR 2.8UH | |
| D509 | 8-719-110-14 | ZENER DIODE RD9.1ESB3 | | FB608 | 1-469-401-11 | INDUCTOR 3UH | |
| D510 | 8-719-921-42 | ZENER DIODE MTZJ-5.1A | | FB612 Δ | 1-412-911-21 | FERRITE 2.3UH | |
| D511 | 8-719-074-17 | DIODE SR1003 | | FB613 Δ | 1-412-911-21 | FERRITE 2.3UH | |
| D512 | 8-719-074-17 | DIODE SR1003 | | FB614 Δ | 1-412-911-21 | FERRITE 2.3UH | |
| D513 | 8-719-074-13 | DIODE BYV26C | | FB615 Δ | 1-412-911-21 | FERRITE 2.3UH | |
| D514 | 8-719-074-17 | DIODE SR1003 | | FB616 Δ | 1-412-911-21 | FERRITE 2.3UH | |
| D515 | 8-719-911-19 | DIODE 1SS119-25 | | FB617 Δ | 1-412-911-21 | FERRITE 2.3UH | |
| D516 | 8-719-911-19 | DIODE 1SS119-25 | | FB618 Δ | 1-412-911-21 | FERRITE 2.3UH | |
| D517 | 8-719-911-19 | DIODE 1SS119-25 | | FB619 Δ | 1-412-911-21 | FERRITE 2.3UH | |
| D518 | 8-719-911-19 | DIODE 1SS119-25 | | FB620 | 1-469-401-11 | INDUCTOR 2.8UH | |
| D519 | 8-719-074-17 | DIODE SR1003 | | FB622 | 1-469-401-11 | INDUCTOR 2.8UH | |
| D521 | 8-719-074-17 | DIODE SR1003 | | FB901 | 1-469-403-11 | INDUCTOR 2UH | |
| D522 | 8-719-074-16 | DIODE RGP02-18 | | | | | |
| D523 | 8-719-911-19 | DIODE 1SS119-25 | | | | <IC> | |
| D526 | 8-719-911-19 | DIODE 1SS119-25 | | IC401 | 8-759-980-58 | IC TDA8172 | |
| D592 | 8-719-911-19 | DIODE 1SS119-25 | | IC501 | 8-759-582-05 | IC TDA4856 | |
| D601 Δ | 8-719-074-18 | DIODE GBL08-5311 | | IC502 | 8-759-502-84 | IC LM393M | |
| D604 | 8-719-074-17 | DIODE SR1003 | | IC503 | 8-759-502-80 | IC LM358M | |
| D605 | 8-719-074-13 | DIODE BYV26C | | IC504 | 8-759-502-80 | IC LM358M | |
| D606 | 8-719-911-19 | DIODE 1SS119-25 | | IC601 | 8-759-582-09 | IC UC3842A | |
| D607 | 8-719-110-49 | ZENER DIODE RD18ESB2 | | IC602 | 8-749-010-64 | PHOTO COUPLER PC123F2 | |
| D608 | 8-719-921-07 | ZENER DIODE MTZJ-T-73-24D | | IC603 | 8-759-007-23 | IC MC74HC4316N | |
| D609 | 8-719-911-19 | DIODE 1SS119-25 | | IC605 | 8-759-231-53 | IC TA7805S | |
| D610 | 8-719-911-19 | DIODE 1SS119-25 | | IC606 | 8-729-048-22 | TRANSISTOR MCR100 | |
| D611 | 8-719-911-19 | DIODE 1SS119-25 | | IC607 | 8-759-279-76 | IC MCT7812CT | |
| D613 | 8-719-074-12 | DIODE BYM26C | | IC901 | 8-759-582-17 | IC ST72T75(OTP) | |
| D615 | 8-719-074-12 | DIODE BYM26C | | IC902 | 8-759-454-79 | IC 24LC16BT/SN | |
| D616 | 8-719-074-19 | DIODE UF5402G | | | | <COIL> | |
| D617 | 8-719-074-19 | DIODE UF5402G | | L502 | 1-410-521-11 | INDUCTOR 100UH | |
| D618 | 8-719-984-46 | DIODE SB360 | | L503 | 1-459-104-00 | COIL, WITH CORE | |
| D626 | 8-719-911-19 | DIODE 1SS119-25 | | L505 | 1-409-896-11 | COIL, HORIZONTAL LINEARITY | |
| D901 | 8-719-074-21 | DIODE LT6463-23-D51 | | L506 | 1-459-104-00 | COIL, WITH CORE | |
| D902 | 8-719-109-66 | ZENER DIODE RD3.3ESB2 | | L507 | 1-412-550-11 | INDUCTOR 1.2MMH | |
| D903 | 8-719-911-19 | DIODE 1SS119-25 | | L508 | 1-410-509-11 | INDUCTOR 10UH | |
| D904 | 8-719-911-19 | DIODE 1SS119-25 | | L570 | 1-416-989-11 | INDUCTOR 7UH | |
| D905 | 8-719-921-42 | ZENER DIODE MTZJ-5.1A | | L601 | 1-412-537-31 | INDUCTOR 100UH | |
| D906 | 8-719-921-42 | ZENER DIODE MTZJ-5.1A | | L602 | 1-412-537-31 | INDUCTOR 100UH | |
| D908 | 8-719-921-42 | ZENER DIODE MTZJ-5.1A | | L603 | 1-412-537-31 | INDUCTOR 100UH | |
| D909 | 8-719-921-42 | ZENER DIODE MTZJ-5.1A | | L604 | 1-412-537-31 | INDUCTOR 100UH | |
| D910 | 8-719-911-19 | DIODE 1SS119-25 | | L606 | 1-410-645-31 | INDUCTOR 100UH | |
| | | <FUSE> | | L607 | 1-410-645-31 | INDUCTOR 100UH | |
| F601 Δ | 1-576-231-11 | FUSE (H.B.C.) (4A/250V) | | | | <FILTER> | |
| | | <FERRITE BEAD> | | LF601 Δ | 1-433-798-11 | TRANSFORMER, LINE FILTER | |
| FB501 | 1-469-402-11 | INDUCTOR 3UH | | | | <TRANSISTOR> | |
| FB502 | 1-414-793-21 | FERRITE 0.45UH | | Q401 | 9-910-999-34 | TRANSISTOR 2SC945-P | |
| FB601 | 1-469-402-11 | INDUCTOR 3UH | | | | | |
| FB602 | 1-469-401-11 | INDUCTOR 2.8UH | | | | | |
| FB603 | 1-469-402-11 | INDUCTOR 3UH | | | | | |

CPD-110GS/110EST



| REF.NO. | PART NO. | DESCRIPTION | REMARK | REF.NO. | PART NO. | DESCRIPTION | REMARK |
|---------|--------------|------------------------------|-----------|---------|--------------|-------------|---------|
| Q5E2 | 8-729-238-32 | TRANSISTOR 2SC2383-O | | R409 | 1-249-429-11 | CARBON 10K | 5% 1/4W |
| Q5E3 | 8-729-122-12 | TRANSISTOR 2SA1221-L | | R410 | 1-247-842-11 | CARBON 3K | 5% 1/4W |
| Q501 | 8-729-027-93 | TRANSISTOR 2SC4673D | | | | | |
| Q502 | 8-729-048-21 | TRANSISTOR FS10KM-12 | | R411 | 1-249-427-11 | CARBON 6.8K | 5% 1/4W |
| | | | | R412 | 1-249-427-11 | CARBON 6.8K | 5% 1/4W |
| Q503 | 8-729-030-67 | TRANSISTOR 2SC5129 (LBSONY1) | | R5A3 | 1-260-127-11 | CARBON 220K | 5% 1/2W |
| Q504 | 8-729-047-46 | TRANSISTOR FS7KM-16A | | R5A5 | 1-249-413-11 | CARBON 470 | 5% 1/4W |
| Q505 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R5A6 | 1-249-429-11 | CARBON 10K | 5% 1/4W |
| Q506 | 8-729-049-35 | TRANSISTOR IRF630 | | | | | |
| Q507 | 8-729-049-35 | TRANSISTOR IRF630 | | R5A7 | 1-249-432-11 | CARBON 18K | 5% 1/4W |
| | | | | R5A8 | 1-247-903-00 | CARBON 1M | 5% 1/4W |
| Q508 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R5A9 | 1-249-413-11 | CARBON 470 | 5% 1/4W |
| Q509 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R5C0 | 1-247-881-00 | CARBON 120K | 5% 1/4W |
| Q510 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R5C1 | 1-247-862-11 | CARBON 20K | 5% 1/4W |
| Q511 | 8-729-173-36 | TRANSISTOR 2SA733-Q | | | | | |
| Q512 | 8-729-029-86 | TRANSISTOR DTC124ESA | | R5C2 | 1-249-427-11 | CARBON 6.8K | 5% 1/4W |
| | | | | R5C3 | 1-247-872-11 | CARBON 51K | 5% 1/4W |
| Q513 | 8-729-173-36 | TRANSISTOR 2SA733-Q | | R5C4 | 1-249-440-11 | CARBON 82K | 5% 1/4W |
| Q514 | 8-729-173-36 | TRANSISTOR 2SA733-Q | | R5C5 | 1-249-425-11 | CARBON 4.7K | 5% 1/4W |
| Q515 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R5C6 | 1-247-807-31 | CARBON 100 | 5% 1/4W |
| Q516 | 8-729-173-36 | TRANSISTOR 2SA733-Q | | | | | |
| Q517 | 8-729-306-92 | TRANSISTOR 2SD669AVC | | R5C7 | 1-260-089-91 | CARBON 150 | 5% 1/2W |
| | | | | R5C9 | CARBON 4.3K | 5% 1/4W | |
| Q518 | 8-729-306-92 | TRANSISTOR 2SD669AVC | | R5E6 | 1-249-437-11 | CARBON 47K | 5% 1/4W |
| Q519 | 8-729-119-80 | TRANSISTOR 2SC2688-LK | | R5E7 | 1-247-872-11 | CARBON 51K | 5% 1/4W |
| Q520 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R5E8 | 1-247-836-11 | CARBON 1.6K | 5% 1/4W |
| Q521 | 8-729-173-36 | TRANSISTOR 2SA733-Q | | R5E9 | 1-247-807-31 | CARBON 100 | 5% 1/4W |
| Q523 | 8-729-028-34 | TRANSISTOR 2SD1640Q,R | | R5F1 | 1-249-429-11 | CARBON 10K | 5% 1/4W |
| | | | | | | | |
| Q524 | 8-729-049-35 | TRANSISTOR IRF630 | | R5F2 | 1-260-079-11 | CARBON 22 | 5% 1/2W |
| Q526 | 8-729-029-86 | TRANSISTOR DTC124ESA | | R5F3 | 1-249-385-11 | CARBON 2.2 | 5% 1/4W |
| Q527 | 8-729-140-50 | TRANSISTOR 2SC3209LK | | R5F4 | 1-247-822-11 | CARBON 430 | 5% 1/4W |
| Q528 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R5F5 | 1-249-413-11 | CARBON 470 | 5% 1/4W |
| Q529 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R5F6 | 1-260-070-11 | CARBON 3.3 | 5% 1/2W |
| | | | | | | | |
| Q530 | 8-729-119-80 | TRANSISTOR 2SC2688-LK | | R500 | 1-249-393-11 | CARBON 10 | 5% 1/4W |
| Q531 | 8-729-321-62 | TRANSISTOR 2SC1921 | | R501 | 1-249-434-11 | CARBON 27K | 5% 1/4W |
| Q532 | 8-729-823-81 | TRANSISTOR 2SC4632LS-CB7 | | R502 | 1-240-905-11 | METAL 22.1K | 1% 1/4W |
| Q533 | 8-729-173-36 | TRANSISTOR 2SA733-Q | | R503 | 1-249-425-11 | CARBON 4.7K | 5% 1/4W |
| Q534 | 8-729-029-86 | TRANSISTOR DTC124ESA | | R504 | 1-240-891-11 | METAL 1.18K | 1% 1/4W |
| | | | | | | | |
| Q601 | 8-729-173-36 | TRANSISTOR 2SA733-Q | | R505 | 1-240-894-11 | METAL 2.8K | 1% 1/4W |
| Q602 | 8-729-048-21 | TRANSISTOR FS10KM-12 | | R506 | 1-249-429-11 | CARBON 10K | 5% 1/4W |
| Q607 | 8-729-200-35 | TRANSISTOR 2SA966-O | | R507 | 1-260-068-11 | CARBON 2.2 | 5% 1/2W |
| Q608 | 8-729-029-86 | TRANSISTOR DTC124ESA | | R508 | 1-240-904-11 | METAL 18.2K | 1% 1/4W |
| Q609 | 8-729-200-35 | TRANSISTOR 2SA966-O | | R509 | 1-240-883-11 | CARBON 4.3K | |
| | | | | | | | |
| Q610 | 8-729-029-86 | TRANSISTOR DTC124ESA | | R510 | 1-247-807-31 | CARBON 100 | 5% 1/4W |
| Q615 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R511 | 1-247-807-31 | CARBON 100 | 5% 1/4W |
| Q901 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R513 | 1-247-807-31 | CARBON 100 | 5% 1/4W |
| Q902 | 9-910-999-34 | TRANSISTOR 2SC945-P | | R515 | 1-249-417-11 | CARBON 1K | 5% 1/4W |
| Q907 | 8-729-139-04 | TRANSISTOR 2N3904 | | R516 | 1-247-878-00 | CARBON 91K | 5% 1/4W |
| | | | | | | | |
| Q908 | 8-729-139-04 | TRANSISTOR 2N3904 | | R517 | 1-249-442-11 | CARBON 510 | 5% 1/4W |
| | | | | R518 | 1-247-896-11 | CARBON 510K | 5% 1/4W |
| | | | | R519 | 1-249-415-11 | CARBON 680 | 5% 1/4W |
| | | | | R520 | 1-240-900-11 | METAL 7.5K | 1% 1/4W |
| | | | | R521 | 1-240-902-11 | METAL 10K | 1% 1/4W |
| | | | | | | | |
| | | | | R522 | 1-249-425-11 | CARBON 4.7K | 5% 1/4W |
| | | | | R524 | 1-249-428-11 | CARBON 8.2K | 5% 1/4W |
| | | | | R525 | 1-249-393-11 | CARBON 10 | 5% 1/4W |
| | | | | R526 | 1-249-425-11 | CARBON 4.7K | 5% 1/4W |
| | | | | R527 | 1-249-429-11 | CARBON 10K | 5% 1/4W |
| | | | | | | | |
| | | | | R528 | 1-260-091-11 | CARBON 220 | 5% 1/2W |
| | | | | R529 | 1-247-878-00 | CARBON 91K | 5% 1/4W |
| | | | | | | | |
| R401 | 1-240-893-11 | METAL 1.78K | 1% 1/4W | | | | |
| R402 | 1-240-893-11 | METAL 1.78K | 1% 1/4W | | | | |
| R403 | 1-260-070-11 | CARBON 3.3 | 5% 1/2W | | | | |
| R404 | 1-216-348-00 | METAL OXIDE 0.82 | 5% 1W F | | | | |
| R405 | 1-249-417-11 | CARBON 1K | 5% 1/4W | | | | |
| | | | | | | | |
| R406 | 1-249-383-11 | CARBON 1.5 | 5% 1/4W F | | | | |
| R407 | 1-260-093-11 | CARBON 330 | 5% 1/2W | | | | |
| R408 | 1-249-425-11 | CARBON 4.7K | 5% 1/4W | | | | |

The components identified by mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



| REF.NO. | PART NO. | DESCRIPTION | REMARK | REF.NO. | PART NO. | DESCRIPTION | REMARK |
|---------|--------------|-------------|--------------|---------------|--------------|-------------|---------------|
| R530 | 1-240-887-11 | METAL OXIDE | 1.5 5% 3W | R594 | 1-247-903-00 | CARBON | 1M 5% 1/4W |
| R531 | 1-249-429-11 | CARBON | 10K 5% 1/4W | R595 | 1-249-441-11 | CARBON | 100K 5% 1/4W |
| R532 | 1-260-083-11 | CARBON | 47 5% 1/2W | R596 Δ | 1-240-909-11 | METAL | 127K 1% 1/4W |
| R533 | 1-215-870-11 | METAL OXIDE | 1.5K 5% 1W F | R598 | 1-240-906-11 | METAL | 24.3K 1% 1/4W |
| R534 | 1-215-880-00 | METAL OXIDE | 10 5% 2W F | R599 | 1-240-897-11 | METAL | 4.99K 1% 1/4W |
| R535 | 1-249-417-11 | CARBON | 1K 5% 1/4W | R601 Δ | 1-260-132-11 | CARBON | 560K 5% 1/2W |
| R536 | 1-249-427-11 | CARBON | 6.8K 5% 1/4W | R602 | 1-216-341-11 | METAL OXIDE | 0.22 5% 1W F |
| R537 | 1-249-417-11 | CARBON | 1K 5% 1/4W | R605 | 1-208-287-91 | METAL OXIDE | 30K 5% 1W F |
| R538 | 1-249-425-11 | CARBON | 4.7K 5% 1/4W | R609 | 1-249-422-11 | CARBON | 2.7K 5% 1/4W |
| R539 | 1-249-429-11 | CARBON | 10K 5% 1/4W | R610 | 1-249-393-11 | CARBON | 10 5% 1/4W |
| R540 | 1-260-129-11 | CARBON | 330K 5% 1/2W | R611 | 1-249-396-11 | CARBON | 18 5% 1/4W |
| R543 | 1-216-429-00 | METAL OXIDE | 270 5% 1W F | R612 | 1-240-899-11 | METAL | 5.49K 1% 1/4W |
| R544 | 1-260-123-11 | CARBON | 100K 5% 1/2W | R614 | 1-216-361-00 | METAL OXIDE | 0.22 5% 2W F |
| R545 | 1-260-123-11 | CARBON | 100K 5% 1/2W | R615 | 1-249-417-11 | CARBON | 1K 5% 1/4W |
| R546 | 1-260-123-11 | CARBON | 100K 5% 1/2W | R616 | 1-247-850-91 | CARBON | 6.2K 5% 1/4W |
| R547 | 1-249-425-11 | CARBON | 4.7K 5% 1/4W | R618 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R548 | 1-249-425-11 | CARBON | 4.7K 5% 1/4W | R619 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R549 | 1-249-429-11 | CARBON | 10K 5% 1/4W | R620 | 1-249-417-11 | CARBON | 1K 5% 1/4W |
| R550 | 1-249-429-11 | CARBON | 10K 5% 1/4W | R621 | 1-247-815-91 | CARBON | 220 5% 1/4W |
| R551 | 1-249-437-11 | CARBON | 47K 5% 1/4W | R622 | 1-247-815-91 | CARBON | 220 5% 1/4W |
| R552 | 1-240-889-11 | METAL | 100 1% 1/4W | R623 | 1-247-807-31 | CARBON | 100 5% 1/4W |
| R553 | 1-249-429-11 | CARBON | 10K 5% 1/4W | R624 | 1-247-854-11 | CARBON | 9.1K 5% 1/4W |
| R554 | 1-249-425-11 | CARBON | 4.7K 5% 1/4W | R625 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R555 | 1-249-429-11 | CARBON | 10K 5% 1/4W | R626 | 1-249-431-11 | CARBON | 15K 5% 1/4W |
| R556 | 1-249-441-11 | CARBON | 100K 5% 1/4W | R627 | 1-240-896-11 | METAL | 3.74K 1% 1/4W |
| R557 | 1-215-880-00 | METAL OXIDE | 10 5% 2W F | R628 | 1-247-802-11 | CARBON | 62 5% 1/4W |
| R558 | 1-249-441-11 | CARBON | 100K 5% 1/4W | R629 | 1-249-417-11 | CARBON | 1K 5% 1/4W |
| R559 | 1-249-425-11 | CARBON | 4.7K 5% 1/4W | R630 | 1-249-425-11 | CARBON | 4.7K 5% 1/4W |
| R560 | 1-249-429-11 | CARBON | 10K 5% 1/4W | R640 | 1-249-441-11 | CARBON | 100K 5% 1/4W |
| R561 | 1-249-393-11 | CARBON | 10 5% 1/4W | R641 | 1-249-413-11 | CARBON | 470 5% 1/4W |
| R562 | 1-247-791-91 | CARBON | 22 5% 1/4W | R642 | 1-247-815-91 | CARBON | 220 5% 1/4W |
| R563 | 1-249-441-11 | CARBON | 100K 5% 1/4W | R643 | 1-240-908-11 | METAL | 88.7K 1% 1/4W |
| R565 | 1-249-417-11 | CARBON | 1K 5% 1/4W | R644 | 1-240-895-11 | METAL | 3.01K 1% 1/4W |
| R566 | 1-247-903-00 | CARBON | 1M 5% 1/4W | R650 | 1-260-089-91 | CARBON | 150 5% 1/2W |
| R567 | 1-249-429-11 | CARBON | 10K 5% 1/4W | R651 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R568 | 1-249-421-11 | CARBON | 2.2K 5% 1/4W | R652 | 1-249-417-11 | CARBON | 1K 5% 1/4W |
| R569 | METAL | 2.2M | 1/2W | R653 | 1-215-888-00 | METAL OXIDE | 220 5% 2W F |
| R570 | 1-215-910-81 | METAL OXIDE | 68 5% 3W | R656 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R571 | 1-249-429-11 | CARBON | 10K 5% 1/4W | R658 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R572 | 1-249-393-11 | CARBON | 10 5% 1/4W | R664 | 1-219-154-11 | FUSIBLE | 0.12 10% 1/4W |
| R573 | 1-247-894-11 | CARBON | 430K 5% 1/4W | R665 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R574 | 1-247-894-11 | CARBON | 430K 5% 1/4W | R666 | 1-249-415-11 | CARBON | 680 5% 1/4W |
| R575 | 1-240-884-11 | CARBON | 3.3K 5% 1/4W | R667 | 1-260-121-11 | CARBON | 68K 5% 1/2W |
| R576 | 1-215-888-00 | METAL OXIDE | 220 5% 2W F | R901 | 1-249-417-11 | CARBON | 1K 5% 1/4W |
| R577 | 1-247-802-11 | CARBON | 62 5% 1/4W | R906 | 1-247-807-31 | CARBON | 100 5% 1/4W |
| R578 | 1-215-490-00 | CARBON | 750K 5% 1/4W | R907 | 1-249-417-11 | CARBON | 1K 5% 1/4W |
| R579 | 1-260-079-11 | CARBON | 22 5% 1/2W | R908 | 1-249-417-11 | CARBON | 1K 5% 1/4W |
| R580 | 1-247-807-31 | CARBON | 100 5% 1/4W | R910 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R581 | 1-215-910-81 | METAL OXIDE | 68 5% 3W | R911 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R582 | 1-249-418-11 | CARBON | 1.2K 5% 1/4W | R914 | 1-240-902-11 | METAL | 10K 1% 1/4W |
| R583 | 1-240-887-11 | METAL OXIDE | 1.5 5% 3W | R915 | 1-240-898-11 | METAL | 5.11K 1% 1/4W |
| R587 | 1-249-389-11 | CARBON | 4.7 5% 1/4W | R917 | 1-240-890-11 | METAL | 1K 1% 1/4W |
| R588 | 1-249-426-11 | CARBON | 5.6K 5% 1/4W | R918 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R589 | 1-249-426-11 | CARBON | 5.6K 5% 1/4W | R919 | 1-247-807-31 | CARBON | 100 5% 1/4W |
| R590 | 1-249-426-11 | CARBON | 5.6K 5% 1/4W | R923 | 1-247-791-91 | CARBON | 22 5% 1/4W |
| R592 | 1-249-438-11 | CARBON | 56K 5% 1/4W | R924 | 1-247-791-91 | CARBON | 22 5% 1/4W |
| R593 | 1-249-417-11 | CARBON | 1K 5% 1/4W | | | | |

CPD-110GS/110EST



The components identified by **D** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifiés par une marque **D** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by mark **△** are critical for safety. Replace only with part number specified.

| REF.NO. | PART NO. | DESCRIPTION | REMARK | REF.NO. | PART NO. | DESCRIPTION | REMARK |
|---------|--------------|-------------|--------|---------|----------|---|--------|
| R925 | 1-247-791-91 | CARBON | 22 | 5% | 1/4W | <NETWORK RESISTOR> | |
| R926 | 1-247-791-91 | CARBON | 22 | 5% | 1/4W | | |
| R927 | 1-247-903-00 | CARBON | 1M | 5% | 1/4W | RN901 1-234-276-11 RES, NETWORKS | |
| R928 | 1-249-429-11 | CARBON | 10K | 5% | 1/4W | RN902 1-234-277-11 RES, NETWORKS | |
| R929 | 1-249-429-11 | CARBON | 10K | 5% | 1/4W | | |
| R930 | 1-249-429-11 | CARBON | 10K | 5% | 1/4W | <VARIABLE RESISTOR> | |
| R931 | 1-249-413-11 | CARBON | 470 | 5% | 1/4W | | |
| R932 | 1-249-413-11 | CARBON | 470 | 5% | 1/4W | RV501△1-241-767-21 RES, ADJ, CERMET 100K (HV ADJ) | |
| R933 | 1-249-425-11 | CARBON | 4.7K | 5% | 1/4W | | |
| R934 | 1-249-425-11 | CARBON | 4.7K | 5% | 1/4W | <RELAY> | |
| R935 | 1-249-408-11 | CARBON | 180 | 5% | 1/4W | | |
| R936 | 1-249-408-11 | CARBON | 180 | 5% | 1/4W | RY601△1-755-031-11 RELAY | |
| R949 | 1-249-429-11 | CARBON | 10K | 5% | 1/4W | | |
| R950 | 1-249-429-11 | CARBON | 10K | 5% | 1/4W | <SWITCH> | |
| R951 | 1-249-429-11 | CARBON | 10K | 5% | 1/4W | S601 △ 1-771-668-11 SWITCH, AC POWER PUSH | |
| R954 | 1-247-791-91 | CARBON | 22 | 5% | 1/4W | S901 1-771-670-11 SWITCH, TACTILE (MENU/ENTER) | |
| R955 | 1-249-425-11 | CARBON | 4.7K | 5% | 1/4W | S902 1-771-670-11 SWITCH, TACTILE (RIGHT +) | |
| R956 | 1-249-417-11 | CARBON | 1K | 5% | 1/4W | S903 1-771-670-11 SWITCH, TACTILE (LEFT -) | |
| R959 | 1-247-791-91 | CARBON | 22 | 5% | 1/4W | | |
| R960 | 1-247-791-91 | CARBON | 22 | 5% | 1/4W | <SPARK GAP> | |
| R961 | 1-240-890-11 | METAL | 1K | 1% | 1/4W | | |
| R962 | 1-247-791-91 | CARBON | 22 | 5% | 1/4W | SG501 1-519-422-11 GAP, SPARK | |
| R963 | 1-249-429-11 | CARBON | 10K | 5% | 1/4W | | |
| R964 | 1-247-791-91 | CARBON | 22 | 5% | 1/4W | <TRANSFORMER> | |
| R965 | 1-249-429-11 | CARBON | 10K | 5% | 1/4W | T501 △ 1-453-301-11 TRANSFORMER, FLYBACK | |
| R967 | 1-249-428-11 | CARBON | 8.2K | 5% | 1/4W | T502 1-431-248-11 TRANSFORMER, FERRITE (HDT) | |
| R968 | 1-249-425-11 | CARBON | 4.7K | 5% | 1/4W | T503 1-433-799-11 TRANSFORMER, FERRITE (HST) | |
| R969 | 1-249-417-11 | CARBON | 1K | 5% | 1/4W | T504 1-429-109-11 TRANSFORMER, FERRITE (DFT) | |
| R970 | 1-249-425-11 | CARBON | 4.7K | 5% | 1/4W | T601 | |
| R971 | 1-240-892-11 | METAL | 1.4K | 1% | 1/4W | | |
| R972 | 1-249-425-11 | CARBON | 4.7K | 5% | 1/4W | T603 △ 1-433-796-11 TRANSFORMER | |
| R973 | 1-249-417-11 | CARBON | 1K | 5% | 1/4W | | |
| R974 | 1-240-888-11 | METAL | 33.2 | 1% | 1/4W | <THERMISTOR> | |
| R975 | 1-240-907-11 | METAL | 30.1K | 1% | 1/4W | TH601△1-803-533-11 THERMISTOR | |
| R976 | 1-240-901-11 | METAL | 9.31K | 1% | 1/4W | * 1-506-371-00 PIN, CONNECTOR 2P; TH601 | |
| R977 | 1-240-903-11 | METAL | 13.3K | 1% | 1/4W | TH602△1-809-827-11 THERMISTOR, POSITIVE | |
| R978 | 1-249-441-11 | CARBON | 100K | 5% | 1/4W | | |
| R979 | 1-249-441-11 | CARBON | 100K | 5% | 1/4W | <CRYSTAL> | |
| | | | | | | X901 1-781-365-11 VIBRATOR, CRYSTAL | |