



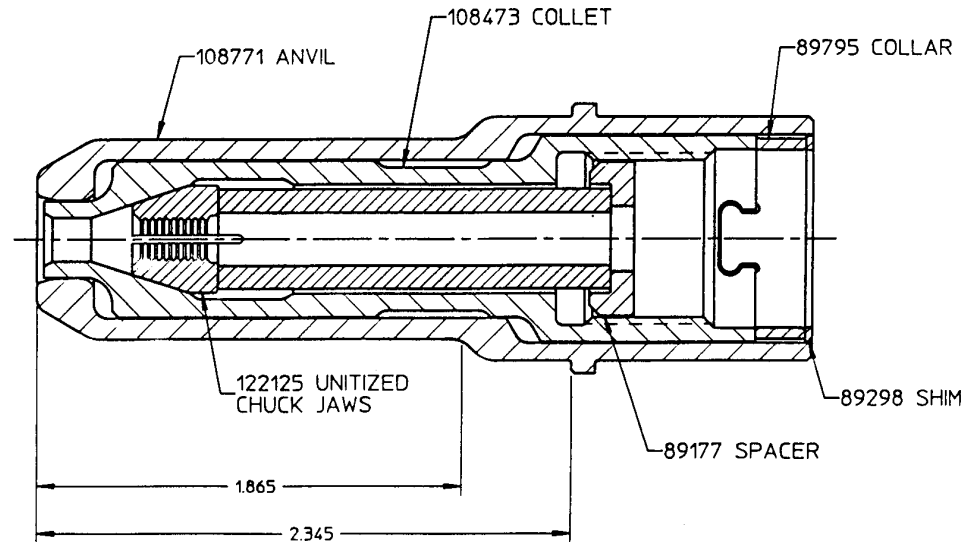

**Huck  
Fasteners**

From Cordant Technologies

# NOSE ASSEMBLY DATA SHEET

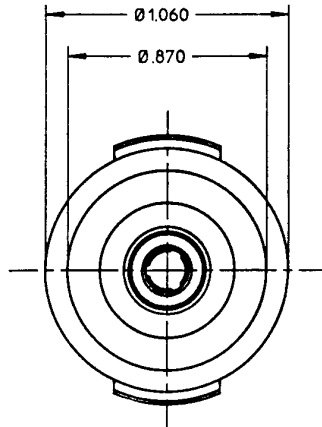

©Huck International, Inc. 1995  
 ©Registered Trademark of Huck International, Inc., Irvine, CA  
 ™Trademark of Huck International, Inc., Irvine, CA

<b>99-830-1</b>	NOSE ASSEMBLY	<b>Huck International, Inc.</b> Installation System Division 1 Corporate Drive - Kingston, NY 12401	
		<b>TYPE:</b> Non Self-releasing <b>FOR:</b> BOM -08 Blind Fastener <b>TOOL:</b> 353**	
		<b>OTHER</b>	<b>ISSUED:</b> 10-89 <b>REVISED:</b> 10-91

\*\*225BE 226  
 245 246  
 2500 247  
 2502 4801  
 2503 4802  
 4803

**NOTES:**

1 SHIP WITH P/N 114431 PINTAIL TUBE.

## Nose Assembly Maintenance

1. Prepare tool per manual. Remove any loose shims from spindle/rod with small pick.

**WARNING: Before maintenance or adjustments, POWERIGO Hydraulic Unit must be disconnected from electrical or air supply; air operated tools must be disconnected from air supply. It not disconnected, severe personal injury and/or damage may result.**

**Caution:** Damage to 353 tool will result if tool is cycled without a Nose Assembly or the Stop Nut on tool (Stop Nut, P/N 84213, is shipped with each 353).

### 2. Tools that use hydraulic source:

Connect tools hoses and controls to unit. Reconnect power source. Depress trigger for 30 seconds. Disconnect controls and and **RETURN** hose. **Tool piston must be completely forward.** See **Caution** above.

**Tools that use air source:** Air supply should have filter - regulator - lubricator unit with regulator set at 90 psi (620 kPa). Disconnect air supply -- see **WARNING** and Caution above -- on 353 tool, install stop nut or nose assembly. Cycle tool a few times and disconnect from air supply with spindle/rod completely **forward**.

### 3. Disassembly/assembly as applicable:

Remove parts of N/assem. for inspection and maintenance. If applicable, pressed-in anvil is pressed out with drift and arbor press; press new anvil in squarely to prevent cracking. **When using extension, stake to tool's spindle/rod before assembling collet -see Fig. 1; use only one shim.** Use wrench to snug-up extension on spindle. Assemble parts as shown -- apply thin coat SUPER O-LUBE to O-rings and O D of sleeve and VIBRATITE to extension W/O lock collar. Use collet wrench to snug-up collet.

**4801:** Tool has holes in adapter-- rod through adapter and spindle/rod prevents piston from turning.

### 4. Tools with retaining nut and stop:

Slide anvil/holder over collet. Slide stop and retaining nut over holder/anvil -- tighten handtight.

**353 Tool:** Slide holder/anvil over collet until ear depresses half-moon retainer. Turn holder/anvil until locked by retainer -- remove shim if ears do not enter groove. On rotatable nose assemblies, hold key, 110237, in anvil slot -- as anvil is turned, retainer ears will enter groove .

5. **As applicable:** See **WARNING** -- connect controls and **RETURN** hose on hydraulic tool. Reconnect hydraulic unit or air tool/unit to power source. Install fasteners in test plate of correct thickness with proper size holes -inspect installed fasteners.

6. **Caution: To prevent damage -- after proper adjustment has been made, collet lock collar must be staked.** As applicable, see Fig. 1 and/or Fig. 2. For nose assemblies with sleeve and O-rings, jaw tension on fastener pintail is changed by adding or removing O-ring(s). Use collet wrench to snug-up. Loose lock collars or too many shims (see step 4, 353) may cause holder/anvil damage -- too few shims may cause jaw damage. Reuse lock collars until ineffective.

### Notes

1. To extend Jaw life: Disassemble N/A periodically; dean and inspect components -- use a pick to dean Jaw grooves. **Caution:** Wash parts in **mineral spirits or isopropyl alcohol only** -- dry O-rings and urethane jaw assemblies immediately after cleaning as prolonged contact with solvent causes swelling -- dry other parts.

2. Spare parts -- as required: Jaws, lock collars, press-in anvils, springs, O-rings and shims.

3. Tools/service items -- as required: Brushes NYLON bristle - 105805 (04, OS & 06), 105806 (08); collet wrenches - 502914 (9/16), 502920 (13/16); drifts - 83097 (.434 wide), 79524 (.6S4 wide); staking tool, 84122; adjustable wrench, 503044; Parkers SUPER O-LUBE (for O-rings if used); VIBRATITE, 505125 (on extension W/O lock collar).

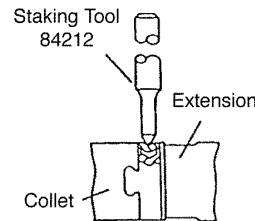


Figure 2

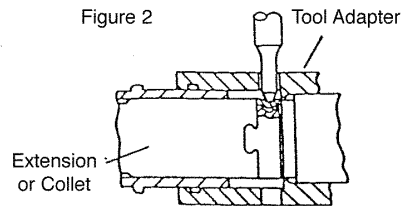


Figure 1

**CAUTION:** Cycling tool to retract spindle/piston rod when attaching anvil will cause damage to tool and/or nose assembly.

353/225BE/245/246/247/2500/4801  
W/lock collar; W/ears