
The freedom to do whatever you want, whenever you want


Communicate Make calls, send and receive e-mail, text messages and voicemail...

Have fun Check out TV, cinema, restaurants and bars. Download music files, or use your phone like a radio and just listen...

Shop Holidays, flights, CDs, books.

Find Access phone directories, news, weather reports, jobs...

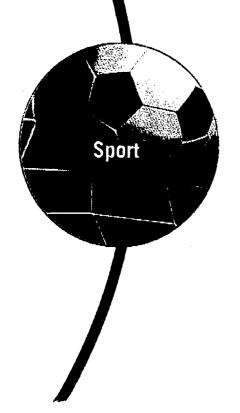


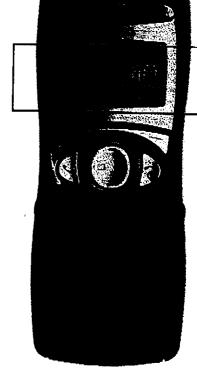

What can you do with the UK's first Internet phone service?

Today, you can access news, sport, finance, entertainment and much more. But it doesn't stop there. You can also access big online names like BBC News, eXcite, Lastminute.com, Unmissable TV and Guardian Unlimited. And we're adding more everyday.

Make the most of it. Get on the net now. Wherever you are.

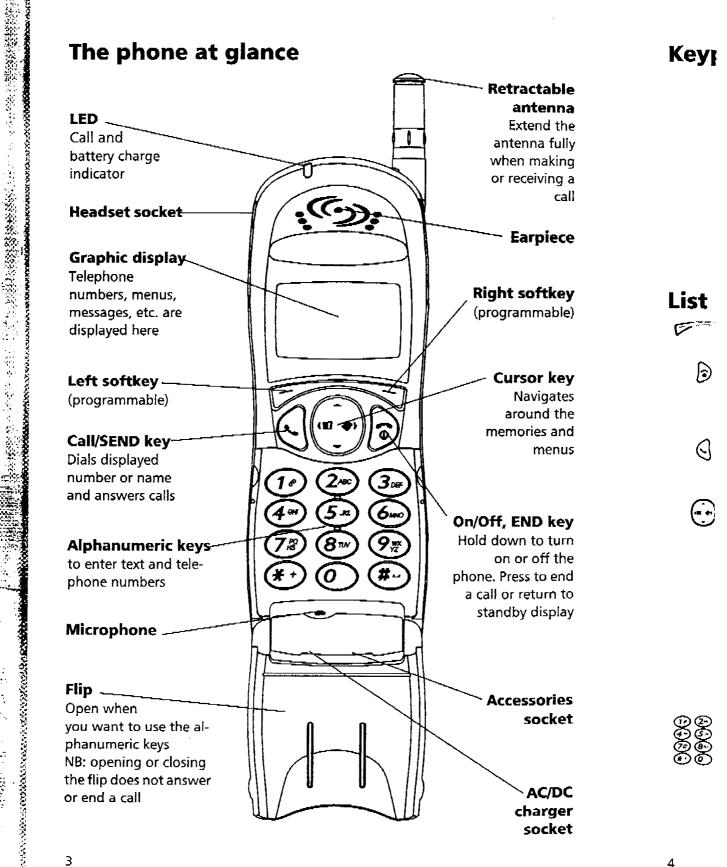

2.

3.

6.

Keypad layout



List of keys

Programmable softkeys or selection keys.

Perform the functions indicated by the text above it.

- End, On/Off key. Long press to turn the phone on or off.

 Press briefly to end or reject a call.

 Short press during a menu operation will exit to the standard.
 - Short press during a menu operation will exit to the standby display
- Send key. Press to make or answer a call.

 Press in standby display recalls last dialled numbers.

 Press during an internet connection to display the options menu.
- Cursor key.

Press to the left to view the phonebook entries or return to the previous display.

Press to the right to enter the main menu and/or select a feature from displayed list.

Short press upwards to scroll up the menus. Press to enter volume adjustment menu from the standby display.

Short press downwards to scroll down the menus. Press to enter alert mode setting from the standby display.

This key is also used in 'Edit Mode' to move the cursor through the displayed text.

- DE Alphanumeric keys, 0 9, *, #.
 - Enters numbers, characters and punctuation marks.
 - $\stackrel{\longleftarrow}{\mathbf{6}}$ \bigcirc , or press and hold down to call the voice mail number.
 - ② to ③ keys. Press and hold to speed dial preferred numbers.
 - *, or press and hold down to enter international + prefix, 'P' symbol or '_' underscore wildcard.
 - . Used with keypad lock softkey to lock/unlock the keypad