

FUJIFILM

DIGITAL CAMERA

FINEPIX JZ500/JZ510 Series

FINEPIX JZ300/JZ310 Series

User Guide

BB21302-100


ENGLISH

FRANÇAIS

ESPAÑOL

Restrictions

Worldwide Network

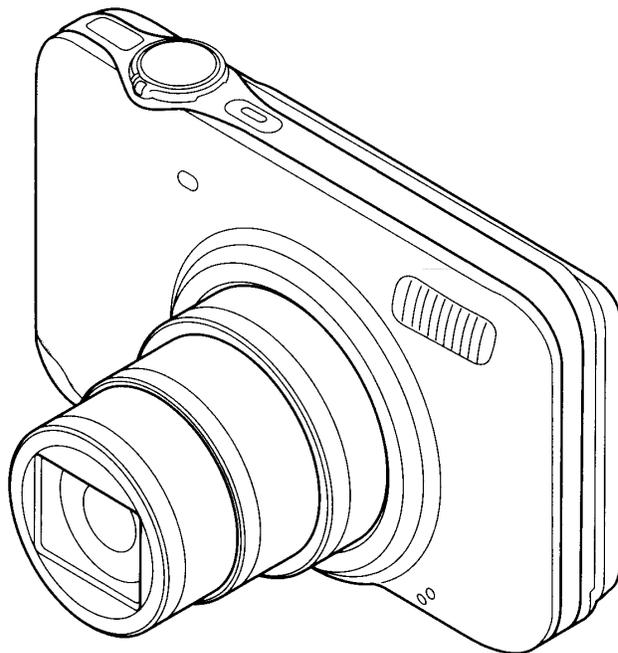

For information on related products, visit our website at
http://www.fujifilm.com/products/digital_cameras/index.html

User Guide takes you through the basic steps in using the camera for the first time.


For more information, see the supplied Owner's Manual (CD) or visit http://www.fujifilm.com/products/digital_cameras/index.html.

• Troubleshooting


Perform the following steps before any troubleshooting.

- 1 Turn the camera off, and remove the battery. After approx. one minute, insert the battery again, and turn the camera on.
- 2 Reset the camera setting (see page 78 of the supplied Owner's Manual (CD)).
- 3 Visit Fujifilm website (<http://www.fujifilm.com/>), and check support information.

Supplied Accessories

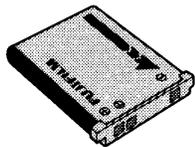


NP-45A rechargeable battery

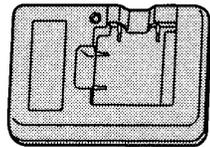

BC-45W battery charger



USB cable

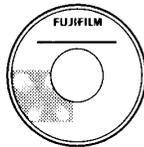


CD-ROM

- Strap
- Owner's Manual (may be distributed on CD in some countries or regions)
- User Guide (this document)

Charging the Battery

The battery is not charged at shipment. Charge the battery before use.


- 1 Place the battery in the charger. Insert the battery into the supplied battery charger as shown, making sure that the battery is in the orientation indicated by the $\oplus \downarrow \ominus$ labels.

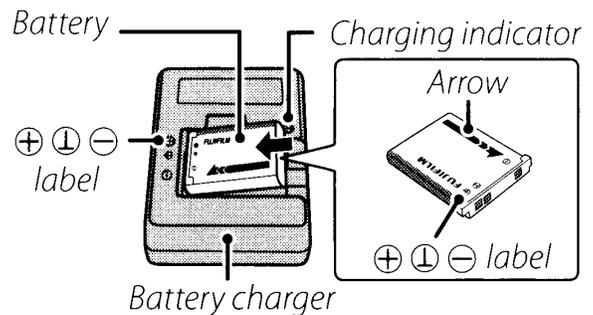

- 2 Plug the charger in. Plug the charger into a power outlet. The charging indicator will light.
- 3 Charge the battery. Remove the battery when charging is complete.

Inserting the Battery

- 1 Open the battery-chamber cover.

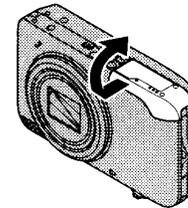


← Note


Be sure the camera is off before opening the battery-chamber cover.

2 Insert the battery.

Insert the battery with the terminals first and the orange stripe aligned with the orange battery latch. Slide the battery into the camera, keeping the battery latch pressed to one side as shown below. Confirm that the battery is securely latched.

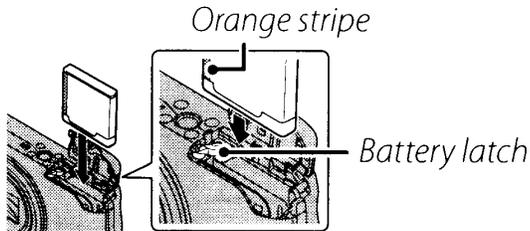


3 Close the battery-chamber cover.

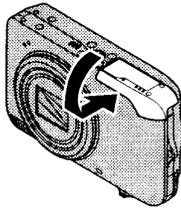


Inserting a Memory Card

1 Turn the camera off, and open the battery-chamber cover.

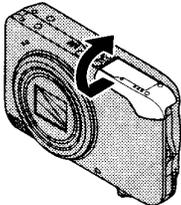

2 Insert the memory card firmly until you hear (feel) a click.


Holding the memory card in the orientation shown below, slide it all the way in.

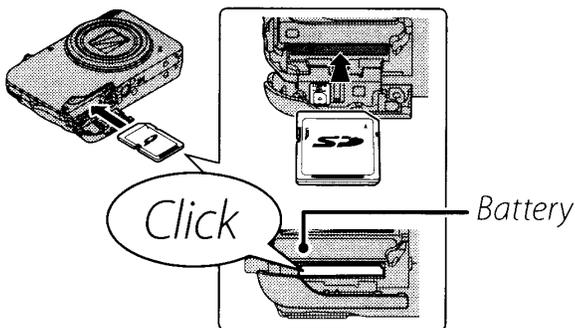

⚠ Caution


Be sure card is in correct orientation; do not insert at an angle or use force.

3 Close the battery-chamber cover.

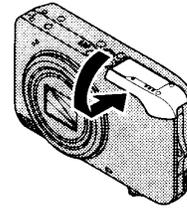

• Removing Memory Cards

After confirming that the camera is off, press the card in and then release it slowly. The card can now be removed by hand.

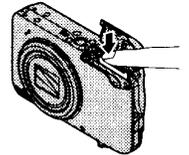


⚠ Caution

The memory card may spring out if you remove your finger immediately after pushing the card in.

Turning the Camera On and Off

Press the **ON/OFF** button to turn the camera on. The lens will extend and the lens cover will open.

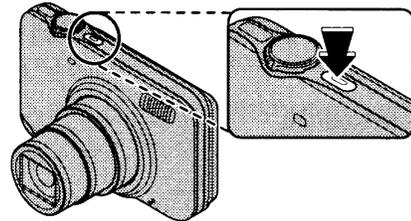

Press **ON/OFF** again to turn the camera off.

Basic Setup

A language-selection dialog is displayed the first time the camera is turned on. Set up the camera as described below.

1 Choose a language.




1.1 Press the selector up or down to highlight a language.



1.2 Press **MENU/OK**.



2 Set the date and time.

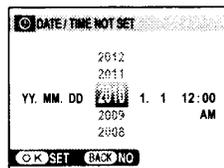

2.1 Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the selector up or down.



2.2 Press **MENU/OK**.



Taking Pictures in **SR**AUTO (SCENE RECOGNITION) Mode


1 Turn the camera on.

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.





2 Select **SR**AUTO mode.

Rotate the mode dial to **SR**AUTO.

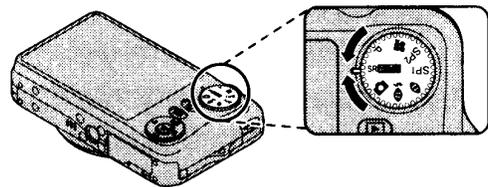

3 Frame a picture using the zoom control.

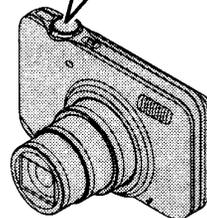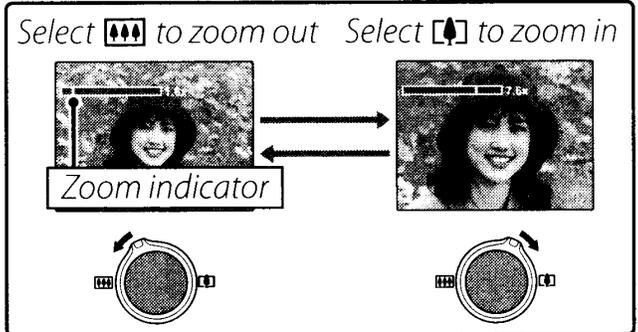


4 Focus.

Press the shutter button halfway to focus.

5 Shoot.


Smoothly press the shutter button the rest of the way down to take the picture.

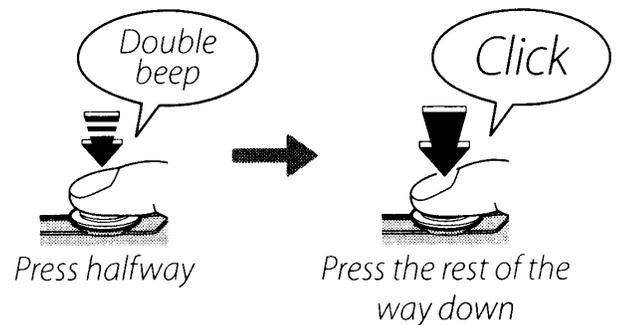

Viewing Pictures

Pictures can be viewed in the monitor. When taking important photographs, take a test shot and check the results.

1 Press the button.

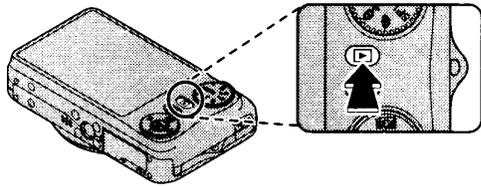

The most recent picture will be displayed in the monitor.



2 View additional pictures.

Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.





Press the shutter button to exit to shooting mode.

3 Zoom in on images.

Select  to zoom in on pictures displayed in single-frame playback; select  to zoom out.

When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.

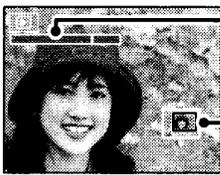 



Zoom indicator

Navigation window shows portion of image currently displayed in monitor

Press **DISP/BACK** to exit zoom.

Deleting Pictures

To delete the picture currently displayed in the monitor, press the selector up (). The following dialog will be displayed.

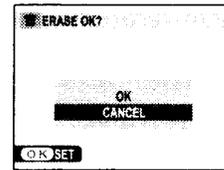 

To delete the picture, highlight **OK** and press **MENU/OK**. To exit without deleting the picture, highlight **CANCEL** and press **MENU/OK**.




Copying Pictures to a Computer

The supplied software can be used to copy pictures to a computer, where they can be stored, viewed, organized, and printed.

1 Start the computer. Insert the software CD into the CD-ROM drive.

The installer will start automatically.

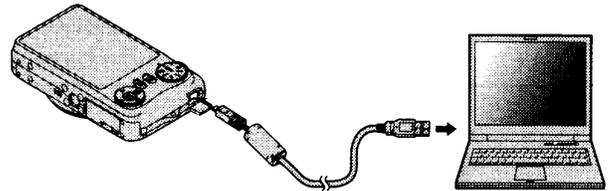

2 Click **Installing MyFinePix Studio/Installing FinePixViewer**.

Follow the on-screen instructions to install the software.

3 Turn the camera off, and connect the supplied USB cable as shown. Press the button for about a second to turn the camera on.

MyFinePix Studio or FinePixViewer will start automatically; follow the on-screen instructions to copy pictures to the computer. To exit without copying pictures, click **Cancel**.

SR AUTO SCENE RECOGNITION

Simply by pointing the camera to the subject, the camera automatically analyzes and selects the most appropriate setting using scene recognition.

The camera analyzes a subject based on scene recognition, then an icon appears in the bottom left of the monitor. (The illustration shows when the camera analyzed subject(s) in portrait.)



Subject	Icon	Description
PORTRAIT		For soft-toned portraits with natural skin tones.
LANDSCAPE		For crisp, clear daylight shots of buildings and landscapes.
NIGHT		For night and twilight scenes, using a high sensitivity setting to minimize blurring.
MACRO		For clear close-ups of flowers, etc.
BACKLIT PORTRAIT		For a subject backlit against the sun, preventing the background from becoming dim.
NIGHT PORTRAIT		For a subject in a dim place, reducing blur.


Tip

When a subject cannot be analyzed by the camera, **AUTO** mode will be set.

Recording Movies

Shoot short movies with sound. Sound is recorded via the built-in microphone; do not cover the microphone during recording.

- 1 Rotate the mode dial to (movie mode).

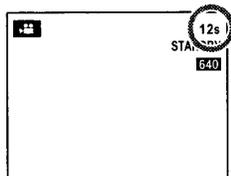


Display shows time available

Choosing the Frame Size



To choose the frame size, press **MENU/OK** and select **QUALITY**.

Choose a pixel size in the following:

- **HD 1280** (1280×720) for high definition movies
- **640** (640×480) for standard definition movies
- **320** (320×240) for longer movies

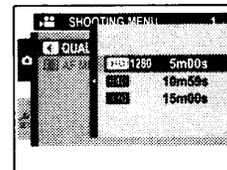


 - 2 Frame the scene using the zoom control.

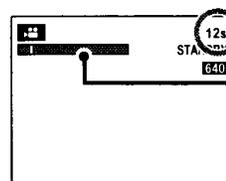

Zoom indicator

- 3 Press the shutter button all the way down to start recording.

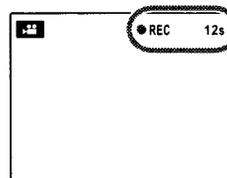

REC and time remaining are displayed

- 4 Press the shutter button halfway to end recording. Recording ends automatically when the movie reaches maximum length or memory is full.




Tip


There is no need to keep the shutter button pressed during recording.

Viewing Movies

During playback, movies are displayed in the monitor as shown at right.

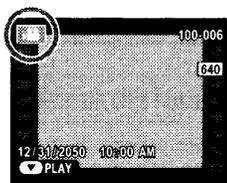

Press the selector down to start playback. Press again to pause.

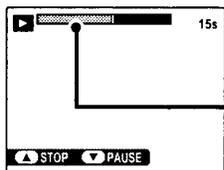

Progress bar

- Press the selector up to end playback.
- Press the selector right to advance, left to rewind.
- Press **MENU/OK** to pause playback and display volume controls. Press the selector up or down to adjust the volume; press **MENU/OK** again to resume playback.

Caution

Do not cover the speaker during playback.

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personal. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

For customers in the U.S.A.

*Tested To Comply
With FCC Standards
FOR HOME OR OFFICE USE*

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void the user's authority to operate the equipment.

Notes on the Grant:

To comply with Part 15 of the FCC Rules, this product must be used with a Fujifilm-specified ferrite-core A/V cable, USB cable, and DC supply cord.

For customers in Canada

CAUTION

This Class B digital apparatus complies with Canadian ICES-003.

Please read the Safety Notes and make sure you understand them before using the camera.

Perchlorate Material-special handling may apply, See <http://www.dtsc.ca.gov/hazardouswaste/perchlorate>.

Be sure to read this notes before using

Safety Notes

- Make sure that you use your camera correctly. Read these Safety Notes and your Owner's Manual carefully before use.
- After reading these Safety Notes, store them in a safe place.

About the Icons

- The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



WARNING

This icon indicates that death or serious injury can result if the information is ignored.



CAUTION

This icon indicates that personal injury or material damage can result if the information is ignored.

WARNING

If a problem arises, turn the camera off, remove the battery, disconnect and unplug the AC power adapter.

Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock.

- Contact your FUJIFILM dealer.

Do not allow water or foreign objects to enter the camera.

If water or foreign objects get inside the camera, turn the camera off, remove the battery and disconnect and unplug the AC power adapter.

Continued use of the camera can cause a fire or electric shock.

- Contact your FUJIFILM dealer.

Do not use the camera in the bathroom or shower.

This can cause a fire or electric shock.

Never attempt to change or take apart the camera. (Never open the casing.)

Do not use the camera when it has been dropped or the casing is damaged.

This can cause a fire or electric shock.

- Contact your FUJIFILM dealer.

Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord.

These actions could damage the cord and cause a fire or electric shock.

- If the cord is damaged, contact your FUJIFILM dealer.

Do not place the camera on an unstable surface.

This can cause the camera to fall or tip over and cause injury.

Never attempt to take pictures while in motion.

Do not use the camera while you are walking or driving a vehicle.

This can result in you falling down or being involved in a traffic accident.

Do not touch any metal parts of the camera during a thunderstorm.

This can cause an electric shock due to induced current from the lightning discharge.

Do not use the battery except as specified.

Load the battery as aligned with the indicator.

Do not heat, change or take apart the battery.

Do not drop or subject the battery to impacts.

Any of these actions can cause the battery to burst or leak and cause fire or injury as a result.

Use only the battery, the battery charger, or the AC power adapter specified for use with this camera.

Do not use voltages other than the power supply voltage shown.

The use of other power sources can cause a fire.

If the battery leaks and fluid gets in contact with your eyes, skin or clothing.

Flush the affected area with clean water and seek medical attention or call an emergency number right away.

When carrying the battery, install it in a digital camera or keep it in the hard case.

When storing the battery, keep it in the hard case.

When discarding, cover the battery terminals with insulation tape.

Contact with other metallic objects or battery could cause the battery to ignite or burst.

WARNING

Keep Memory Cards out of the reach of small children.

Because Memory Cards are small, they can be swallowed by children. Be sure to store Memory Cards out of the reach of small children. If a child swallows a Memory Card, seek medical attention or call an emergency number.

CAUTION

Do not use this camera in locations affected by oil fumes, steam, humidity or dust.

This can cause a fire or electric shock.

Do not leave this camera in places subject to extremely high temperatures.

Do not leave the camera in locations such as a sealed vehicle or in direct sunlight.

This can cause a fire.

Keep out of the reach of small children.

This product could cause injury in the hands of a child.

Do not place heavy objects on the camera.

This can cause the heavy object to tip over or fall and cause injury.

Do not move the camera while the AC power adapter is still connected.

Do not pull on the connection cord to disconnect the AC power adapter.

This can damage the power cord or cables and cause a fire or electric shock.

Do not use the AC power adapter when the plug is damaged or the plug socket connection is loose.

This could cause a fire or electric shock.

Do not cover or wrap the camera or the AC power adapter in a cloth or blanket.

This can cause heat to build up and distort the casing or cause a fire.

When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter.

Failure to do so can cause a fire or electric shock.

When charging ends, unplug the charger from the power socket.

Leaving the charger plugged into the power socket can cause a fire.

Using a flash too close to a person's eyes may temporarily affect the eyesight.

Take particular care when photographing infants and young children.

Request regular internal testing and cleaning for your camera.

Build-up of dust in your camera can cause a fire or electric shock.

- Contact your FUJIFILM dealer to request internal cleaning every 2 years.

- Please note this is not a free of charge service.

Power Supply and Battery

* Confirm your battery type before reading the following descriptions.

The following explains proper use of batteries and how to prolong their life. Incorrect use of batteries can cause shorter battery life, as well as leakage, excessive heat, fire or explosion.

1 Camera uses the Rechargeable Lithium-ion Battery

* When shipped, the battery is not fully charged. Always charge the battery before using it.

* When carrying the battery, install it in a digital camera or keep it in the soft case.

■ Notes on storage

- If a battery is stored for long periods while charged, the performance of the battery can be impaired. If the battery will not be used for some time, run the battery out before storing it.
- If you do not intend to use the camera for a long period of time, remove the battery from the camera.
- Store the battery in a cool place.
 - The battery should be stored in a dry location with an ambient temperature between +15°C and +25°C (+59°F and +77°F).
 - Do not leave the battery in hot or extremely cold places.

■ Handling the Battery

Cautions for Your Safety:

- Do not recharge the battery with chargers other those specified.

- Dispose of used battery promptly.
- Do not expose the battery to water.
- Always keep the battery terminals clean.
- Do not store batteries in hot places. Also, if you use the battery for a long period, the camera body and the battery itself will become warm. This is normal. Use the AC power adapter if you are taking pictures or viewing images for a long period of time.

2 Camera uses AA-size alkaline or Ni-MH (nickelmetal hydride) rechargeable batteries

* For details on the batteries that you can use, refer to the OWNER'S MANUAL of your camera.

■ Cautions for Using Battery

- Do not expose the batteries to water, and keep batteries from getting wet or stored in moist locations.
- Do not use batteries that are leaking, deformed, discolored.
- Do not store batteries in warm or humid places.
- Do not use new with used batteries. Do not use charged and discharged batteries together.
- Do not use different types or brands of batteries at the same time.
- If you do not intend to use the camera for a long period of time, remove the batteries from the camera. Note if the camera is left with the batteries removed, the time and date settings are cleared.
- The batteries feel warm right after being used. Before removing the batteries, turn the camera off and wait for the batteries to cool down.
- Since batteries do not work well in cold weather or locations, warm the batteries by placing them inside your garments before use. Batteries do not work well when cold. They will work again when the temperature returns to normal.
- Soil (such as fingerprints) on the battery terminals makes the batteries charge less reducing the number of images. Carefully wipe the battery terminals with a soft dry cloth before loading.



If any liquid at all leaks from the batteries, wipe the battery compartment thoroughly and then load new batteries.

■ Disposing of Batteries

- When disposing of batteries, do so in accordance with your local waste disposal regulations.

3 Notes on both models (1, 2)



Do not carry or store battery with metal objects such as necklaces or hairpins.



Do not heat the battery or throw it into a fire.

■ EC Declaration of Conformity

We

Name: FUJIFILM Electronic Imaging Europe GmbH
Address: Benzstrasse 2
 47533 Kleve, Germany

declare that the product

Product Name: FUJIFILM DIGITAL CAMERA FinePix JZ500/JZ510 Series,
 JZ300/JZ310 Series

Manufacturer's Name: FUJIFILM Corporation

Manufacturer's Address: 7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO, 107-0052 JAPAN

conforms to the following Standards:

Safety: EN60065: 2002 + A1: 2006
EMC: EN55022: 2006 Class B
 EN55024: 1998 + A1: 2001 + A2: 2003
 EN61000-3-2: 2006
 EN61000-3-3: 1995 + A1: 2001 + A2: 2005

following the provision of the EMC Directive (2004/108/EC) and Low Voltage Directive (2006/95/EC).



Kleve, Germany January 1, 2010

Place

Date

Signature, Managing Director

■ Disposal of Electrical and Electronic Equipment in Private Households

Disposal of used Electrical & Electronic Equipment (Applicable in the European Union, Norway, Iceland and Liechtenstein)



This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste. Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



This symbol on the batteries or accumulators indicates that those batteries shall not be treated as Household waste.

If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

In Countries Outside the European Union, Norway, Iceland and Liechtenstein:

If you wish to discard this product including the batteries or accumulators, please contact your local authorities and ask for the correct way of disposal.

■ AC Power Adapter

For details on the AC power adapter, refer to the OWNER'S MANUAL of your camera.

- Use the AC power adapter for indoor use only.
- Plug the connection cord plug securely into the DC input terminal.
- Turn off the FUJIFILM Digital camera before disconnecting the cord from the DC input terminal. To disconnect, pull out the plug gently. Do not pull on the cord.
- Do not use the AC power adapter with any device other than your camera.
- During use, the AC power adapter will become hot to the touch. This is normal.
- Do not take apart the AC power adapter. Doing so could be dangerous.
- Do not use the AC power adapter in a hot and humid place.
- Do not subject the AC power adapter to strong shocks.
- The AC power adapter may emit a humming. This is normal.
- If used near a radio, the AC power adapter may cause static. If this happens, move the camera away from the radio.

Liquid Crystal

If the LCD monitor is damaged, take particular care with the liquid crystal in the monitor. If any of the following situations arise, take the urgent action indicated.

- If liquid crystal comes in contact with your skin:
Wipe the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal gets into your eye:
Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed:
Flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical assistance.

Restrictions on Camera Settings

* Some restrictions shown below may vary depending on the shooting conditions.

Selectable options for  vary depending on the model you purchased.

✓ : Available

Option	Shooting mode																				
	SR AUTO		P			SP1/SP2															
																					
 Macro mode		✓	✓	✓	✓				✓	✓								✓	✓		
 Flash	AUTO	✓	✓	✓		✓	✓		✓	✓	✓					✓	✓	✓ ¹		✓	
		✓	✓	✓	✓ ¹	✓	✓		✓	✓	✓				✓	✓	✓			✓	
		✓	✓	✓		✓ ¹	✓	✓	✓ ¹	✓	✓	✓	✓	✓ ¹	✓	✓	✓		✓ ¹	✓	
	S 			✓		✓	✓					✓	✓								
	 AUTO	✓	✓	✓		✓	✓									✓	✓	✓ ¹			
		✓	✓	✓	✓ ¹	✓	✓								✓	✓	✓				
	 SLOW			✓		✓	✓					✓	✓								
 Self-timer	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
 Exposure compensation			✓																		
 Intelligent Face Detection	OFF		✓	✓	✓	✓		✓			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
	ON	✓	✓	✓	✓	✓	✓		✓	✓		✓	✓		✓	✓	✓	✓			
 FACE RECOGNITION ⁵	✓	✓	✓	✓	✓	✓					✓	✓		✓	✓	✓	✓				
 RED EYE REMOVAL	✓	✓	✓	✓		✓	✓				✓	✓		✓	✓	✓	✓				
 IMAGE SIZE	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
 QUALITY																				✓	
ISO ISO	AUTO	✓	✓ ¹	✓	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	✓ ¹	
	3200 ²			✓																	
	1600			✓																	
	800			✓																	
	400			✓																	
	200			✓																	
	100			✓																	
 WHITE BALANCE			✓																		
 CONTINUOUS	✓	✓	✓		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
 DUAL IS MODE	✓ ³	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ⁵	✓ ⁴	✓	✓	✓	✓	✓	✓	✓	

1 Automatically optimized for selected shooting mode.

2 Image sizes over  are set to .

3 ON only.

4 OFF only.

5 JZ500/JZ510 Series only.

FUJIFILM Digital Camera Worldwide Network

Contact your local distributor (see list below) for repairs and technical support. Please present the warranty and purchase receipt when requesting repairs; refer to the warranty card for the conditions of the warranty. Technical support may not be available for models not handled by the local distributor. The following information is subject to change without notice.

TS: Technical support, RS: Repair service, TSR: Technical support and repairs

NORTH AMERICA

Canada	FUJIFILM North America Corporation	TS	TEL 1-866-818-FUJI (3854)	http://www.fujihelp.ca
		RS	TEL 1-800-263-5018	http://www.fujihelp.ca
U.S.A.	FUJIFILM North America Corporation	TS	TEL 800-800-3854	digitalinfo@fujifilm.com
		RS	TEL 800-659-3854	

CENTRAL AND SOUTH AMERICA

Argentina	Imagen e informacion S.A.	TSR	TEL 54-11-4737-1030	servtec@imagineinformacion.com.ar
Bolivia	Reifschneider Bolivia Ltda.	TSR	TEL +591 33 44 1129	gciagral@bibosi.scz.entelnet.bo
Brazil	FUJIFILM do Brasil Ltda.	TSR	TEL 0800-12-8600	camarasdigitais@fujifilm.com.br
Chile	Reifschneider SA	TSR	TEL 56-2-6781200	serviciotecnico@reifschneider.cl
Colombia	Animex de Colombia Ltda.	TSR	TEL +57 1 338-0299	animex@etb.net.co
Ecuador	Espacri Cia Ltda Importaciones Espacri Cia. Ltda.	TSR	TEL 593-72-835526	
		TSR	TEL +593 783 5526	portiz@fujifilm.com.ec
Mexico	Fujifilm de Mexico, S.A. de C.V.	TS	TEL (52-55) 5263-55000	eizquierdo@fujifilm.com.mx
		RS	TEL (52-55) 5366-5150/56/57	cpalma@fujifilm.com.mx
Paraguay	Errece S.R.L.	TSR	TEL +595 21 444256	jmarbulo@fujifilm.com.py
Peru	Procesos de Color S.A.	TSR	TEL +51 14 33 5563	jalvarado@fujifilm.com.pe
Uruguay	Fotocamara S.R.L. Kiel S.A.	TSR	TEL +598-2-9002004	fotocam@adinet.com.uy
		TSR	TEL (05982) 419 4542	kiel@fujifilm.com.uy
Venezuela	C. Hellmund & Cia Sa	TSR	TEL 0212-2022300	hellmund@hellmund.com

EUROPE

Austria	FUJIFILM Recording Media AUSTRIA	TSR	TEL 00800 38543854	service@fujifilm-digital.com
Belgium	Belgian Fuji Agency	TSR	TEL 3210242090	info@fuji.be
Croatia	I&I d.o.o. FOTOTEH d.o.o.	TS	TEL +385 1 233 26 53	tkrsnik@fujifilm.hr
		RS	TEL +385 1 619 66 08	info@fototeh.hr
Cyprus	PMS IMAGING LTD	TSR	TEL 35722746746	info@fujifilm.com.cy
		TSR	TEL 35722314719	dorosn@logosnet.cy.net
Czech Republic	Fujifilm Cz., s.r.o. AWH servis	TS	TEL 00420 234 703 431	petr.barta@fujifilm.cz
		RS	TEL 00420 222 721 525	awh@awh.cz
Denmark	Fujifilm Danmark A/S	TSR	TEL 0045 45662244	fujifilm@fujifilm.dk
Finland	Neoport Ltd	TS	TEL +358 (0)50 4343 500	info@neoport.fi
			http://www.fujifilm-digital.fi	
		RS	TEL +358 (0)50 4343 500	huolto@neoport.fi
			http://www.fujifilm-digital.fi	
France	FUJIFILM France	TSR	TEL +33 1 30 68 67 66	pm2s@pm2s.fr

FUJIFILM
FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN
<http://www.fujifilm.com/>


DIGITAL CAMERA

FINEPIX JZ500/JZ510 Series

FINEPIX JZ300/JZ310 Series

Owner's Manual

Thank you for your purchase of this product. This manual describes how to use your FUJIFILM FinePix JZ500/JZ510 series, FinePix JZ300/JZ310 series digital camera and the supplied software. Be sure that you have read and understood its contents before using the camera.

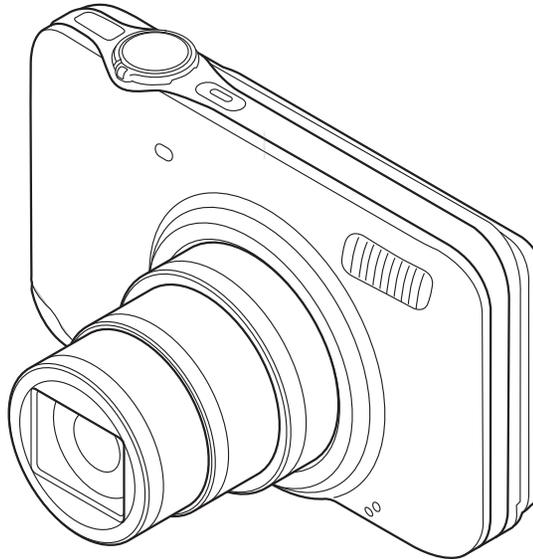

For information on related products, visit our website at http://www.fujifilm.com/products/digital_cameras/index.html



Before You Begin

First Steps

Basic Photography and Playback

More on Photography

More on Playback

Movies

Connections

Menus

Technical Notes

Troubleshooting

Appendix

Notes and Cautions

IMPORTANT SAFETY INSTRUCTIONS

- **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
- **Retain Instructions:** The safety and operating instructions should be retained for future reference.
- **Heed Warnings:** All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow Instructions:** All operating and use instructions should be followed.

Installation

Power Sources: This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization: This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace

your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternate Warnings: This video product is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

Overloading: Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Ventilation: Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the

manufacturer's instructions have been adhered to. This video product should never be placed near or over a radiator or heat register.

Attachments: Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

Water and Moisture: Do not use this video product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

Power-Cord Protection: Power-Supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

Accessories: Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting

of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.




Antennas

Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

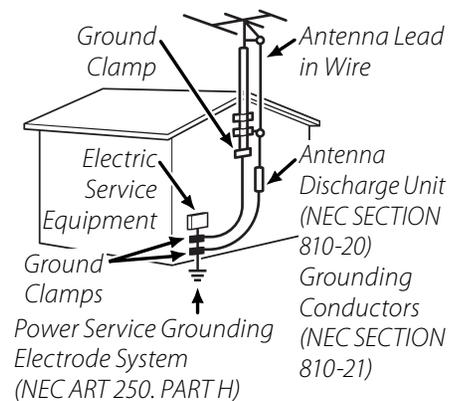

Use

Cleaning: Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Object and Liquid Entry: Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or shortout parts that could result in a fire or electric shock.

Never spill liquid of any kind on the video product.

Lightning: For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

Service

Servicing: Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Damage Requiring Service: Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.
- If the video product does not operate normally by following the operating instructions. Adjust only

those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performance - this indicates a need for service.

Replacement Parts: When

replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Safety Check: Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

Be sure to read this notes before using

Safety Notes

- Make sure that you use your camera correctly. Read these Safety Notes and your Owner's Manual carefully before use.
- After reading these Safety Notes, store them in a safe place.

About the Icons

- The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



WARNING

This icon indicates that death or serious injury can result if the information is ignored.



CAUTION

This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the information which is to be observed.



Triangular icons tell you that this information requires attention ("important").



Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").



Filled circles with an exclamation mark tell you an action that must be performed ("Required").

WARNING



Unplug from power socket.

If a problem arises, turn the camera off, remove the battery, disconnect and unplug the AC power adapter.

Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock.

- Contact your FUJIFILM dealer.



Do not allow water or foreign objects to enter the camera.

If water or foreign objects get inside the camera, turn the camera off, remove the battery and disconnect and unplug the AC power adapter. Continued use of the camera can cause a fire or electric shock.

- Contact your FUJIFILM dealer.



Do not use in the bathroom or shower.

Do not use the camera in the bathroom or shower.

This can cause a fire or electric shock.



Do not disassemble.

Never attempt to change or take apart the camera. (Never open the casing.) Do not use the camera when it has been dropped or the casing is damaged.

This can cause a fire or electric shock.

- Contact your FUJIFILM dealer.



Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord.

These actions could damage the cord and cause a fire or electric shock.

- If the cord is damaged, contact your FUJIFILM dealer.



Do not place the camera on an unstable surface.

This can cause the camera to fall or tip over and cause injury.



Never attempt to take pictures while in motion.

Do not use the camera while you are walking or driving a vehicle. This can result in you falling down or being involved in a traffic accident.



Do not touch any metal parts of the camera during a thunderstorm.

This can cause an electric shock due to induced current from the lightning discharge.



Do not use the battery except as specified.

Load the battery as aligned with the indicator.

! WARNING

Do not heat, change or take apart the battery. Do not drop or subject the battery to impacts. Do not store the battery with metallic products. Do not use chargers other than the specified model to charge the battery.

Any of these actions can cause the battery to burst or leak and cause fire or injury as a result.



Use only the battery or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown.

The use of other power sources can cause a fire.



If the battery leaks and fluid gets in contact with your eyes, skin or clothing. Flush the affected area with clean water and seek medical attention or call an emergency number right away.



Do not use the charger to charge batteries other than those specified here.

The Ni-MH battery charger is designed for Fujifilm HR-AA Ni-MH batteries. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak fluid, overheat or burst.



When carrying the battery, install it in a digital camera or keep it in the hard case. When storing the battery, keep it in the hard case. When discarding, cover the battery terminals with insulation tape.

Contact with other metallic objects or battery could cause the battery to ignite or burst.



Keep Memory Cards out of the reach of small children.

Because Memory Cards are small, they can be swallowed by children. Be sure to store Memory Cards out of the reach of small children. If a child swallows a Memory Card, seek medical attention or call an emergency number.

! CAUTION

Do not use this camera in locations affected by oil fumes, steam, humidity or dust.

This can cause a fire or electric shock.



Do not leave this camera in places subject to extremely high temperatures.

Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.

! CAUTION

Keep out of the reach of small children.

This product could cause injury in the hands of a child.



Do not place heavy objects on the camera.

This can cause the heavy object to tip over or fall and cause injury.



Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter.

This can damage the power cord or cables and cause a fire or electric shock.



Do not use the AC power adapter when the plug is damaged or the plug socket connection is loose.

This could cause a fire or electric shock.



Do not cover or wrap the camera or the AC power adapter in a cloth or blanket.

This can cause heat to build up and distort the casing or cause a fire.



When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter.

Failure to do so can cause a fire or electric shock.



When charging ends, unplug the charger from the power socket.

Leaving the charger plugged into the power socket can cause a fire.



Using a flash too close to a person's eyes may temporarily affect the eyesight.

Take particular care when photographing infants and young children.



When an xD-Picture Card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card.



Request regular internal testing and cleaning for your camera.

Build-up of dust in your camera can cause a fire or electric shock.

- Contact your FUJIFILM dealer to request internal cleaning every 2 years.
- Please note this is not a free of charge service.

Power Supply and Battery

* Confirm your battery type before reading the following descriptions.

The following explains proper use of batteries and how to prolong their life. Incorrect use of batteries can cause shorter battery life, as well as leakage, excessive heat, fire or explosion.

1 Camera uses the Rechargeable Lithium-ion Battery

- * When shipped, the battery is not fully charged. Always charge the battery before using it.
- * When carrying the battery, install it in a digital camera or keep it in the soft case.

Battery Features

- The battery gradually loses its charge even when not used. Use a battery that has been charged recently (in the last day or two) to take pictures.
- To maximize the life of the battery, turn the camera off as quickly as possible when it is not being used.
- The number of available frames will be lower in cold locations or at low temperatures. Take along a spare fully charged battery. You can also increase the amount of power produced by putting the battery in your pocket or another warm place to heat it and then loading it into the camera just before you take a picture. If you are using a heating pad,

take care not to place the battery directly against the pad. The camera may not operate if you use a depleted battery in cold conditions.

Charging the Battery

- You can charge the battery using the battery charger (included).
 - The battery can be charged at ambient temperatures between 0°C and +40°C (+32°F and +104°F). Refer to the OWNER'S MANUAL for the time of charging battery.
 - You should charge the battery at an ambient temperature between +10°C and +35°C (+50°F and +95°F). If you charge the battery at a temperature outside this range, charging takes longer because the performance of the battery is impaired.
 - You cannot charge the battery at temperatures of 0°C (+32°F) or below.
- The Rechargeable Lithium-ion Battery does not need to be fully discharged or exhausted flat before being charged.
- The battery may feel warm after it has been charged or immediately after being used. This is perfectly normal.
- Do not recharge a fully charged battery.

Battery Life

At normal temperatures, the battery can be used at least 300 times. If the time for which the battery provides power shortens markedly, this indicates that the battery has reached the end of its effective life and should be replaced.

Notes on storage

- If a battery is stored for long periods while charged, the performance of the battery can be impaired. If the battery will not be used for some time, run the battery out before storing it.
- If you do not intend to use the camera for a long period of time, remove the battery from the camera.
- Store the battery in a cool place.
 - The battery should be stored in a dry location with an ambient temperature between +15°C and +25°C (+59°F and +77°F).
 - Do not leave the battery in hot or extremely cold places.

Handling the Battery**Cautions for Your Safety:**

- Do not carry or store battery with metal objects such as necklaces or hairpins.
- Do not heat the battery or throw it into a fire.
- Do not attempt to take apart or change the battery.
- Do not recharge the battery with chargers other those specified.

- Dispose of used battery promptly.
- Do not drop the battery or otherwise subject it to strong impacts.
- Do not expose the battery to water.
- Always keep the battery terminals clean.
- Do not store batteries in hot places. Also, if you use the battery for a long period, the camera body and the battery itself will become warm. This is normal. Use the AC power adapter if you are taking pictures or viewing images for a long period of time.

2 Camera uses AA-size alkaline or Ni-MH (nickelmetal hydride) rechargeable batteries

- * For details on the batteries that you can use, refer to the OWNER'S MANUAL of your camera.

Cautions for Using Battery

- Do not heat the batteries or throw them into a fire.
- Do not carry or store batteries with metal objects such as necklaces or hairpins.
- Do not expose the batteries to water, and keep batteries from getting wet or stored in moist locations.
- Do not attempt to take apart or change the batteries, including battery casings.
- Do not subject the batteries to strong impacts.

- Do not use batteries that are leaking, deformed, discolored.
- Do not store batteries in warm or humid places.
- Keep the batteries out of reach of babies and small children.
- Make sure that the battery polarity (\oplus and \ominus) is correct.
- Do not use new with used batteries. Do not use charged and discharged batteries together.
- Do not use different types or brands of batteries at the same time.
- If you do not intend to use the camera for a long period of time, remove the batteries from the camera. Note if the camera is left with the batteries removed, the time and date settings are cleared.
- The batteries feel warm right after being used. Before removing the batteries, turn the camera off and wait for the batteries to cool down.
- Since batteries do not work well in cold weather or locations, warm the batteries by placing them inside your garments before use. Batteries do not work well when cold. They will work again when the temperature returns to normal.
- Soil (such as fingerprints) on the battery terminals makes the batteries charge less reducing the number of images. Carefully wipe the battery terminals with a soft dry cloth before loading.



If any liquid at all leaks from the batteries, wipe the battery compartment thoroughly and then load new batteries.



If any battery fluid comes into contact with your hands or clothing, flush the area thoroughly with water. Note that battery fluid can cause loss of eyesight if it gets into your eyes. If this occurs, do not rub your eyes. Flush the fluid out with clean water and contact your physician for treatment.

■ Using the AA-size Ni-MH batteries correctly

- Ni-MH batteries left unused in storage for long periods can become “deactivated”. Also, repeatedly charging Ni-MH batteries that are only partially discharged can cause them to suffer from the “memory effect”. Ni-MH batteries that are “deactivated” or affected by “memory” suffer from the problem of only providing power for a short time after being charged. To prevent this problem, discharge and recharge them several times using the camera’s “Discharging rechargeable batteries” function. Deactivation and memory are specific to Ni-MH batteries and are not in fact battery faults. See OWNER’S MANUAL for the

procedure for “Discharging rechargeable batteries”.

! CAUTION

Do not use the “Discharging rechargeable batteries” function when alkaline batteries being used.

- To charge Ni-MH batteries, use the quick battery charger (sold separately). Refer to the instructions supplied with the charger to make sure that the charger is used correctly.
- Do not use the battery charger to charge other batteries.
- Note that the batteries feel warm after being charged.
- Due to the way the camera is constructed, a small amount of current is used even when the camera is turned off. Note in particular that leaving Ni-MH batteries in the camera for a long period will overdischarge the batteries and may render them unusable even after recharging.
- Ni-MH batteries will self-discharge even when not used, and the time for which they can be used may be shortened as a result.
- Ni-MH batteries will deteriorate rapidly if overdischarged (e.g. by discharging the batteries in a flashlight). Use the “Discharging rechargeable batteries” function provided in the camera to discharge the batteries.
- Ni-MH batteries have a limited service life. If a battery can only be

used for a short time even after repeated discharge-charge cycles, it may have reached the end of its service life.

■ Disposing of Batteries

- When disposing of batteries, do so in accordance with your local waste disposal regulations.

3 Notes on both models (1, 2)

■ AC Power Adapter

Always use the AC Power Adapter with the camera. The use of an AC Power adapter other than FUJIFILM AC Power Adapter can be damaged to your digital camera.

For details on the AC power adapter, refer to the OWNER’S MANUAL of your camera.

- Use the AC power adapter for indoor use only.
- Plug the connection cord plug securely into the DC input terminal.
- Turn off the FUJIFILM Digital camera before disconnecting the cord from the DC input terminal. To disconnect, pull out the plug gently. Do not pull on the cord.
- Do not use the AC power adapter with any device other than your camera.
- During use, the AC power adapter will become hot to the touch. This is normal.

- Do not take apart the AC power adapter. Doing so could be dangerous.
- Do not use the AC power adapter in a hot and humid place.
- Do not subject the AC power adapter to strong shocks.
- The AC power adapter may emit a humming. This is normal.
- If used near a radio, the AC power adapter may cause static. If this happens, move the camera away from the radio.

Before Using the Camera

■ Test Shots Prior to Photography

For important photographs (such as weddings and overseas trips), always take a test shot and view the image to make sure that the camera is working normally.

- FUJIFILM Corporation cannot accept liability for any incidental losses (such as the costs of photography or the loss of income from photography) incurred as a result of faults with this product.

■ Notes on Copyright

Images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended

purely for personal use. Users are also asked to note that the transfer of Memory Card containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

■ Handling Your Digital Camera

To ensure that images are recorded correctly, do not subject the camera to impact or shock while an image is being recorded.

■ Liquid Crystal

If the LCD monitor is damaged, take particular care with the liquid crystal in the monitor. If any of the following situations arise, take the urgent action indicated.

- If liquid crystal comes in contact with your skin:
Wipe the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal gets into your eye:
Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed:
Flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical assistance.

■ Trademark Information

-  and **xD-Picture Card™** are trademarks of FUJIFILM Corporation.

- IBM PC/AT is a registered trademark of International Business Machines Corp. of the U.S.A.
- Macintosh, Quick-Time, and Mac OS are trademarks of Apple Inc. in the U.S.A. and other countries.
- Windows 7, Windows Vista and the Windows logo are trademarks of the Microsoft group of companies.
- IrSimple™ Trademark is owned by the Infrared Data Association®.
- IrSS™ Trademark or IrSimpleShot™ Trademark is owned by the Infrared Data Association®.
- SDHC logo is a trademark.
- HDMI logo is a trademark.
- YouTube is a trademark of Google Inc.
- Other company or product names are trademarks or registered trademarks of the respective companies.

■ Notes on Electrical Interference

If the camera is to be used in hospitals or aircrafts, please note that this camera may cause interference to other equipment in the hospital or aircraft. For details, please check with the applicable regulations.

■ Explanation of Color Television System

NTSC: National Television System Committee, color television telecasting specifications adopted mainly in the U.S.A., Canada and Japan.

PAL: Phase Alternation by Line, a color television system adopted mainly by European countries and China.

■ Exif Print (Exif ver. 2.2)

Exif Print Format is a newly revised digital camera file format that contains a variety of shooting information for optimal printing.

About This Manual

Before using the camera, read this Owner's Manual and the other supplied documents. For information on specific topics, consult the sources below.

✓ **Camera Q&A**pg. x

Know what you want to do but don't know the name for it? Find the answer in "Camera Q & A."

✓ **Troubleshooting**pg. 88

Having a specific problem with the camera? Find the answer here.

✓ **Glossary**pg. 100

The meanings of some technical terms may be found here.

✓ **Table of Contents**pg. xiii

The "Table of Contents" gives an overview of the entire manual. The principal camera operations are listed here.

✓ **Warning Messages and Displays**pg. 96

Find out what's behind that flashing icon or error message in the monitor.

✓ **Restrictions on Camera Settings**

See another supplied document for restrictions on the options available in each shooting mode.

Memory Cards

Pictures can be stored in the camera's internal memory or on optional SD and SDHC memory cards. In this manual, SD memory cards are referred to as "memory cards." For more information, see page 8.

Camera Q & A

Find items by task.

Camera Setup

Question	Key phrase	See page
How do I set the camera clock?	Date and time	12
Can I set the clock to local time when I travel?	Time difference	80
How do I keep the display from turning off automatically?	Auto power off	83
How do I make the display brighter or darker?	LCD brightness	83
How do I stop the camera beeping and clicking?	Operation and shutter volume	78
	Silent mode	32
Can I change the sound the shutter makes?	Shutter sound	78
What are the parts of the camera called?	Parts of the camera	2
What do the icons in the display mean?	Displays	3
How do I use the menus?	Menus	57
What's behind that flashing icon or error message?	Messages and displays	96
How much charge is left in the battery?	Battery level	13

Sharing Pictures

Question	Key phrase	See page
Can I print pictures on my home printer?	Printing pictures	46
Can I copy my pictures to my computer?	Viewing pictures on a computer	51

Taking Pictures

Question	Key phrase	See page
How many pictures can I take?	Memory capacity	101
Is there a quick and easy way to take snapshots?	 mode	20
How can I avoid blurred pictures?	Dual IS mode	16
How can I make good portraits?	Intelligent Face Detection	24
Can I choose my own settings for different scenes?	Scene position	21
Can the camera automatically adjust settings for different scenes?	SRAUTO (SCENE RECOGNITION)	13
How can I take good pictures of dogs or cats?	 DOG/  CAT	22
Can I prioritize to focus the specified person's face?	FACE RECOGNITION	62
How do I shoot close-ups?	Close-ups (macro mode)	30
How do I keep the flash from firing?	Flash mode	31
How do I stop my subjects' eyes glowing red when I use the flash?		
How do I "fill-in" shadows on back-lit subjects?		
How do I take a series of pictures in a single burst?	Continuous shooting mode	61
How do I take a group portrait that includes the photographer?	Self-timer mode	33
How do I frame pictures with the subject off to one side?	Focus lock	26
How do I adjust exposure?	Exposure compensation	28
How do I keep a moving subject in focus?	Tracking	62
How do I shoot movies?	Recording movies	42

Viewing Pictures

Question	Key phrase	See page
How do I view my pictures?	Single-frame playback	35
How do I delete the current picture?	The  button	19
Can I select other pictures for deletion?	Deleting pictures	40
Can I zoom in on pictures during playback?	Playback zoom	36
How do I view a lot of pictures at once?	Multi-frame playback	37
How do I find pictures?	Image search	38
Can I protect my pictures from accidental deletion?	Protect	70
Can I hide the icons in the display when viewing my pictures?	Choosing a display format	35
Can I view my pictures in a slide show?	Slide show	69
Can I add a short voice memo to my pictures?	Voice memo	75
Can I crop unwanted elements out of my pictures?	Crop	71
Can I make small copies of pictures?	Resize	72
Can I copy pictures from internal memory to a memory card?	Copy	73
How do I view my pictures on TV?	Viewing pictures on TV	45

Table of Contents

Notes and Cautions	ii	P PROGRAM AE	20
IMPORTANT SAFETY INSTRUCTIONS	ii	 NATURAL & 	20
Safety Notes	iv	 NATURAL LIGHT	21
About This Manual	ix	SP1/SP2 SCENE POSITION	21
Camera Q & A	x	 Intelligent Face Detection	24
Before You Begin		Focus Lock	26
Introduction	1	 Exposure Compensation	28
Symbols and Conventions	1	 Macro Mode (Close-ups)	30
Supplied Accessories	1	 Using the Flash (Super Intelligent Flash)	31
Parts of the Camera	2	 Using the Self-Timer	33
Camera Displays	3	More on Playback	
The Mode Dial	4	Playback Options	35
First Steps		Playback Zoom	36
Charging the Battery	5	Multi-Frame Playback	37
Inserting the Battery	6	 Image Search	38
Inserting a Memory Card	8	Image Search based on categories	38
Turning the Camera on and off	11	Using Playback Menu with Image Search	39
Shooting Mode	11	 Deleting Pictures	40
Playback Mode	11	Movies	
Basic Setup	12	 Recording Movies	42
Basic Photography and Playback		 Viewing Movies	44
Taking Pictures in SR  (SCENE RECOGNITION)		Connections	
Mode	13	Viewing Pictures on TV	45
Viewing Pictures	19	Printing Pictures via USB	46
More on Photography		Connecting the Camera	46
Shooting Mode	20	Printing Selected Pictures	46
SR  SCENE RECOGNITION	20	Printing the DPOF Print Order	48
 AUTO	20	Creating a DPOF Print Order	49

Viewing Pictures on a Computer	51	The Setup Menu	77
Installing the Software.....	51	Using the Setup Menu	77
Connecting the Camera	55	Setup Menu Options.....	78
Menus		 TIME DIFFERENCE.....	80
Using the Menus: Shooting Mode	57	 FORMAT	81
Using the Shooting Menu.....	57	 IMAGE DISP.....	81
Shooting Menu Options.....	58	 FRAME NO.	82
 ISO.....	59	 PLAYBACK VOLUME.....	83
 IMAGE SIZE	59	 LCD BRIGHTNESS.....	83
 IMAGE QUALITY	60	 LCD MODE	83
 FINEPIX COLOR.....	60	 AUTO POWER OFF	83
 WHITE BALANCE.....	61	 DIGITAL ZOOM	84
 CONTINUOUS	61	Technical Notes	
 AF MODE	62	Optional Accessories	85
 FACE RECOGNITION (FinePix JZ500/JZ510 series only).....	62	Accessories from FUJIFILM	86
Using the Menus: Playback Mode	67	Caring for the Camera	87
Using the Playback Menu	67	Troubleshooting	
Playback Menu Options.....	68	Troubleshooting	88
 SLIDE SHOW	69	Warning Messages and Displays	96
 RED EYE REMOVAL.....	69	Appendix	
 PROTECT	70	Glossary	100
 CROP	71	Internal Memory/Memory Card Capacity	101
 RESIZE	72	Specifications	103
 IMAGE ROTATE	72		
 COPY	73		
 VOICE MEMO.....	75		
 ERASE FACE RECOG. (FinePix JZ500/JZ510 series only).....	76		

Introduction

Symbols and Conventions

The following symbols are used in this manual:

 **Caution:** This information should be read before use to ensure correct operation.


 **Note:** Points to note when using the camera.

 **Tip:** Additional information that may be helpful when using the camera.


Menus and other text in the camera monitor are shown in bold. In the illustrations in this manual, the monitor display may be simplified for explanatory purposes.

Supplied Accessories


The following items are included with the camera:

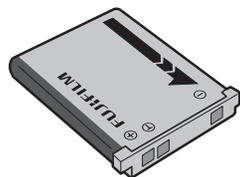


NP-45A rechargeable battery

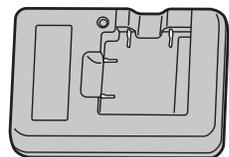

BC-45W battery charger

 



USB cable

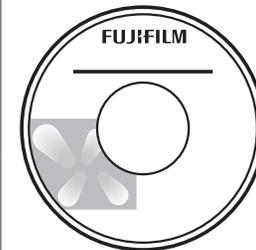

CD-ROM

Attaching the Strap


Attach the strap as shown.

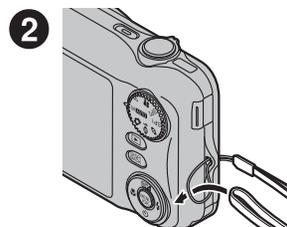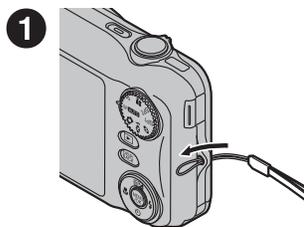

- *Strap*
- *Owner's Manual (may be distributed on CD in some countries or regions)*

Parts of the Camera

For more information, refer to the page listed to the right of each item.

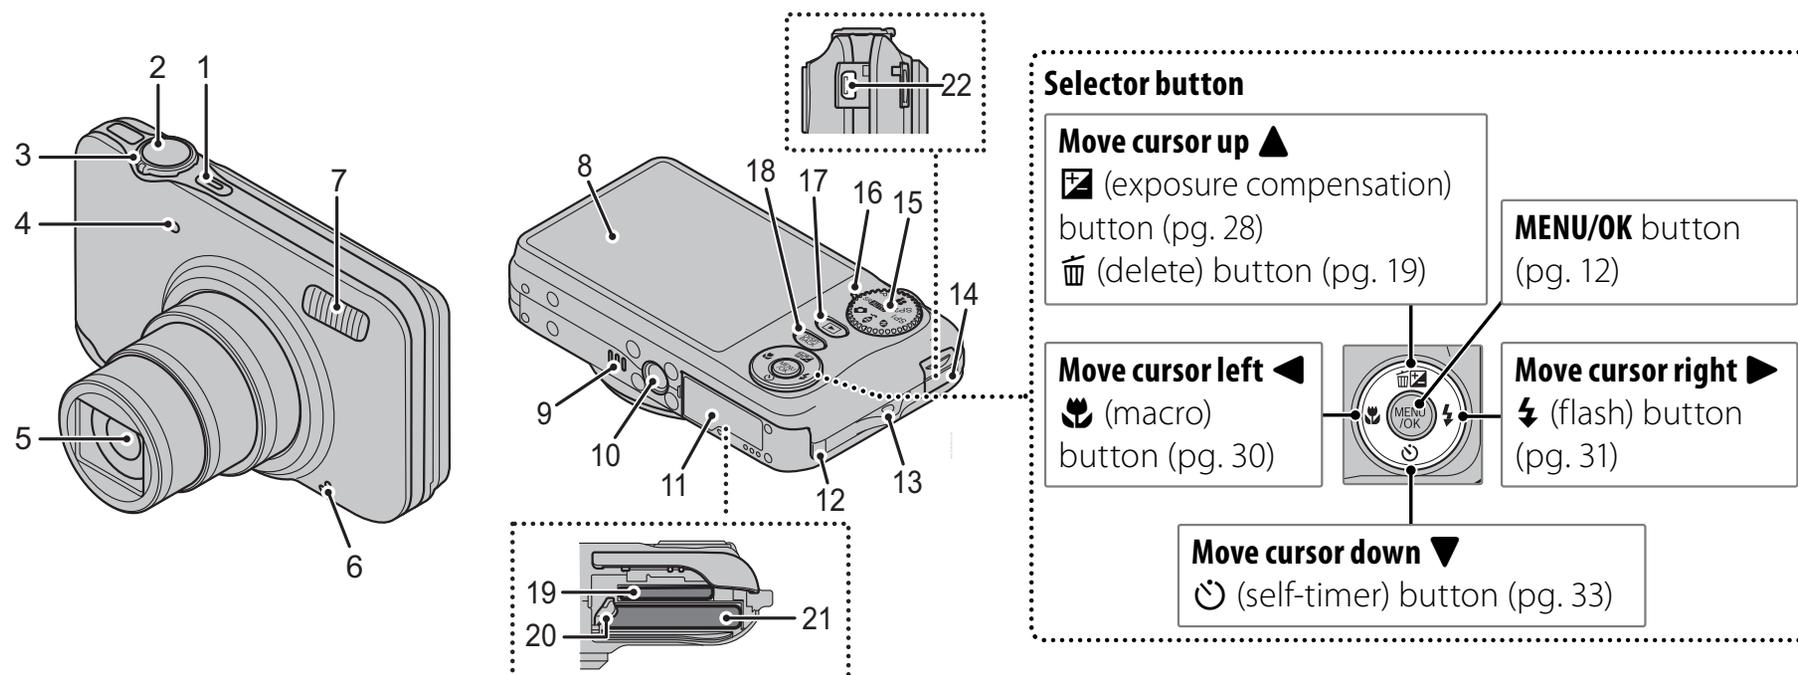


1 ON/OFF button..... 11	9 Speaker.....76	17 ▶ (playback) button.....35
2 Shutter button..... 17	10 Tripod mount	18 DISP (display)/BACK button..... 16, 35
3 Zoom control..... 15, 36	11 Battery-chamber cover..... 6	OFF (silent mode) button.....32
4 Self-timer lamp.....34	12 DC coupler cable cover.....86	19 Memory card slot..... 9
5 Lens and lens cover	13 Strap eyelet..... 1	20 Battery latch 6, 7
6 Microphone.....75	14 Terminal cover.....45, 46, 55	21 Battery chamber..... 6
7 Flash.....31	15 Mode dial 4	22 Connector for USB cable.....46, 55
8 Monitor..... 3	16 Indicator lamp.....18	

Camera Displays

The following indicators may appear during shooting and playback: The indicators displayed vary with camera settings.


Shooting

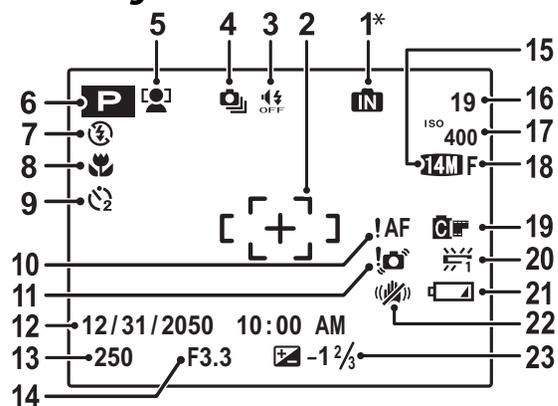

* **IN**: indicates that no memory card is inserted and that pictures will be stored in the camera's internal memory (pg. 8).

1	Internal memory indicator*	12	Date and time.....
2	Focus frame.....	13	Shutter speed
3	Silent mode indicator.....	14	Aperture
4	Continuous shooting mode.....	15	Image size.....
5	Intelligent Face Detection indicator.....	16	Number of available frames.....
6	Shooting mode.....	17	Sensitivity.....
7	Flash mode.....	18	Image quality.....
8	Macro (close-up) mode.....	19	FINEPIX COLOR.....
9	Self-timer indicator.....	20	White balance.....
10	Focus warning.....	21	Battery level.....
11	Blur warning.....	22	Dual IS mode.....
		23	Exposure compensation.....


Playback

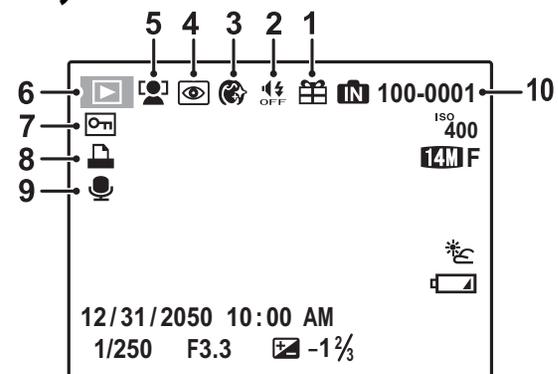

1	Gift image.....	6	Playback mode indicator.....
2	Silent mode indicator.....	7	Protected image.....
3	Portrait enhancer.....	8	DPOF print indicator.....
4	Red-eye removal indicator.....	9	Voice memo indicator.....
5	Intelligent Face Detection indicator.....	10	Frame number.....

The Mode Dial

To select a shooting mode, align the mode icon with the mark next to the mode dial.

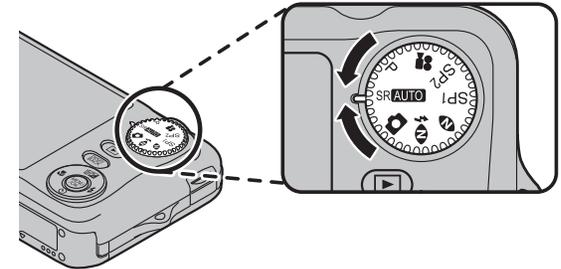

P (PROGRAM AE): Select for control of camera settings such as exposure compensation, white balance, and ISO sensitivity. The mode automatically sets both shutter speed and lens aperture (pg. 20).

SR AUTO (SCENE RECOGNITION): Select for letting the camera automatically adjust settings to suit the scene (pg. 13).

📷 (AUTO): A simple “point-and-shoot” mode recommended for first-time users of digital cameras (pg. 20).

👁️⚡ (NATURAL & ⚡): Helps ensure good results in situations with difficult lighting. Each time the shutter button is pressed, the camera takes two shots: one shot without the flash to preserve natural lighting, followed immediately by a second shot with the flash (pg. 20).

🎥 (MOVIE): Record movies with sound (pg. 42).

SP1/SP2 (SCENE POSITION): Choose a scene suited to the subject or shooting conditions and let the camera do the rest (pg. 21).

N (NATURAL LIGHT): Capture natural light indoors, under low light, or where the flash can not be used (pg. 21).

Charging the Battery


The battery is not charged at shipment. Charge the battery before use.

Batteries

The camera uses an NP-45A rechargeable battery.

1 Place the battery in the charger.

Insert the battery into the supplied battery charger as shown, making sure that the battery is in the orientation indicated by the ⊕ ⊥ ⊖ labels.

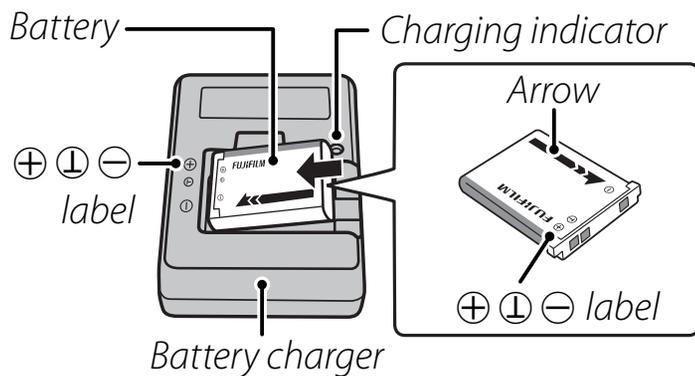

2 Plug the charger in.

Plug the charger into a power outlet. The charging indicator will light.

⚠ Cautions

- Unplug the charger when it is not in use.

- Remove dirt from the battery terminals with a clean, dry cloth. Failure to observe this precaution could prevent the battery from charging.
- Charging times increase at low temperatures.

The Charging Indicator

The charging indicator shows battery charge status as follows:

Charging indicator	Battery status	Action
Off	Battery not inserted.	Insert the battery.
	Battery fully charged.	Remove the battery.
On	Battery charging.	—
Blinks	Battery fault.	Unplug the charger and remove the battery.

3 Charge the battery.

Remove the battery when charging is complete.


Charging time

See specifications of the battery charger (pg. 107).

Inserting the Battery

After charging the battery, insert it in the camera as described below.

1 Open the battery-chamber cover.

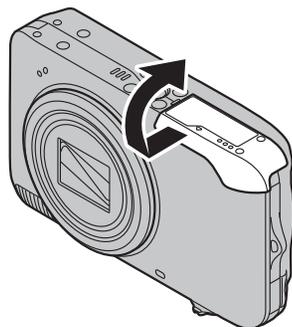

Note


Be sure the camera is off before opening the battery-chamber cover.

Cautions


- Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could result in damage to image files or memory cards.
- Do not use excessive force when handling the battery-chamber cover.

2 Insert the battery.

Insert the battery with the terminals first and the orange stripe aligned with the orange battery latch. Slide the battery into the camera, keeping the battery latch pressed to one side as shown below.

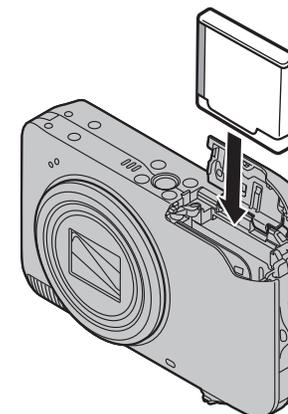


Confirm that the battery is securely latched.

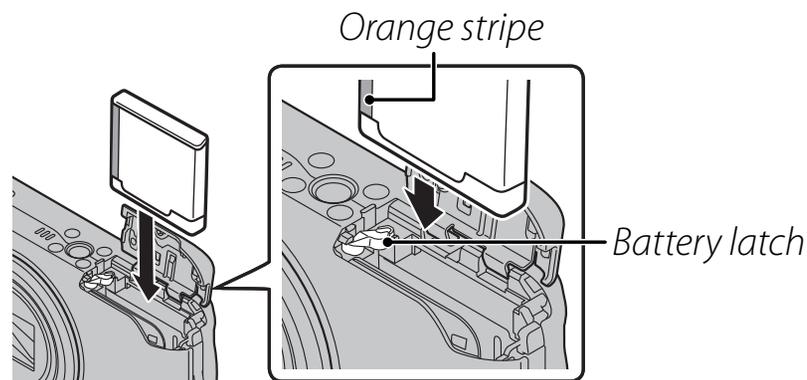

Caution


Insert the battery in the correct orientation. **Do NOT use force or attempt to insert the battery upside down or backwards.** The battery will slide in easily in the correct orientation.

3 Close the battery-chamber cover.

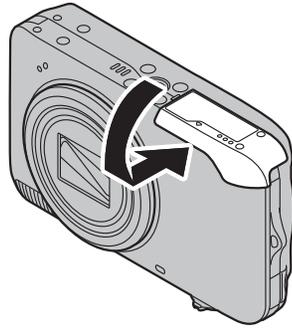

Removing the Battery

After turning the camera off, open the battery-chamber cover, press the battery latch to the side, and slide the battery out of the camera as shown.

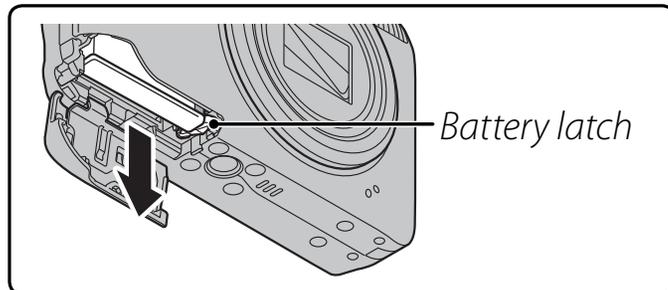

Caution

Turn the camera off before removing the battery.

Tips: Using an AC Adapter

- The camera can be powered by an optional AC adapter and DC coupler (sold separately). See manuals provided with the AC adapter and DC coupler for details.
- If the camera is powered by an AC adapter, demo mode instructions will be displayed when the camera is turned on. Selecting this option starts a slide show. To cancel, press the shutter button.

Cautions

- Do not affix stickers or other objects to the battery. Failure to observe this precaution could make it impossible to remove the battery from the camera.
- Do not short the battery terminals. The battery could overheat.
- Use only battery chargers designated for use with the battery. Failure to observe this precaution could result in product malfunction.
- Do not remove the labels from the battery or attempt to split or peel the outer casing.
- The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Inserting a Memory Card

Although the camera can store pictures in internal memory, SD memory cards (sold separately) can be used to store additional pictures.

When no memory card is inserted,  appears in the monitor and internal memory is used for recording and playback. Note that because camera malfunction could cause internal memory to become corrupted, the pictures in internal memory should periodically be transferred to a computer and saved on the computer hard disk or on removable media such as CDs or DVDs. The pictures in internal memory can also be copied to a memory card (see page 73). To prevent internal memory from becoming full, be sure to delete pictures when they are no longer needed.


When a memory card is inserted as described below, the card will be used for recording and playback.

■ **Compatible Memory Cards**

SanDisk SD and SDHC memory cards have been tested and approved for use in the camera. Use a card with a class 4 write speed (4 MB/s) or better when shooting HD movies. A complete list of approved memory cards is available at http://www.fujifilm.com/products/digital_cameras/index.html. Operation is not guaranteed with other cards. The camera can not be used with MultiMediaCard (MMC) or *xD-Picture* Cards.

Caution


SD memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting an SD memory card, slide the write-protect switch to the unlocked position.

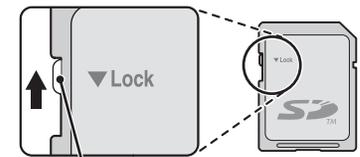


Write-protect switch

■ **Inserting a Memory Card**

- 1 Turn the camera off, and open the battery-chamber cover.

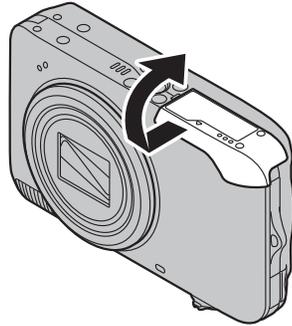


- 2 Insert the memory card firmly until you hear (feel) a click.
Holding the memory card in the orientation shown below, slide it all the way in.

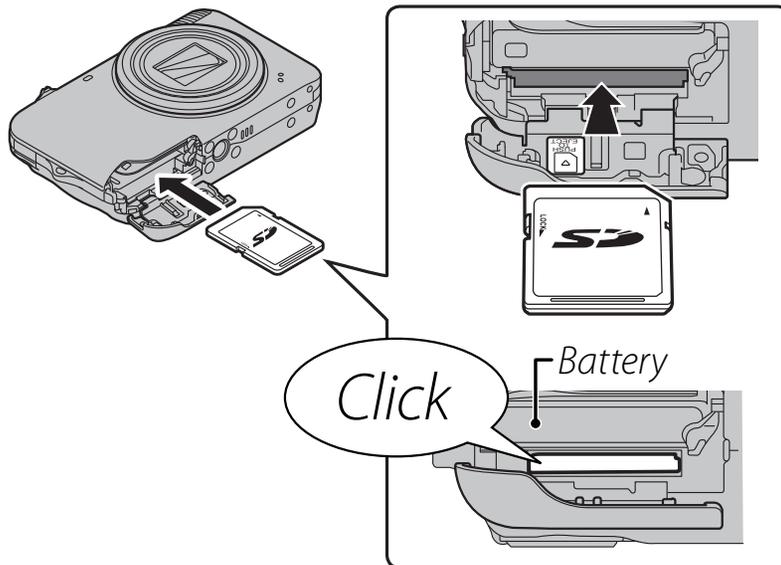

⚠ **Caution**


Be sure card is in correct orientation; do not insert at an angle or use force. If the memory card is not inserted correctly, **IN** will appear in the monitor and images will be recorded to internal memory.

- 3 Close the battery-chamber cover.

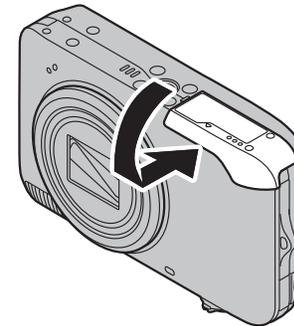

Removing Memory Cards

After confirming that the camera is off, press the card in and then release it slowly. The card can now be removed by hand.

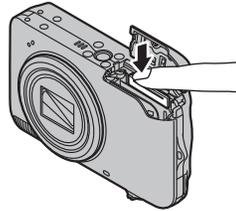

⚠ Cautions

- The memory card may spring out if you remove your finger immediately after pushing the card in.
- Memory cards may be warm to the touch after being removed from the camera. This is normal and does not indicate a malfunction.

⚠ Cautions


- **Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card.** Failure to observe this precaution could damage the card.
- Format SD memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device. For more information on formatting memory cards, see page 81.
- Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.

- miniSD or microSD adapters that are larger or smaller than the standard dimensions of an SD card may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.
- Do not affix labels to memory cards. Peeling labels can cause camera malfunction.
- Movie recording may be interrupted with some types of SD memory card.
- The data in internal memory may be erased or corrupted when the camera is repaired. Please note that the repairer will be able to view pictures in internal memory.
- Formatting a memory card or internal memory in the camera creates a folder in which pictures are stored. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures from memory cards and internal memory; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals.

Turning the Camera on and off

Shooting Mode

Press the **ON/OFF** button to turn the camera on. The lens will extend and the lens cover will open.

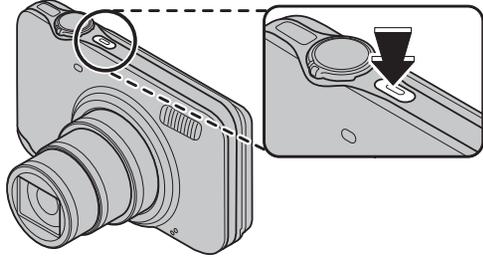

Press **ON/OFF** again to turn the camera off.

Tip: Switching to Playback Mode

Press the  button for about a second to start playback. Press the shutter button halfway to return to shooting mode.

Cautions


- Forcibly preventing the lens from extending could cause damage or product malfunction.
- Pictures can be affected by fingerprints and other marks on the lens. Keep the lens clean.
- The **ON/OFF** button does not completely disconnect the camera from its power supply.

Tip: Auto Power Off

The camera will turn off automatically if no operations are performed for the length of time selected in the  **AUTO POWER OFF** menu (pg. 83). To turn the camera on, use the **ON/OFF** button or press the  button for about a second.

Playback Mode

To turn the camera on and begin playback, press the  button for about a second.

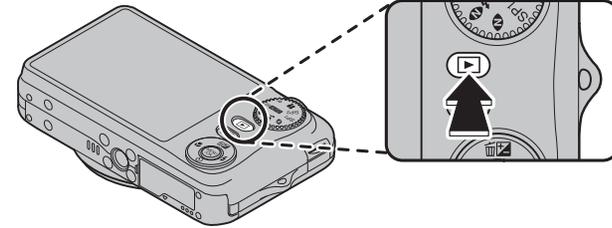

Press the **ON/OFF** button to turn the camera off.

Tip: Switching to Shooting Mode

To exit to shooting mode, press the shutter button halfway. Press the  button to return to playback.


Note

The **ON/OFF** button lights up while the camera is on. When the camera is turned off, the light goes off.

Basic Setup

A language-selection dialog is displayed the first time the camera is turned on. Set up the camera as described below (for information on resetting the clock or changing languages, see page 77).

1 Choose a language.

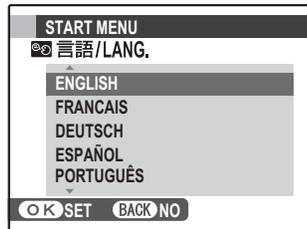


1.1 Press the selector up or down to highlight a language.



1.2 Press **MENU/OK**.



2 Set the date and time.

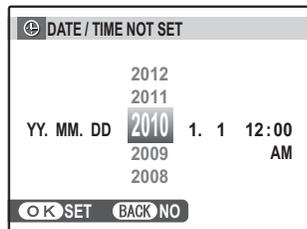

2.1 Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the selector up or down.



2.2 Press **MENU/OK**.




Tip: The Camera Clock

If the battery is removed for an extended period,  **DATE/TIME** will be cleared and the language-selection dialog will be displayed when the camera is turned on. Set up the camera again. If the battery is left in the camera or an optional AC adapter connected for about four days, the battery can be removed for about seven days without resetting clock or language selection.


Taking Pictures in **SRAUTO** (SCENE RECOGNITION) Mode

This section describes how to take pictures in **SRAUTO** (SCENE RECOGNITION) mode.

- 1 Turn the camera on.**
Press the **ON/OFF** button to turn the camera on.

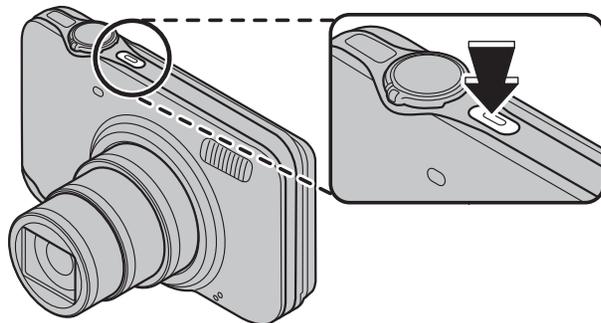


- 2 Select **SRAUTO** mode.**
Rotate the mode dial to **SRAUTO**.

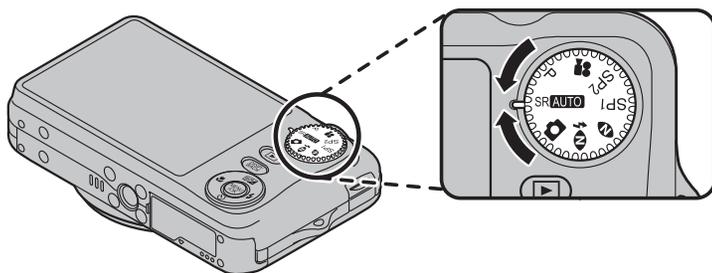

Tip: SCENE RECOGNITION

Simply by pointing the camera to the subject, the camera automatically analyzes and selects the most appropriate setting using scene recognition.

- 3 Check the battery level.**
Check the battery level in the display.

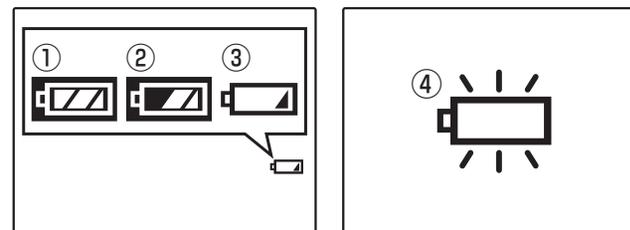

Indicator	Description
 (white)	Battery partially discharged.
 (white)	Battery more than half discharged.
 (red)	Low battery. Charge as soon as possible.
 (blinks red)	Battery exhausted. Turn camera off and charge battery.

4 Frame a picture using the zoom control.

The camera analyzes a subject based on scene recognition, then an icon appears in the bottom left of the monitor.



(The illustration shows when the camera analyzed subject(s) in portrait.)

Subject	Icon	Description
PORTRAIT		For soft-toned portraits with natural skin tones.
LANDSCAPE		For crisp, clear daylight shots of buildings and landscapes.
NIGHT		For night and twilight scenes, using high sensitivity setting to minimize blurring.
MACRO		For clear close-ups of flowers, etc.
BACKLIT PORTRAIT		For a subject backlit against the sun, preventing the background from becoming dim.
NIGHT PORTRAIT		For a subject in a dim place, reducing blur.

Tip

When a subject can not be analyzed by the camera, **AUTO** mode will be set.






Notes

- appears on the display while in **SR AUTO**. The camera continuously analyzes the scene, always trying to detect faces.
- The camera focuses continuously, increasing the drain on the battery. The sound of the camera focusing may be audible.

How to use the zoom control


Select  to zoom out

Select  to zoom in

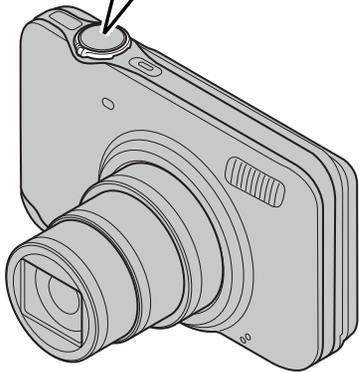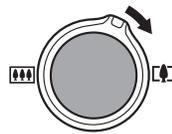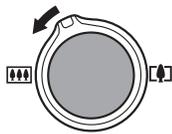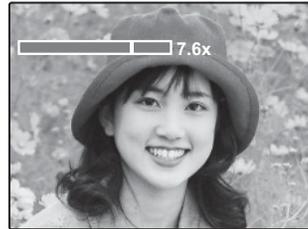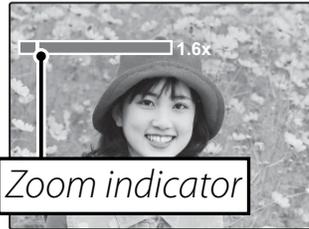


Holding the Camera

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.

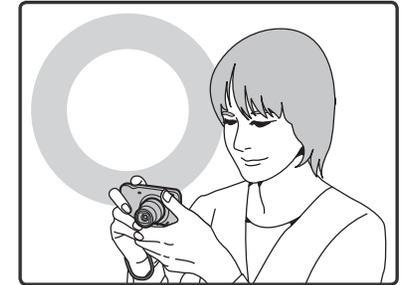

To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens and flash.

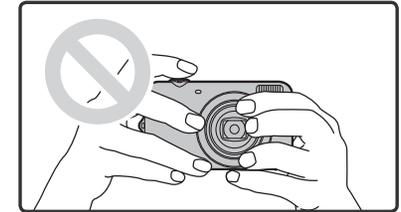

Framing Guideline (Best Framing)

In shooting mode, press **DISP/BACK** to select a shooting display format. The selection changes each time **DISP/BACK** is pressed.



INFORMATION INFORMATION
ON OFF



BEST FRAMING

- **Best Framing:** To use the best framing, position the main subject at the intersection of two lines or align one of the horizontal lines with the horizon.

Avoiding Blurred Pictures

If the subject is poorly lit, blurring caused by camera shake can be reduced by activating the **DUAL IS MODE**. 1 **CONTINUOUS**, 2 **SHOOTING ONLY** or **OFF** can be set in the setup menu (pg. 79).



Tip


When using the camera with a tripod, **DUAL IS MODE** is recommended to be **OFF**.

Note

Sensitivity is raised when dual IS is in effect. Note that blurring may still occur depending on the scene or shooting conditions.

5 Focus.

Press the shutter button halfway to focus.

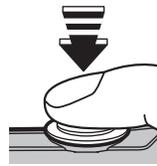

⚡ Note

The lens may make a noise when the camera focuses. This is normal.

If the camera is able to focus, it will beep twice and the indicator lamp will glow green.

If the camera is unable to focus, the red colored focus frame and **!AF** will appear in the monitor, and the indicator lamp will blink green. Change the composition or use focus lock (pg. 26).


6 Shoot.

Smoothly press the shutter button the rest of the way down to take the picture.



📖 Tip: The Shutter Button


The shutter button has two positions. Pressing the shutter button halfway (①) sets focus and exposure; to shoot, press the shutter button the rest of the way down (②).

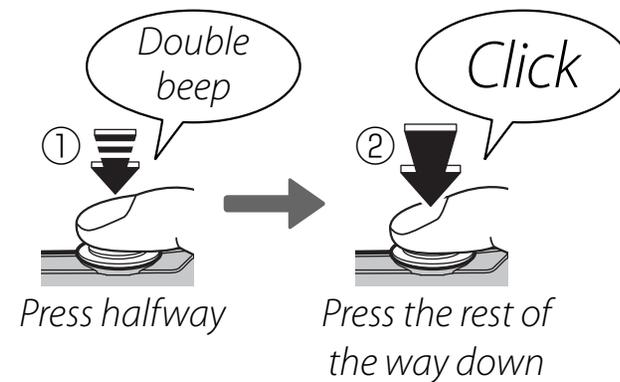

⚡ Note

If the subject is poorly lit, the flash may fire when the picture is taken. For information on using the flash when lighting is poor, see page 31.

The Indicator Lamp

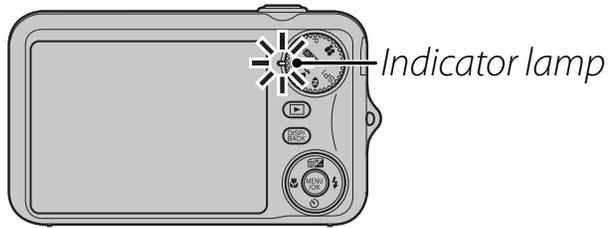

The indicator lamp shows camera status as follows:

Indicator lamp	Camera status
Glows green	Focus locked.
Blinks green	Blur, focus, or exposure warning. Picture can be taken.
Blinks green and orange	Recording pictures. Additional pictures can be taken.
Glows orange	Recording pictures. No additional pictures can be taken at this time.
Blinks orange	Flash charging; flash will not fire when picture is taken.
Blinks red	Lens or memory error.


Tip: Warnings

Detailed warnings appear in the display. See pages 96–99 for more information.

Viewing Pictures

Pictures can be viewed in the monitor. When taking important photographs, take a test shot and check the results.

1 Press the  button.

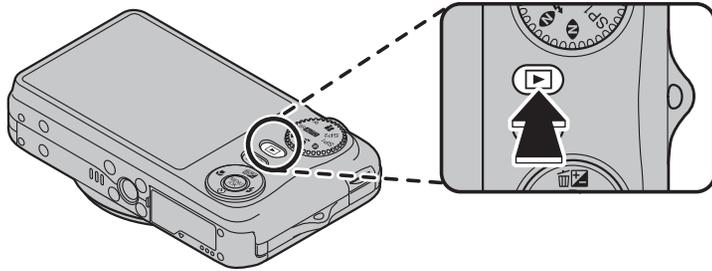

The most recent picture will be displayed in the monitor.



2 View additional pictures.



Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.



Press the shutter button to exit to shooting mode.

Deleting Pictures

To delete the picture currently displayed in the monitor, press the selector up () . The following dialog will be displayed.

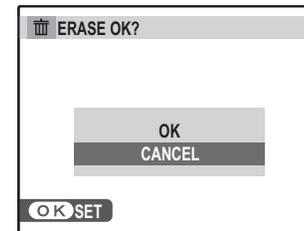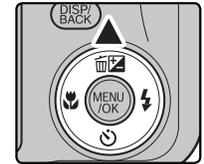

To delete the picture, highlight **OK** and press **MENU/OK**. To exit without deleting the picture, highlight **CANCEL** and press **MENU/OK**.



Tip: The Playback Menu

Pictures can also be deleted from the playback menu (pg. 40).

Shooting Mode

Choose a shooting mode according to the scene or type of subject. To choose a shooting mode, rotate the mode dial to the desired setting (pg. 4). The following modes are available:

SRAUTO** SCENE RECOGNITION**

Simply by pointing the camera to the subject, the camera automatically analyzes and selects the most appropriate setting using scene recognition.

See “Taking Pictures in **SR****AUTO** (SCENE RECOGNITION) mode” (pg. 13).

📷 **AUTO**

Choose for crisp, clear snapshots. This mode is recommended in most situations.

P PROGRAM AE

Program AE sets both shutter speed and lens aperture. The camera lets you control camera settings such as exposure compensation (pg. 28), white balance (pg. 61), and ISO sensitivity (pg. 59).

N📷 **NATURAL & 📷**

This mode helps ensure good results with backlit subjects and in other situations with difficult lighting. Each time the shutter button is pressed, the camera takes two shots: one shot without the flash to preserve natural lighting, followed immediately by a second shot with the flash. Do not move the camera until shooting is complete.



👉 Notes

- Do not use where flash photography is prohibited. The flash will fire even in silent mode.
- Only available if memory remains for two pictures.

N **NATURAL LIGHT**


Capture natural light indoors, under low light, or where the flash can not be used. The flash turns off and sensitivity is raised to reduce blur.




SP1/SP2 SCENE POSITION

The camera offers a choice of “scenes,” each adapted to particular shooting conditions or a specific type of subject, which can be assigned to the **SP1/SP2** position on the mode dial:

1 Rotate the mode dial to **SP1/SP2**.

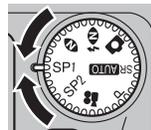

2 Press **MENU/OK** to display the following menu.

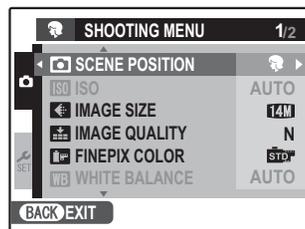


3 Highlight **SCENE POSITION**.



4 Press the selector right to display shooting mode options.



5 Press the selector up or down to highlight a scene (pg. 23).

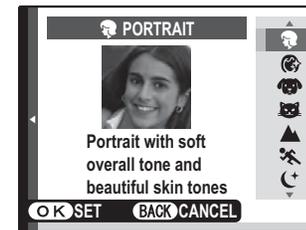

6 Press **MENU/OK** to select the highlighted option.



7 Press **DISP/BACK** to exit from the menu.



Until the setting is changed as described above, the chosen scene will be selected whenever the mode dial is rotated to **SP1/SP2**.

 **DOG**/ **CAT** (FinePix JZ500/JZ510 series only)

When  **DOG** or  **CAT** is selected, the camera detects and focuses the front face of a dog or cat.

When  **DOG** or  **CAT** is selected for **SCENE POSITION**,  **AUTO RELEASE** is available in Self-Timer options. When the camera detects and focuses the face of a dog or cat in  **AUTO RELEASE**, the camera automatically releases the shutter.

The detected faces can be used with following functions.

- **SLIDE SHOW** (pg. 69)
- **IMAGE DISP. > ZOOM(CONTINUOUS)** (pg. 81)
- **PRINT ORDER(DPOF)** (pg. 48)
- **CROP** (pg. 71)

Cautions

- Although the camera detects faces of many kinds of dogs or cats in  **DOG** or  **CAT**, some kinds of dogs or cats may not be detected. Also, some shooting conditions may prevent the camera from detecting the face of a dog or cat.
- If no face is detected when the shutter button is pressed halfway, the camera will focus on the subject at the center of the display.
- When a face is not detected, place the subject in the center of a frame.
- If the face of a dog or cat is not detected, face zoom will not be available even when the  button is pressed during playback.
-  **DOG** and  **CAT** may not be effective under following conditions:
 - kinds of dogs or cats whose whole faces are black.
 - kinds of dogs or cats whose whole faces are covered with long hair.


Scene	Description
 PORTRAIT	Choose for soft-toned portraits with natural skin tones.
 PORTRAIT ENHANCER	Choose for a smooth skin effect in soft-focus portraits.
 DOG (FinePix JZ500/JZ510 series only)	Choose for shooting a dog. The mode optimizes to focus on faces of dogs.
 CAT (FinePix JZ500/JZ510 series only)	Choose for shooting a cat. The mode optimizes to focus on faces of cats.
 LANDSCAPE	Choose for crisp, clear daylight shots of buildings and landscapes.
 SPORT	Choose when photographing moving subjects. Priority is given to faster shutter speeds.
 NIGHT	Choose this mode for poorly lit twilight or night scenes. Sensitivity is automatically raised to reduce blur caused by camera shake.
 NIGHT (TRIPOD)	Choose this mode for slow shutter speeds when shooting at night. Use a tripod to prevent blur.
 FIREWORKS	Slow shutter speeds are used to capture the expanding burst of light from a firework. Use a tripod to prevent blur.
 SUNSET	Record the vivid colors in sunrises and sunsets.
 SNOW	Choose for crisp, clear shots that capture the brightness of scenes dominated by shining white snow.
 BEACH	Choose for crisp, clear shots that capture the brightness of sunlit beaches.
 PARTY	Capture indoor background lighting under low-light conditions.
 FLOWER	Choose for vivid close-ups of flowers. The camera focuses in the macro range.
 TEXT	Take clear pictures of text or drawings in print. The camera focuses in the macro range.

Intelligent Face Detection

Intelligent Face Detection allows the camera to automatically detect human faces and set focus and exposure for a face anywhere in the frame for shots that emphasize portrait subjects. Choose for group portraits (in vertical or horizontal orientations) to prevent the camera from focusing on the background. Intelligent Face Detection also offers a red-eye removal option for removing “red-eye” effects caused by the flash.

1 Turn Intelligent Face Detection on.

1.1 Press **MENU/OK** to display the shooting menu.

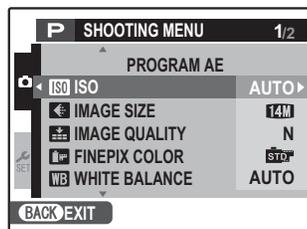

1.2 Press the selector up or down to highlight  **FACE DETECTION**.



1.3 Press the selector right to display Intelligent Face Detection options.



1.4 Press the selector up or down to highlight the desired option.



1.5 Press **MENU/OK** to select the highlighted option and return to shooting mode.



 icon appears in monitor when Intelligent Face Detection is on.



Note

When removing red-eye effect, select **ON** for  **RED EYE REMOVAL** in the setup menu (pg. 79).

2 Frame the picture.

If a face is detected, it will be indicated by a green border. If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by white borders.



Green border

3 Focus.

Press the shutter button halfway to focus on the subject in the green border. Note that, in some shooting modes, exposure is adjusted for the current shooting mode and may not be optimized for the selected subject.



Caution

If no face is detected when the shutter button is pressed halfway (pg. 90), the camera will focus on the subject at the center of the display and red-eye will not be removed.

4 Shoot.

Press the shutter button all the way down to shoot.



Caution


If the subject moves as the shutter button is pressed, their face may not be in the area indicated by the green border when the picture is taken.

Tip: Red-Eye Removal

Select **ON** for the  **SAVE ORG IMAGE** option in the setup menu (pg. 79) to save unprocessed copies of pictures created with red-eye removal.

Intelligent Face Detection

Intelligent Face Detection is recommended when using the self-timer for group- or self-portraits (pg. 33).

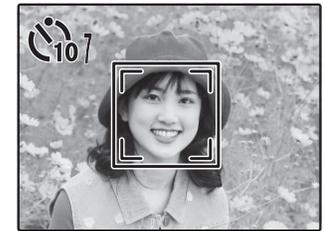

If a face has been registered, the camera prioritizes focus and exposure to that face when there are several faces detected (FinePix JZ500/JZ510 series only).

The following functions can be used with Intelligent Face Detection.

RED EYE REMOVAL (pg. 69)/**IMAGE SEARCH** (pg. 38)/**SLIDE SHOW** (pg. 69)/**IMAGE DISP. > ZOOM (CONTINUOUS)** (pg. 81)/**PRINT ORDER (DPOF)** (pg. 48)/**CROP** (pg. 71)

Focus Lock


To compose photographs with off-center subjects:

1 Position the subject in the focus frame.



2 Focus.

Press the shutter button halfway to set focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).

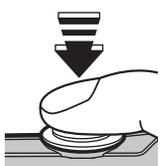

*Press
halfway*



Repeat steps 1 and 2 as desired to refocus before taking the picture.

3 Recompose the picture.

Keeping the shutter button pressed halfway, recompose the picture.



4 Shoot.

Press the shutter-release button the rest of the way down to take the picture.




*Press the rest of
the way down*

Autofocus

Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below. If the camera is unable to focus using autofocus, use focus lock (pg. 26) to focus on another subject at the same distance and then recompose the photograph.


- Very shiny subjects such as mirrors or car bodies.
- Fast-moving subjects.
- Subjects photographed through a window or other reflective object.
- Dark subjects and subjects that absorb rather than reflect light, such as hair or fur.
- Insubstantial subjects, such as smoke or flame.
- Subjects that show little contrast with the background (for example, subjects in clothing that is the same color as the background).
- Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).

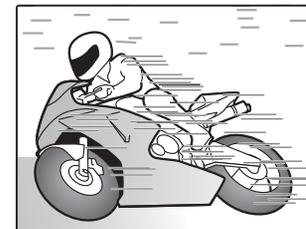

Exposure Compensation

Use exposure compensation when photographing very bright, very dark, or high-contrast subjects.

- 1 Press the selector up ().**
The exposure indicator will be displayed.

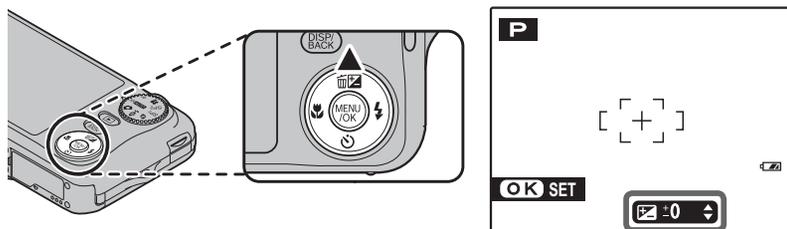

- 2 Choose a value.**
Press the selector button. The effect is visible in the display.

*Choose positive (+) values
to increase exposure*



*Choose negative (-) values
to reduce exposure*



- 3 Return to shooting mode.**
Press **MENU/OK** to return to shooting mode.



- 4 Take pictures.**

Note

A  icon and exposure indicator are displayed at settings other than ± 0 . Exposure compensation is not reset when the camera is turned off; to restore normal exposure control, choose a value of ± 0 .


Choosing an Exposure Compensation Value

- **Backlit subjects:** choose values from $+2/3$ EV to $+12/3$ EV (for an explanation of the term “EV”, see the Glossary on page 100)
- **Highly reflective subjects or very bright scenes** (e.g., snowfields): +1 EV
- **Scenes that are mostly sky:** +1 EV
- **Spotlit subjects** (particularly if photographed against dark backgrounds): $-2/3$ EV
- **Subjects with low reflectivity** (pine trees or dark-colored foliage): $-2/3$ EV



Macro Mode (Close-ups)

For close-ups, press the selector left () . The selection changes each time the selector is pressed.

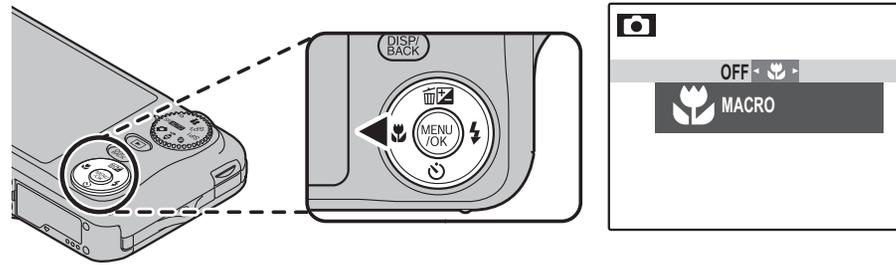

When macro mode is in effect, the camera focuses on subjects near the center of the frame. Use the zoom control to compose pictures.

To exit macro mode, press the selector left () and select **OFF**. Macro mode can also be cancelled by turning the camera off or selecting another shooting mode.

Notes


- Use of a tripod is recommended to prevent blur caused by camera shake.
- The flash may fail to light the entire subject at very short ranges. Increase the distance to the subject and try again.

⚡ Using the Flash (Super Intelligent Flash)

When the flash is used, the camera's *Super Intelligent Flash* system instantly analyzes the scene based on such factors as the brightness of the subject, its position in the frame, and its distance from the camera. Flash output and sensitivity are adjusted to ensure that the main subject is correctly exposed while preserving the effects of ambient background lighting, even in dimly-lit indoor scenes. Use the flash when lighting is poor, for example when shooting at night or indoors under low light.

1 Choose a flash mode.

Press the selector right (⚡). The flash mode changes each time the selector is pressed; in modes other than **AUTO**, the current mode is indicated by an icon in the display. Choose from the following options:

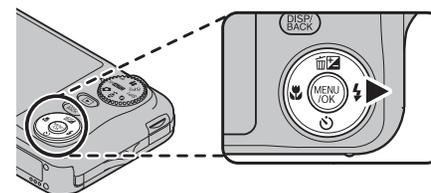

Mode	Description
AUTO (AUTO FLASH)	The flash fires when required. Recommended in most situations.
⚡ (FORCED FLASH)	The flash fires whenever a picture is taken. Use for backlit subjects or for natural coloration when shooting in bright light.
⚡/ (SUPPRESSED FLASH)	The flash does not fire even when the subject is poorly lit.  will appear in the monitor at slow shutter speeds to warn that pictures may be blurred. Use of a tripod is recommended.
s⚡ (SLOW SYNCHRO)	Capture both the main subject and the background under low light (note that brightly lit scenes may be overexposed).

2 Focus.


Press the shutter button halfway to focus. If the flash will fire,  will be displayed when the shutter button is pressed halfway.



At slow shutter speeds,  will appear in the display to warn that pictures may be blurred; use of a tripod is recommended.

3 Shoot.

Press the shutter button the rest of the way down to shoot.

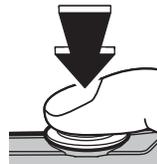

Caution

The flash may fire several times with each shot. Do not move the camera until shooting is complete.


Red-Eye Removal

When Intelligent Face Detection is active (pg. 24), and **ON** is selected for  **RED EYE REMOVAL** in the setup menu (pg. 79), red-eye removal is available in  **AUTO**,  **⚡**, and  **SLOW**. Red-eye removal minimizes “red-eye” caused when light from the flash is reflected from the subject’s retinas as shown in the illustration at right.



Silent Mode

In situations in which camera sounds or light from the flash may be unwelcome, press the **DISP/BACK** button until  is displayed in the monitor.

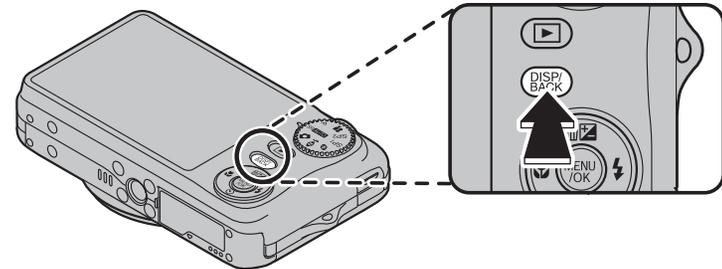


The camera speaker, shooting indicator, flash, and indicator and self-timer lamps turn off (note that the flash will still fire in  mode). Flash and volume settings (pg. 83) can not be adjusted while silent mode is in effect. To restore normal operation, press the **DISP/BACK** button until the  icon is no longer displayed.

🕒 Using the Self-Timer

The camera offers a ten-second timer that allows photographers to appear in their own photographs, and a two-second timer that can be used to avoid blur caused by the camera moving when the shutter button is pressed. The self-timer is available in all shooting modes.

1 Set the timer.

Press the selector down (🕒). The selection changes each time the selector is pressed. The current self-timer mode is displayed in the monitor.

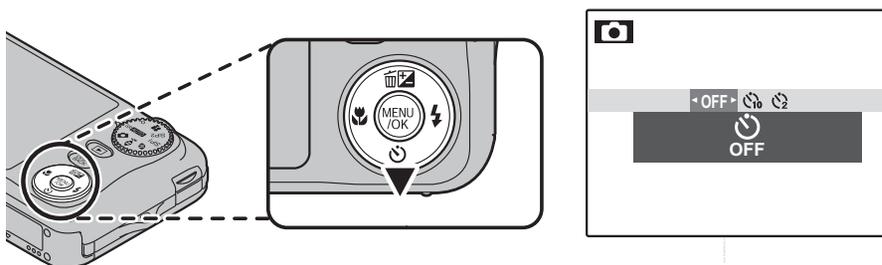


Choose from (self-timer off), (10 s delay), or (2 s delay)

2 Focus.

Press the shutter button halfway to focus.


⚠ Caution

Stand behind the camera when using the shutter button. Standing in front of the lens can interfere with focus and exposure.

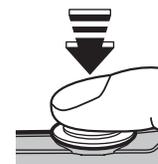


3 Start the timer.

Press the shutter button the rest of the way down to start the timer. The display in the monitor shows the number of seconds remaining until the shutter is released. To stop the timer before the picture is taken, press **DISP/BACK**.

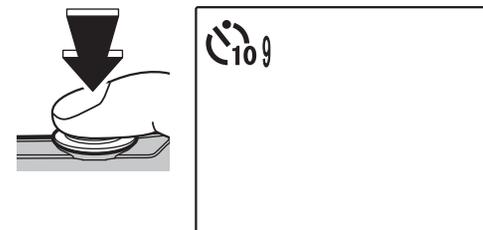

The self-timer lamp on the front of the camera will blink immediately before the picture is taken. If the two-second timer is selected, the self-timer lamp will blink as the timer counts down.

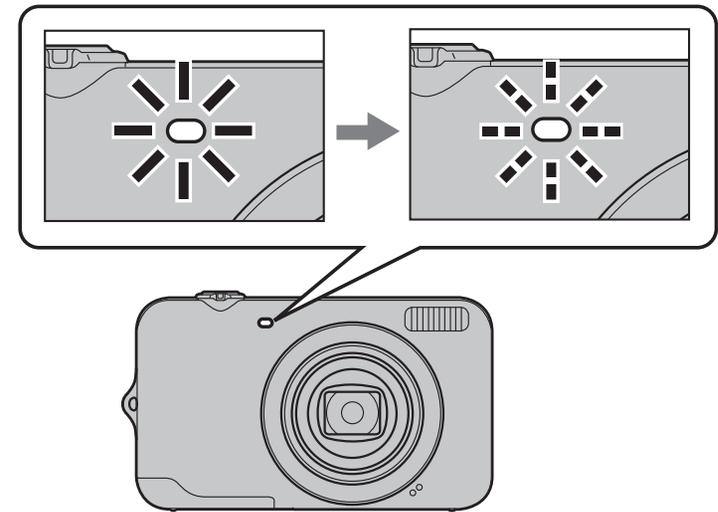

Intelligent Face Detection


Because it ensures that the faces of portrait subjects will be in focus, Intelligent Face Detection (pg. 24) is recommended when using the self-timer for group portraits or self-portraits. To use the self-timer with Intelligent Face Detection, turn Intelligent Face Detection on, set the timer as described in Step 1, and then press the shutter button all the way down to start the timer. The camera will detect faces while the timer is counting down and adjust focus and exposure immediately before the shutter is released. Be careful not to move until the picture has been recorded.

Note

The self-timer turns off automatically when the picture is taken, a different shooting mode is selected, playback mode is selected, or the camera is turned off.

Playback Options

To view the most recent picture in the monitor, press the  button.

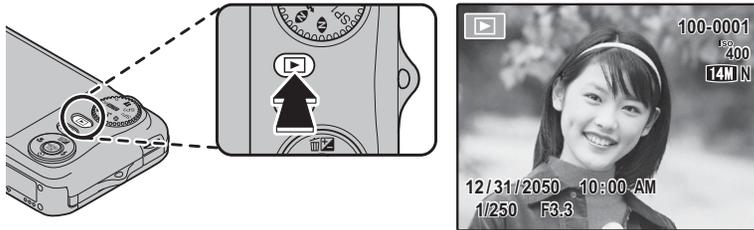


Press the selector right to view pictures in the order recorded, left to view pictures in reverse order. Keep the selector pressed to scroll rapidly to the desired frame.



Choosing a Display Format

In playback mode, press **DISP/BACK** to select a playback display format.

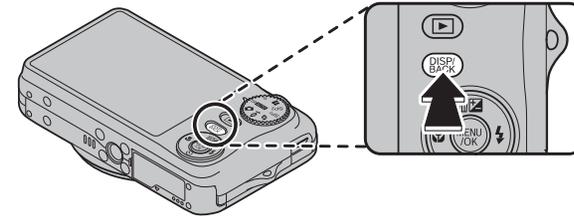

The selection changes each time **DISP/BACK** is pressed.

INFORMATION ON



INFORMATION OFF




Note

Pictures taken using other cameras are indicated by a  ("gift image") icon during playback.

Playback Zoom

Select  to zoom in on pictures displayed in single-frame playback; select  to zoom out. When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.

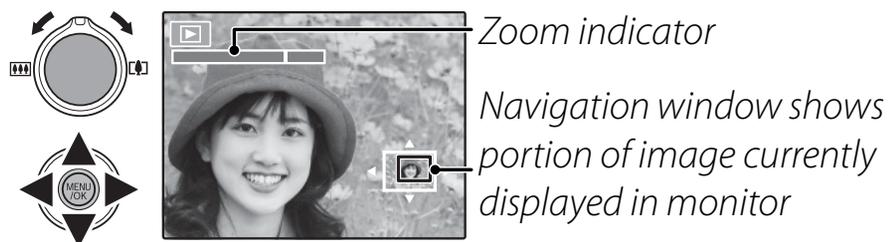

Press **DISP/BACK** to exit zoom.

👉 Note

Playback zoom is not available with images saved or cropped at the size of **640**, or copies created with  **RESIZE** (pg. 72).


👤 Intelligent Face Detection

Pictures taken with Intelligent Face Detection (pg. 24) are indicated by a  icon. Press the  button to zoom in on the subject selected with Intelligent Face Detection. You can then use the zoom control to zoom in and out.




Multi-Frame Playback

To change the number of images displayed, select  when a picture is shown full-frame in the monitor.

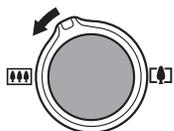

Select  to increase the number of pictures displayed to one frame with previous and next, two, nine, and a hundred.

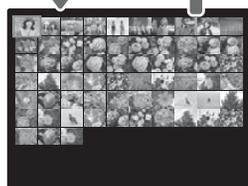

Select  to reduce the number of images displayed.

Use the selector to highlight images and press **MENU/OK** to view the highlighted image full frame. In the nine- and hundred-frame displays, press the selector up or down to view more pictures.

Tip: Two-Frame Display

Two-frame display can be used to compare pictures taken in  mode.



Image Search

Image Search based on categories

Search for pictures by date, subject, scene, and file type.

1 Press **MENU/OK** to display the playback menu.



2 Press the selector up or down to highlight  **IMAGE SEARCH**.



3 Press **MENU/OK** to display the search category.



4 Press the selector up or down to highlight the desired search category.



Option	Description
BY DATE	Show images based on the specified date.
BY FACE	Show images based on specified face information.
BY SCENE	Show images based on the specified scene mode.
BY TYPE OF DATA	Show images based on whether still pictures or movies.

5 Press **MENU/OK** to select the highlighted search category. A detailed search list will be displayed.



6 Select a category in the list. Specified images will be displayed.

Using Playback Menu with Image Search

Three playback menus can be performed with image search mode.

- 1** Press **MENU/OK** while the search results are displayed.
The playback menu will be displayed.



- 2** Press the selector up or down to highlight the desired menu item.



- 3** Press **MENU/OK** to select the highlighted menu.



Tips

- For each operation, refer to the page listed.


Option	See Page
 ERASE	40
 PROTECT	70
 SLIDE SHOW	69

- Select **EXIT SEARCH** to go back to the normal playback mode.

Deleting Pictures

The **ERASE** option in the playback menu can be used to delete still pictures and movies, increasing the amount of space available on the memory card or in internal memory (for information on deleting pictures in single-frame playback, see page 19). *Note that deleted pictures can not be recovered. Copy important pictures to a computer or other storage device before proceeding.*


- 1** Press **MENU/OK** to display the playback menu.

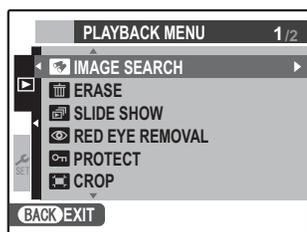

- 2** Press the selector up or down to highlight  **ERASE**.



- 3** Press the selector right to display delete options.

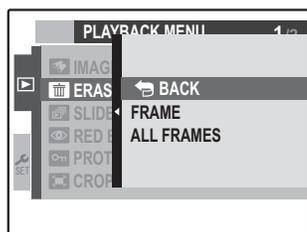

- 4** Press the selector up or down to highlight **FRAME** or **ALL FRAMES**.



- 5** Press **MENU/OK** to display options for the selected item (see following page).




Tips: Deleting Pictures

- When a memory card is inserted, pictures will be deleted from the memory card; otherwise, pictures will be deleted from internal memory.
- Protected pictures can not be deleted. Remove protection from any pictures you wish to delete (pg. 70).
- If a message appears stating that the selected images are part of a DPOF print order, press **MENU/OK** to delete the pictures.

■ **FRAME: Deleting Selected Images**

Selecting **FRAME** displays the dialog shown at right.

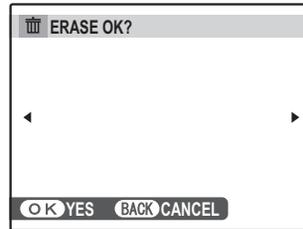


Press the selector left or right to scroll through pictures and press **MENU/OK** to delete the current picture (the picture is deleted immediately; be careful not to delete the wrong picture).



Press **DISP/BACK** to exit when all the desired pictures have been deleted.

■ **ALL FRAMES: Deleting All Images**


Selecting **ALL FRAMES** displays the confirmation shown at right.

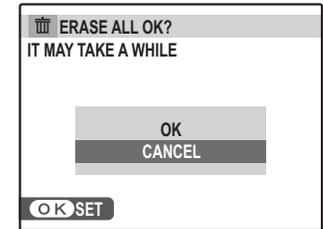

Highlight **OK** and press **MENU/OK** to delete all unprotected pictures.





The dialog shown at right is displayed during deletion. Press **DISP/BACK** to cancel before all pictures have been deleted (any pictures deleted before the button was pressed can not be recovered).

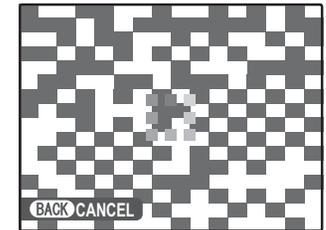

Recording Movies



Shoot short movies with sound. Sound is recorded via the built-in microphone; do not cover the microphone during recording.

- 1 Rotate the mode dial to  (movie mode).

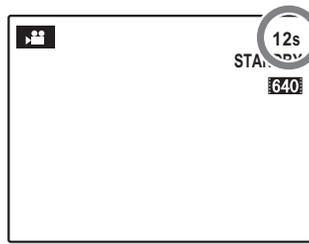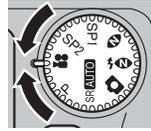


Display shows time available

- 2 Frame the scene using the zoom control.

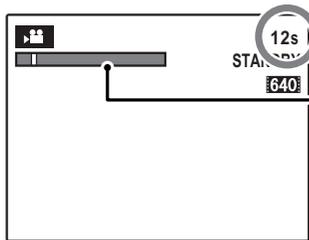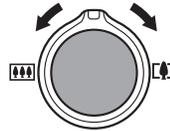

Zoom indicator

- 3 Press the shutter button all the way down to start recording.

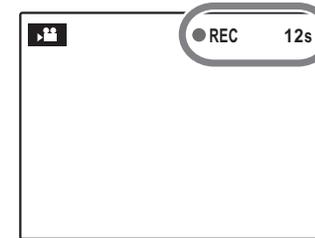

● REC and time remaining are displayed


Tip

There is no need to keep the shutter button pressed during recording.

Notes

- Focus, exposure and white balance are adjusted automatically throughout recording. The color and brightness of the image may vary from that displayed before recording begins.
- Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.

- 4** Press the shutter button halfway to end recording. Recording ends automatically when the movie reaches maximum length or memory is full.

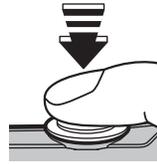

⚠ Caution

The indicator lamp lights while movies are being recorded. Do not open the battery chamber card during shooting or while the indicator lamp is lit. Failure to observe this precaution could prevent the movie from being played back.

👉 Note


Movies are recorded as monaural motion JPEG files.

🔍 Choosing the Frame Size

To choose the frame size, press **MENU/OK** and select **QUALITY**.

Choose a pixel size in the following:

- **HD 1280** (1280 × 720) for high definition movies
- **640** (640 × 480) for standard definition movies
- **320** (320 × 240) for longer movies

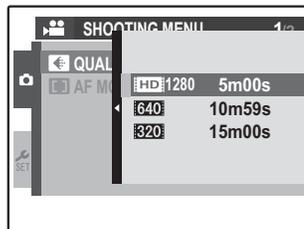


🔍 Selecting focus mode

Select **AF MODE** in the shooting menu.

- **CENTER**: When zooming in or out, the camera refocus on the subject in the center of the frame.
- **CONTINUOUS**: The camera continuously adjusts focus to reflect changes in the distance to the main subject.


▶ Viewing Movies

During playback, movies are displayed in the monitor as shown at right. The following operations can be performed while a movie is displayed:

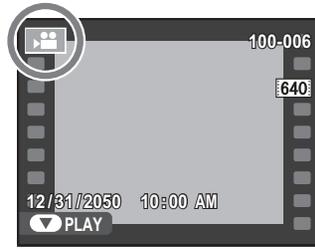

Operation	Description
Start/pause playback	Press the selector down to start playback. Press again to pause.
End playback/delete	Press the selector up to end playback. If playback is not in progress, pressing the selector up will delete the current movie.
Advance/rewind	Press the selector right to advance, left to rewind. If playback is paused, the movie will advance or rewind one frame each time the selector is pressed.
Adjust volume	Press MENU/OK to pause playback and display volume controls. Press the selector up or down to adjust the volume; press MENU/OK again to resume playback.

Progress is shown in the monitor during playback.

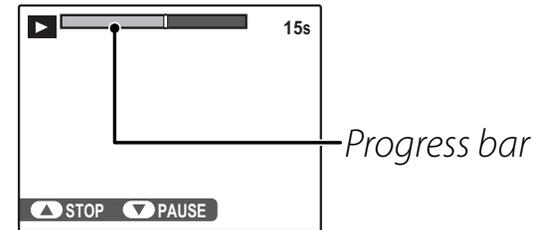

📖 **Tip: Viewing Movies on a Computer**


Copy movies to the computer before viewing.

⚠ **Caution**

Do not cover the speaker during playback.

Viewing Pictures on TV

Connect the camera to a TV and tune the television to the video channel to show pictures to a group. Connect an A/V cable (optional), as shown below. Be sure that the camera is off before connecting the cable.

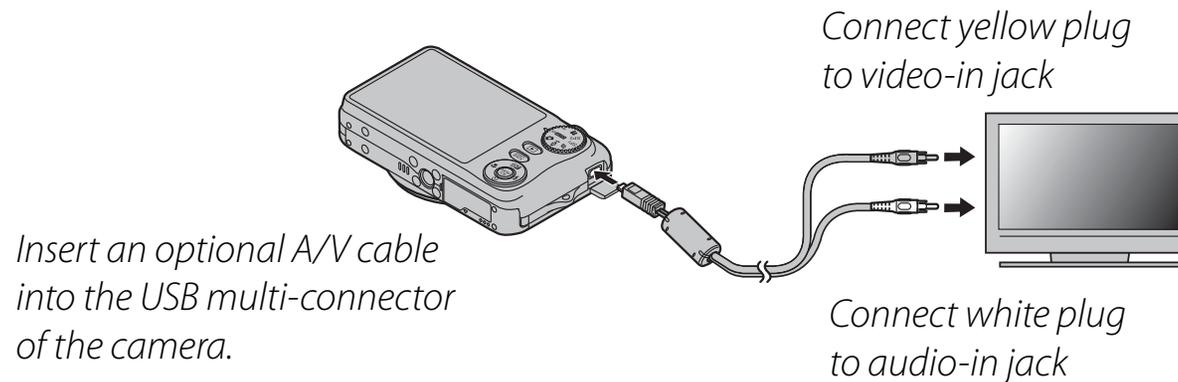

Press **▶** for about a second to turn the camera on. The camera monitor turns off and pictures and voice memos are played back on the TV. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.

⬅ Note

Image quality drops during movie playback.

⚠ Cautions

- When connecting the cable, be sure the connectors are fully inserted.
- HD movies are played back as standard definition movies on the TV if using an optional A/V cable.
- To play back High Definition movies on HDTV, optional accessories are required. For more information, please refer to the following URL.

http://www.fujifilm.com/products/digital_cameras/index.html


Printing Pictures via USB

If the printer supports PictBridge, the camera can be connected directly to the printer and pictures can be printed without first being copied to a computer. Note that depending on the printer, not all the functions described below may be supported.




Connecting the Camera

- 1 Connect the supplied USB cable as shown and turn the printer on.

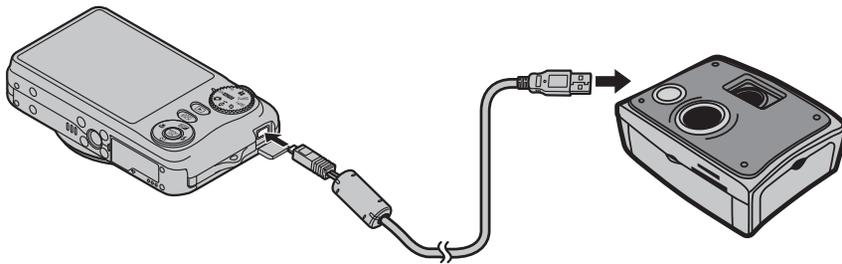

- 2 Press the button for about a second to turn the camera on. **USB** will be displayed in the monitor, followed by the PictBridge display shown below at right.

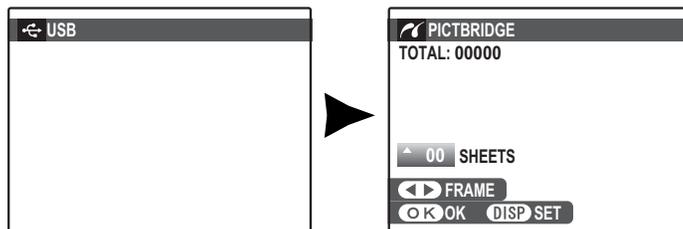

Printing Selected Pictures

- 1 Press the selector left or right to display a picture you wish to print.




Note

To print one copy of the current picture, proceed directly to Step 3.

- 2 Press the selector up or down to choose the number of copies (up to 99). Repeat steps 1–2 to select additional pictures.



- 3 Press **MENU/OK** to display a confirmation dialog.

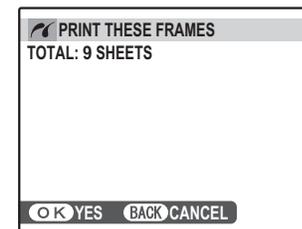

- 4 Press **MENU/OK** to start printing.



Tip: Printing the Date of Recording


To print the date of recording on pictures, press **DISP/BACK** in steps 1–2 to display the PictBridge menu (see “Printing the DPOF Print Order,” on pg. 48). Press the selector up or down to highlight **PRINT WITH DATE**  and press **MENU/OK** to return to the PictBridge display (to print pictures without the date of recording, select **PRINT WITHOUT DATE**). To ensure that the date is correct, set the camera clock before taking pictures. Note that the **PRINT WITH DATE**  option is only available with printers that support date printing.

Notes

- Use an optional AC adapter and DC coupler to power the camera for extended periods.
- Print pictures from internal memory or a memory card that has been formatted in the camera.
- When pictures are printed via direct USB connection, page size, print quality, and border selections are made using the printer.

During Printing

The message shown at right is displayed during printing. Press **DISP/BACK** to cancel before all pictures are printed (depending on the printer, printing may end before the current picture has printed).

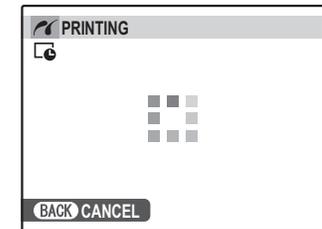

If printing is interrupted, press  to turn the camera off and then on again.


Disconnecting the Camera

Confirm that the above message is not displayed and turn the camera off. Disconnect the USB cable.

Printing the DPOF Print Order

To print the print order created with  **PRINT ORDER (DPOF)** in the playback menu (pg. 49):


- 1** In the PictBridge display, press **DISP/BACK** to open the PictBridge menu. 

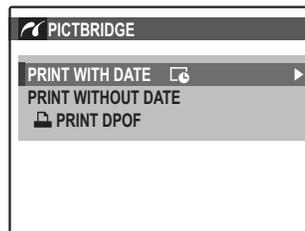

- 2** Press the selector up or down to highlight  **PRINT DPOF**.



- 3** Press **MENU/OK** to display a confirmation dialog. 

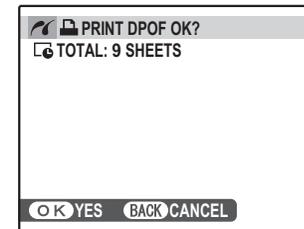

- 4** Press **MENU/OK** to start printing. 

Creating a DPOF Print Order

The **PRINT ORDER (DPOF)** option in the playback menu can be used to create a digital “print order” for PictBridge-compatible printers (pg. 48) or devices that support DPOF.


DPOF

DPOF (Digital Print Order Format) is standard that allows pictures to be printed from “print orders” stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.



WITH DATE / WITHOUT DATE

To modify the DPOF print order, select **PRINT ORDER (DPOF)** in the playback menu and press the selector up or down to highlight **WITH DATE ** or **WITHOUT DATE**.

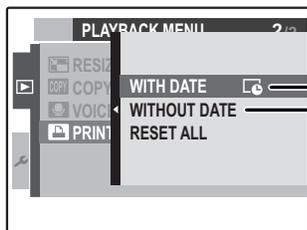

WITH DATE : Print date of recording on pictures.


WITHOUT DATE: Print pictures without date.

Press **MENU/OK** and follow the steps below.

1 Press the selector left or right to display a picture you wish to include in or remove from the print order.



2 Press the selector up or down to choose the number of copies (up to 99). To remove a picture from the order, press the selector down until the number of copies is 0.

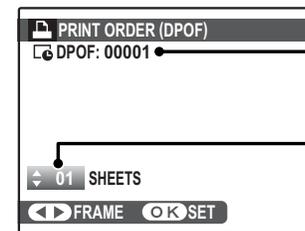

Total number of prints

Number of copies

Tip: Intelligent Face Detection

If the current picture was created with Intelligent Face Detection, pressing **▼** sets the number of copies to the number of faces detected.


3 Repeat steps 1–2 to complete the print order. Press **MENU/OK** to save the print order when settings are complete, or **DISP/BACK** to exit without changing the print order.



4 The total number of prints is displayed in the monitor. Press **MENU/OK** to exit.




The pictures in the current print order are indicated by a  icon during playback.

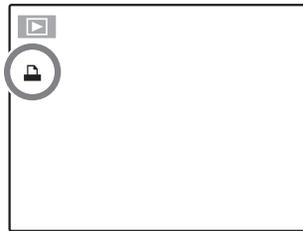


Notes

- Remove the memory card to create or modify a print order for the pictures in internal memory.
- Print orders can contain a maximum of 999 pictures.
- If a memory card is inserted containing a print order created by another camera, the message shown at right will be displayed. Pressing **MENU/OK** cancels the print order; a new print order must be created as described above.
- Whether **WITH DATE** /**WITHOUT DATE** is available may depend on the printer setting. Check the printer.

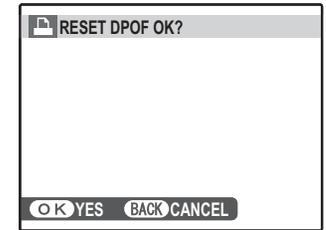

RESET ALL

To cancel the current print order, select **RESET ALL** in the  **PRINT ORDER (DPOF)** menu. The confirmation shown at right will be displayed; press **MENU/OK** to remove all pictures from the order.

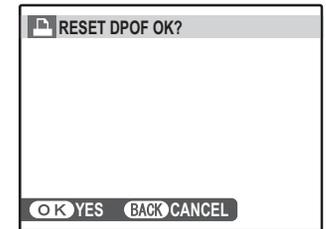

Viewing Pictures on a Computer

The supplied software can be used to copy pictures to a computer, where they can be stored, viewed, organized, and printed. Before proceeding, install the software as described below. **Do NOT connect the camera to the computer until installation is complete.**

Installing the Software

Two applications are supplied: MyFinePix Studio for Windows and FinePixViewer for the Macintosh. Installation instructions for Windows are on pages 51–52, those for the Macintosh on pages 53–54.

Windows: Installing MyFinePix Studio

1 Confirm that the computer meets the following system requirements:

	Windows 7*	Windows Vista*	Windows XP*
CPU	3 GHz Pentium 4 or better		2 GHz Pentium 4 or better
RAM	1 GB or more		512 MB or more
Free disk space	15 GB or more		2 GB or more
Video	<ul style="list-style-type: none">• 1,024 × 768 pixels or more with 24-bit color or better• A graphics processing unit (GPU) that supports DirectX 7 or later		
Other	<ul style="list-style-type: none">• Built-in USB port recommended. Operation is not guaranteed other USB ports.• Internet connection (56 kbps or faster recommended) required to use FinePix Internet Service; Internet connection and e-mail software required to use e-mail option.		

* Other versions of Windows are not supported. Only pre-installed operating systems are supported; operation is not guaranteed on home-built computers or computers that have been upgraded from earlier versions of Windows.

- 2 Start the computer. Log in to an account with administrator privileges before proceeding.
- 3 Exit any applications that may be running and insert the installer CD in a CD-ROM drive.

Windows 7/Windows Vista

If an AutoPlay dialog is displayed, click **SETUP.EXE**. A “User Account Control” dialog will then be displayed; click **Yes** (Windows 7) or click **Allow** (Windows Vista).

The installer will start automatically; click **Installing MyFinePix Studio** and follow the on-screen instructions to install MyFinePix Studio.

If the Installer Does Not Start Automatically

If the installer does not start automatically, select **Computer** or **My Computer** from the Start menu, then double-click the **FINEPIX** CD icon to open the FINEPIX CD window and double-click **SETUP** or **SETUP.EXE**.

- 4 If prompted to install Windows Media Player or DirectX, follow the on-screen instructions to complete installation.
- 5 Remove the installer CD from the CD-ROM drive when installation is complete. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software. The version number is printed at the top of the CD label for reference when updating the software or contacting customer support.

Installation is now complete. Proceed to “Connecting the Camera” on page 55.

Macintosh: Installing FinePixViewer

1 Confirm that the computer meets the following system requirements:

CPU	PowerPC or Intel
OS	Pre-installed versions of Mac OS X version 10.3.9–10.6 (for the latest information, visit http://www.fujifilm.com/)
RAM	256 MB or more
Free disk space	A minimum of 200 MB required for installation with 400 MB available when FinePixViewer is running
Video	800 × 600 pixels or more with thousands of colors or better
Other	<ul style="list-style-type: none"> • Built-in USB port recommended. Operation is not guaranteed other USB ports. • Internet connection (56 kbps or faster recommended) required to use FinePix Internet Service; Internet connection and e-mail software required to use e-mail option.

2 After starting the computer and quitting any applications that may be running, insert the installer CD in a CD-ROM drive and double-click **Installer for Mac OS X**.

3 An installer dialog will be displayed; click **Installing FinePixViewer** to start installation. Enter an administrator name and password when prompted and click **OK**, then follow the on-screen instructions to install FinePixViewer. Click **Exit** to quit the installer when installation is complete.

- 4** Remove the installer CD from the CD-ROM drive. Note that you may be unable to remove the CD if Safari is running; if necessary, quit Safari before removing the CD. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software. The version number is printed at the top of the CD label for reference when updating the software or contacting customer support.
- 5 Mac OS X 10.5 or earlier:** Open the “Applications” folder, start Image Capture, and select **Preferences...** from the Image Capture application menu. The Image Capture preferences dialog will be displayed. Choose **Other...** in the **When a camera is connected, open** menu, then select **FPVBridge** in the “Applications/FinePixViewer” folder and click **Open**. Quit Image Capture.

Mac OS X 10.6: Connect the camera and turn it on. Open the “Applications” folder and start Image Capture. The camera will be listed under **DEVICES**; select the camera and choose **FPVBridge** from the **Connecting this camera opens** menu and click **Open**. Quit Image Capture.

Installation is now complete. Proceed to “Connecting the Camera” on page 55.

Connecting the Camera

- 1 If the pictures you wish to copy are stored on a memory card, insert the card into the camera (pg. 8). If no card is inserted, pictures will be copied from internal memory.


← Note

Windows users may require the Windows CD when starting the software for the first time.

⚠ Caution

Loss of power during transfer could result in loss of data or damage to internal memory or the memory card. Charge the battery before connecting the camera.

- 2 Turn the camera off and connect the supplied USB cable as shown, making sure the connectors are fully inserted. Connect the camera directly to the computer; do not use a USB hub or keyboard.

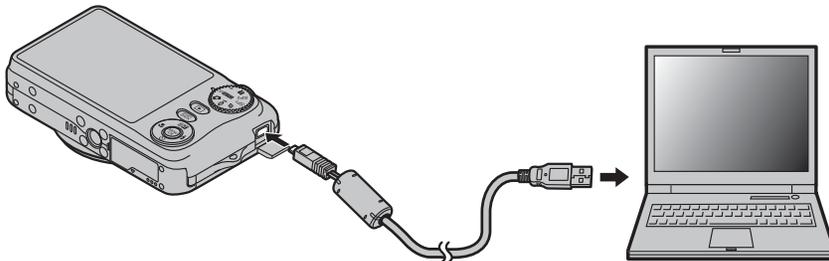

- 3 Press the  button for about a second to turn the camera on. MyFinePix Studio or FinePixViewer will start automatically; follow the on-screen instructions to copy pictures to the computer. To exit without copying pictures, click **Cancel**.

⚠ Caution

If the software does not start automatically, the software may not be correctly installed. Disconnect the camera and reinstall the software.

For more information on using the supplied software, start the application and select the appropriate option from the **Help** menu.

Cautions

- If a memory card containing a large number of images is inserted, there may be a delay before the software starts and you may be unable to import or save images. Use a memory card reader to transfer pictures.
- Make sure that the computer does not display a message stating that copying is in progress and that the indicator lamp is out before turning the camera off or disconnecting the USB cable (if the number of images copied is very large, the indicator lamp may remain lit after the message has cleared from the computer display). Failure to observe this precaution could result in loss of data or damage to internal memory or the memory card.
- Disconnect the camera before inserting or removing memory cards.
- In some cases, it may not be possible to access pictures saved to a network server using the supplied software in the same way as on a standalone computer.
- The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

Disconnecting the Camera

After confirming that the indicator lamp is out, follow the on-screen instructions to turn the camera off and disconnect the USB cable.


Uninstalling the Supplied Software

Only uninstall the supplied software when it is no longer required or before beginning reinstallation. After quitting the software and disconnecting the camera, drag the “FinePixViewer” folder from “Applications” into the Trash and select **Empty Trash** in the **Finder** menu (Macintosh), or open the control panel and use “Programs and Features” (Windows 7/Windows Vista) or “Add or Remove Programs” (Windows XP) to uninstall MyFinePix Studio. Under Windows, one or more confirmation dialogs may be displayed; read the contents carefully before clicking **OK**.

Using the Menus: Shooting Mode

Using the Shooting Menu


- 1** Press **MENU/OK** to display the shooting menu.

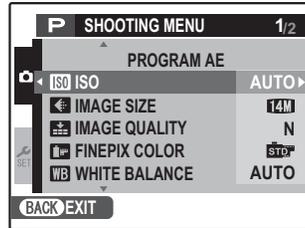

- 2** Press the selector up or down to highlight the desired menu item.



- 3** Press the selector right to display options for the highlighted item.

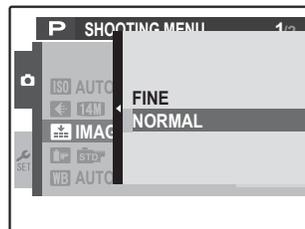

- 4** Press the selector up or down to highlight the desired option.



- 5** Press **MENU/OK** to select the highlighted option.



- 6** Press **DISP/BACK** to exit from the menu.



Note

Some options are not available in all shooting modes.


Shooting Menu Options

	Menu item	Description	Options	Default	
1/2	 SCENE POSITION	Choose a scene for SP1/SP2 mode (pg. 21).	 (): FinePix JZ500/JZ510 series only	SP1:  SP2: 	
	 ISO	Adjust ISO sensitivity (pg. 59). Choose higher values when the subject is poorly lit.	AUTO / 3200 / 1600 / 800 / 400 / 200 / 100	AUTO	
	 IMAGE SIZE	Choose image size (pg. 59).	FinePix JZ500/JZ510 series	14M / 12M 3:2 / 11M 16:9 / 7M / 3M / 2M 16:9 / 2M / 640	14M
			FinePix JZ300/JZ310 series	12M / 11M 3:2 / 9M 16:9 / 6M / 3M / 2M 16:9 / 2M / 640	12M
	 IMAGE QUALITY	Choose image quality (pg. 60).	FINE / NORMAL	NORMAL	
 FINEPIX COLOR	Shoot pictures in standard or saturated color or in black-and-white (pg. 60).	STD / C / B / SEPIA	STD		
 WHITE BALANCE	Adjust color for different light sources (pg. 61).	AUTO / 	AUTO		
2/2	 CONTINUOUS	Shoot a series of pictures (pg. 61).	 / OFF	OFF	
	 FACE DETECTION	Turn Intelligent Face Detection on or off (pg. 24).	ON / OFF	—	
	 AF MODE	Choose how the camera selects a focus area (pg. 62).			
	 FACE RECOGNITION (FinePix JZ500/JZ510 series only)	Personal information (name, birthday, etc.) can be registered with a face image (pg. 62).	—	—	

ISO ISO

Control the camera's sensitivity to light. Higher values can be used to reduce blur when lighting is poor; note, however, that mottling may appear in pictures taken at high sensitivities. If **AUTO** is selected, the camera will adjust sensitivity automatically in response to shooting conditions.

Settings other than **AUTO** are shown by an icon in the display.

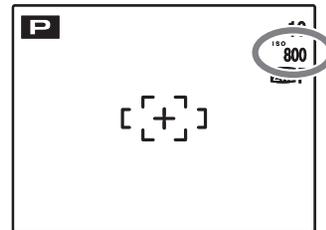**IMAGE SIZE**

Choose the size at which still pictures are recorded. Large pictures can be printed at large sizes with no drop in quality; small pictures require less memory, allowing more pictures to be recorded.

Option	Prints at sizes up to
14M , 12M , 11M , 9M	31 × 23 cm (12 × 9 in.) or 31 × 21 cm (12 × 8 in.)
7M , 6M	22 × 16 cm (8.5 × 6.5 in.)
3M	17 × 13 cm (7 × 5 in.)
2M	14 × 10 cm (5.3 × 4 in.)
640	5 × 4 cm (2 × 1.5 in.). Suited to e-mail or the web.

The number of pictures that can be taken at current settings (pg. 101) is displayed to the top right in the monitor.

Aspect Ratio

Pictures with an aspect ratio of 4:3 have the same proportions as the camera display. Pictures with an aspect ratio of 3:2 have the same proportions as a frame of 35-mm film, while an aspect ratio of 16:9 is suited to display on High Definition (HD) devices.



4:3



3:2



16:9

Note

Image quality is not reset when the camera is turned off or another shooting mode is selected.

IMAGE QUALITY

Choose how much image files are compressed. Select **FINE** (low compression) for higher image quality, **NORMAL** (high compression) to increase the number of pictures that can be stored.

FINEPIX COLOR

Enhance contrast and color saturation or take pictures in black and white.

Option	Displayed in
 F-STANDARD	Standard contrast and saturation. Recommended in most situations.
 F-CHROME	Vivid contrast and color. Choose for vivid shots of flowers or enhanced greens and blues in landscapes.
 F-B&W	Take pictures in black and white.
 SEPIA	Take pictures in sepia.

Settings other than **F-STANDARD** are shown by an icon in the monitor.

← Notes

- **FINEPIX COLOR** is not reset when the camera is turned off or another shooting mode is selected.
- Depending on the subject, the effects of **F-CHROME** may not be visible in the monitor.

WB WHITE BALANCE

For natural colors, choose a setting that matches the light source (for an explanation of “white balance,” see the Glossary on page 100).

Option	Description
AUTO	White balance adjusted automatically.
	For subjects in direct sunlight.
	For subjects in the shade.
	Use under “daylight” fluorescent lights.
	Use under “warm white” fluorescent lights.
	Use under “cool white” fluorescent lights.
	Use under incandescent lighting.

If **AUTO** does not produce the desired results (for example, when taking close-ups), choose the option that matches the light source.

← Note

Results vary with shooting conditions. Play pictures back after shooting to check colors in the monitor.

CONTINUOUS

Capture motion in a series of pictures. The camera takes up to three pictures while the shutter-release button is pressed.

← Notes



- Frame rate varies with shutter speed.
- Focus and exposure are determined by the first frame in each series.
- The number of pictures that can be recorded depends on the memory available. Additional time may be required to record pictures when shooting ends. The pictures are displayed in the monitor while recording is in progress.



AF MODE

This option controls how the camera selects the focus area. Regardless of the option selected, the camera will focus on the subject in the center of the monitor when macro mode is on (pg. 30).

-  **CENTER:** The camera focuses on the subject in the center of the frame. This option can be used with focus lock.
-  **TRACKING:** When  is set, the focus frame is displayed in the center of the monitor as shown. Place the subject in the focus frame and press the  button to set **TRACKING**. The focus frame will track the moving subject, keeping it in focus.

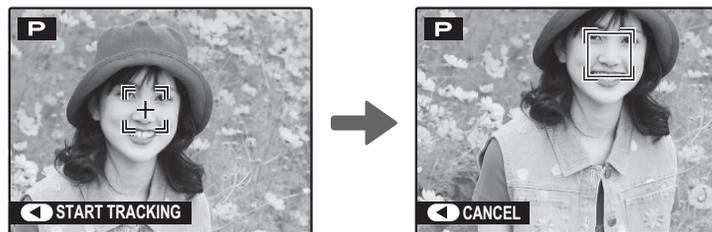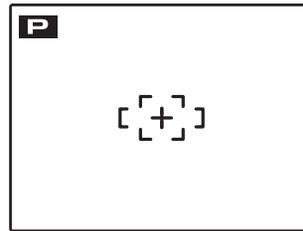

Note


TRACKING may not work depending on the subject.

FACE RECOGNITION (FinePix JZ500/JZ510 series only)

Once personal information is registered with a face, the camera recognizes the registered face and prioritizes focus and exposure to that face. When playing back the face, the registered information (name, birthday, etc.) can be displayed.

■ Activating FACE RECOGNITION

- 1 Select  **FACE RECOGNITION** from shooting menu to display options.

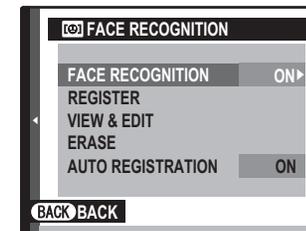

- 2 Press the selector up or down to highlight **FACE RECOGNITION**.



- 3 Press **MENU/OK** to display options.



4 Press the selector up or down to highlight **ON**.



5 Press **MENU/OK** to activate **FACE RECOGNITION**.



REGISTER

Shooting

1 Select **REGISTER** from **FACE RECOGNITION**.


2 Press **MENU/OK** to turn to shooting mode.



3 Press the shutter button to shoot. Capture a front face.



4 Press **MENU/OK** to display **PERSONAL INFO**.

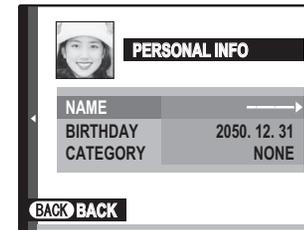

Note


When the message **!CANNOT REGISTER** is displayed, the camera has failed to register the face. Take a shot again.

Registering a name

1 Press the selector up or down to highlight **NAME** in **PERSONAL INFO**.



2 Press **MENU/OK** to display **NAME** window.

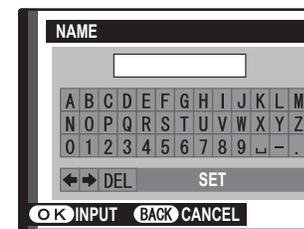

3 Press the selector left, right, up or down to highlight a letter.



4 Press **MENU/OK** to input the letter.



5 Repeat from step 2 to step 4 to input a name.

6 Press the selector left, right, up or down to highlight **SET**.



7 Press **MENU/OK** to register.



← Notes

- Highlight **DEL** and press **MENU/OK** to erase a letter.
- Highlight **→** and press **MENU/OK** to put a space.
- Up to 14 letters can be displayed.

Registering a birthday

1 Press the selector up or down to highlight **BIRTHDAY** in **PERSONAL INFO**.



2 Press **MENU/OK** to display **BIRTHDAY**.



3 Input the date of birthday in the same way as setting **DATE/TIME** (pg. 12).

4 Press **MENU/OK** to register.




← Note

If shooting date matches the birthday of the person with the green border during face zoom, **Happy Birthday!** will be displayed with the name.

Registering a category

1 Press the selector up or down to highlight **CATEGORY** in **PERSONAL INFO**.

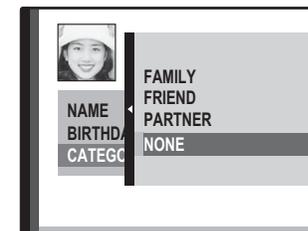

2 Press the selector up or down to highlight a category.




3 Press **MENU/OK** to register.



VIEW & EDIT


1 Select **VIEW & EDIT** from **FACE RECOGNITION** to display **REGISTERED FACE**.

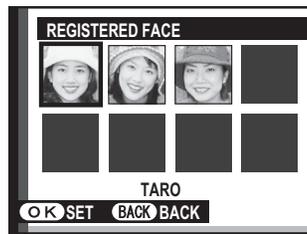

2 Press the selector left or right to highlight a face to view or edit.



3 Press **MENU/OK** to display **PERSONAL INFO**.

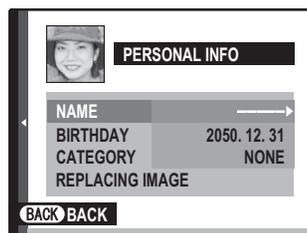

4 View the registration or edit as the same way of **REGISTER** (pg. 63).

Note

Select **REPLACING IMAGE** to take another face image and replace the registered image with it.


ERASE

1 Select **ERASE** from **FACE RECOGNITION**.

2 Press the selector left or right to highlight a face to erase.



3 Press **MENU/OK** to display **ERASE** window.

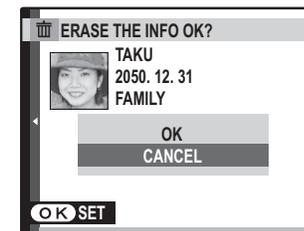

4 Press the selector up or down to highlight **OK**.



- 5** Press **MENU/OK** to delete a registration.



■ AUTO REGISTRATION

Select **AUTO REGISTRATION** from **FACE RECOGNITION** and set it to **ON**. After shooting the same face several times with **FACE DETECTION** turned on, the camera automatically recognizes the face.

👉 Notes

- When the camera recognizes a face that has been shot many times, the message **REGISTER THIS PERSON?** appears. Press **MENU/OK** to display **PERSONAL INFO** so that you can register the face and its personal information.
- Using only **AUTO REGISTRATION** may be difficult to recognize a face. In that case, register a face and its personal information from **REGISTER**.

👤 FACE RECOGNITION

- Up to 8 people's information can be registered. If 8 people's information has already been registered, the confirmation window appears when trying to add a new one. Delete a registered person from **VIEW & EDIT** and register the new person.
- When 8 people's information has already been registered, **AUTO REGISTRATION** does not function.
- If the camera detects two or more faces registered by **FACE RECOGNITION**, a green border and orange border(s) will be displayed on the faces when to shoot. A registered name will appear only on the face with the green border. White borders will be displayed on faces which have not been registered. When no name has been registered, "----" is displayed.

⚠️ Cautions

- **FACE RECOGNITION** does not function when **IMAGE SIZE** is **640**.
- **FACE RECOGNITION** may not function in the following:
 - the subject does not face front.
 - the face is not positioned within a frame.
 - the feature of the face varies (because of age or expression).


Using the Menus: Playback Mode

Using the Playback Menu

1 Press  to enter playback mode (pg. 11).




2 Press **MENU/OK** to display the playback menu.

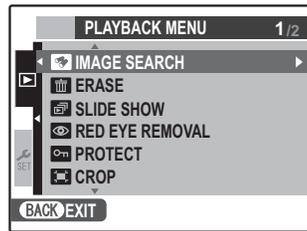

3 Press the selector up or down to highlight the desired menu item.



4 Press the selector right to display options for the highlighted item.

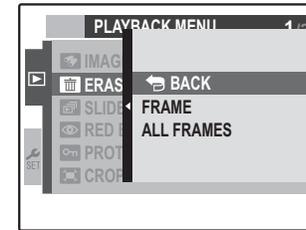

5 Press the selector up or down to highlight the desired option.



6 Press **MENU/OK** to select the highlighted option.



Playback Menu Options

The following options are available:

	Option	Description
1/2	 IMAGE SEARCH	Search images based on categories (pg. 38).
	 ERASE	Delete all or selected pictures (pg. 40).
	 SLIDE SHOW	View pictures in a slide show (pg. 69).
	 RED-EYE REMOVAL	Create copies with reduced red eye (pg. 69).
	 PROTECT	Protect pictures from accidental deletion (pg. 70).
	 CROP	Create cropped copies of pictures (pg. 71).
2/2	 RESIZE	Create small copies of pictures (pg. 72).
	 IMAGE ROTATE	Rotate pictures (pg. 72).
	 COPY	Copy pictures between internal memory and a memory card (pg. 73).
	 VOICE MEMO	Add voice memos to pictures (pg. 75).
	 ERASE FACE RECOG. (FinePix JZ500/ JZ510 series only)	Erase personal information registered with a face that has been selected (pg. 76).
	 PRINT ORDER (DPOF)	Select pictures for printing on DPOF- and PictBridge-compatible devices (pg. 49).

SLIDE SHOW

View pictures in an automated slide show. Choose the type of show and press **MENU/OK** to start. Press **DISP/BACK** at any time during the show to view on-screen help. When a movie is displayed, movie playback will begin automatically, and the slide show will continue when the movie ends. The show can be ended at any time by pressing **MENU/OK**.


Option	Displayed in
NORMAL	Press selector left or right to go back or skip ahead one frame. Select FADE-IN for fade transitions between frames.
FADE-IN	
NORMAL 	As above, except that camera automatically zooms in on faces selected with Intelligent Face detection.
FADE-IN 	
MULTIPLE	Display several pictures at once.

Note

The camera will not turn off automatically while a slide show is in progress.

RED EYE REMOVAL

If the current picture is marked with a  icon to indicate that it was taken with Intelligent Face Detection, this option can be used to remove red-eye. The camera will analyze the image; if red-eye is detected, the image will be processed to create a copy with reduced red-eye.

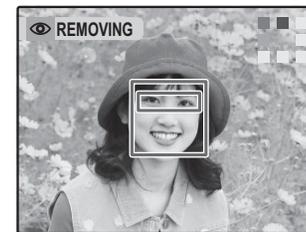

Notes

- Red eye may not be removed if the camera is unable to detect a face or the face is in profile. Results may differ depending on the scene. Red eye can not be removed from pictures that have already been processed using red-eye removal or pictures created with other devices.
- The amount of time needed to process the image varies with the number of faces detected.
- Copies created with  **RED EYE REMOVAL** are indicated by a  icon during playback.


PROTECT

Protect pictures from accidental deletion. The following options are available.


■ FRAME

Protect selected pictures.

- 1 Press the selector left or right to display the desired picture.

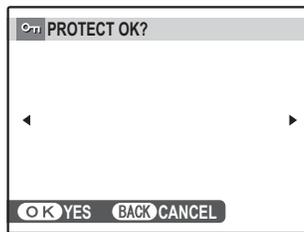

Picture not protected

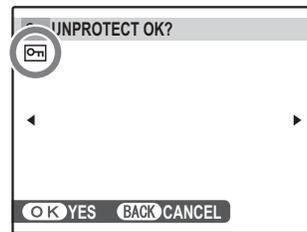

Protected picture

- 2 Press **MENU/OK** to protect the picture. If the picture is already protected, pressing **MENU/OK** will remove protection from the image.




- 3 Repeat steps 1–2 to protect additional images. Press **DISP/BACK** to exit when the operation is complete.




■ SET ALL

Press **MENU/OK** to protect all pictures, or press **DISP/BACK** to exit without changing picture status.

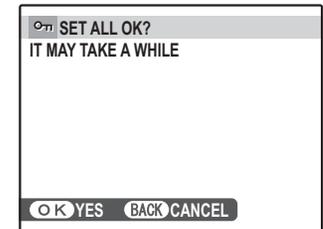


■ RESET ALL

Press **MENU/OK** to remove protection from all pictures, or press **DISP/BACK** to exit without changing picture status.

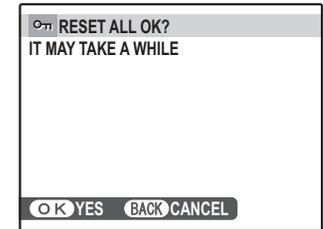

If the number of pictures affected is very large, the display at right will appear in the monitor while the operation is in progress.

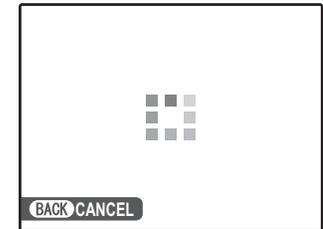

Press **DISP/BACK** to exit before the operation is complete.


Caution

Protected pictures will be deleted when the memory card or internal memory is formatted (pg. 81).

CROP

To create a cropped copy of a picture, play the picture back and select  **CROP** in the playback menu.

- 1 Use the zoom control to zoom in and out and use the selector to scroll the picture until the desired portion is displayed (to exit to single-frame playback without creating a cropped copy, press **DISP/BACK**).

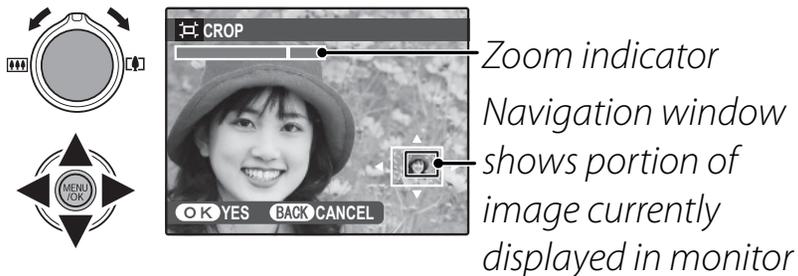


If the size of the final copy will be **640**, **OK** will be displayed in yellow.

Tip: Intelligent Face Detection

If the picture was shot with Intelligent Face Detection (pg. 24),  will be displayed in the monitor. Press the  button to zoom in on the selected face.



- 2 Press **MENU/OK**. A confirmation dialog will be displayed.

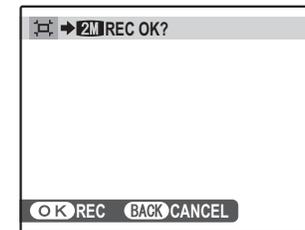

Copy size is shown at the top. Larger crops produce larger copies; all copies have an aspect ratio of 4:3.

- 3 Press **MENU/OK** to save the cropped copy to a separate file.



RESIZE


To create a small copy of a picture, play the picture back and select  **RESIZE** in the playback menu.

- 1 Press the selector up or down to highlight **640 STANDARD** or **320 SMALL**.
- 2 Press **MENU/OK** to select the highlighted option.
- 3 Press **MENU/OK** to copy the picture at the selected size.



IMAGE ROTATE

By default, pictures taken in tall orientation are displayed in wide orientation. Use this option to display pictures in the correct orientation in the monitor. It has no effect on pictures displayed on a computer or other device.

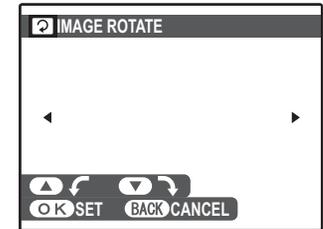

Notes

- Protected pictures can not be rotated. Remove protection before rotating pictures (pg. 70).
- The camera may not be able to rotate pictures created with other devices.

To rotate a picture, play the picture back and select  **IMAGE ROTATE** in the playback menu.

- 1** Press the selector down to rotate the picture 90° clockwise, up to rotate the picture 90° counterclockwise.



- 2** Press **MENU/OK** to confirm the operation (to exit without rotating the picture, press **DISP/BACK**).



The next time the picture is played back, it will automatically be rotated.


COPY COPY

Copy pictures between internal memory and a memory card.

- 1** Press the selector up or down to highlight **INTERNAL MEMORY** → **SD CARD** (copy pictures from internal memory to the memory card) or **SD CARD** → **INTERNAL MEMORY** (copy pictures from a memory card to internal memory).



- 2** Press the selector right to display options for the highlighted item.

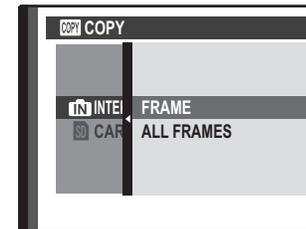

- 3** Press the selector up or down to highlight **FRAME** or **ALL FRAMES**.



- 4** Press **MENU/OK**.




Tip: Copying Pictures Between Memory Cards

To copy pictures between two memory cards, insert the source card and copy the pictures to internal memory, then remove the source card, insert the destination card, and copy the pictures from internal memory.

■ FRAME

Copy selected frames.

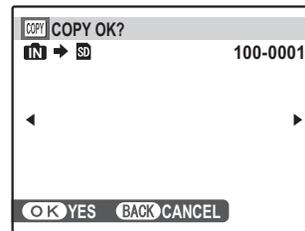

1 Press the selector left or right to display the desired picture.




2 Press **MENU/OK** to copy the picture.



3 Repeat steps 1–2 to copy additional images. Press **DISP/BACK** to exit when the operation is complete.

**■ ALL FRAMES**


Press **MENU/OK** to copy all pictures, or press **DISP/BACK** to exit without copying pictures.

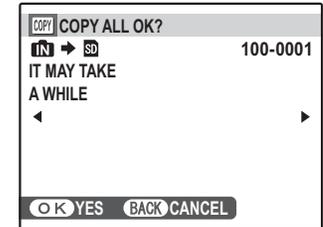**⚠ Cautions**

- Copying ends when the destination is full.
- DPOF print information is not copied (pg. 49).

VOICE MEMO


To add a voice memo to a still picture, select  **VOICE MEMO** after displaying the picture in playback mode.

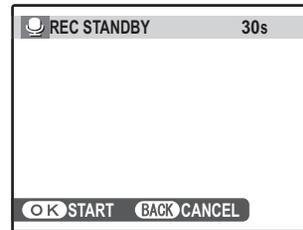


Note

Voice memos can not be added to movies or protected pictures. Remove protection from pictures before recording voice memos (pg. 70).


- 1 Hold the camera at a distance of about 20 cm (8 in.) and face the microphone.

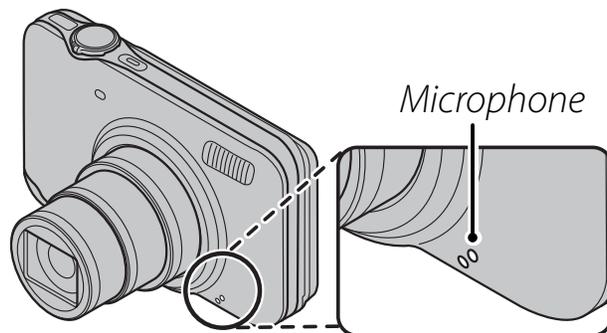

- 2 Press **MENU/OK** to start recording.

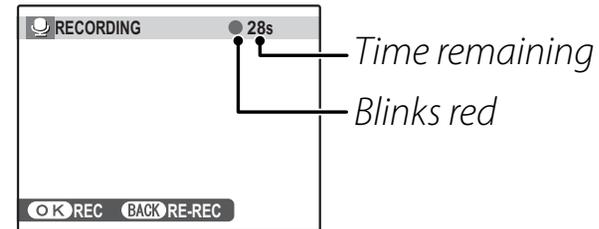


- 3 Press **MENU/OK** again to end recording. Recording ends automatically after 30 seconds.

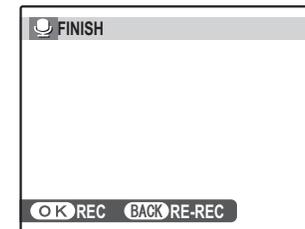


Notes

- If a voice memo already exists for the current picture, the options at right will be displayed. Select **RE-REC** to replace the existing memo.
- Voice memos are recorded as PCM-format WAV files (pg. 100).

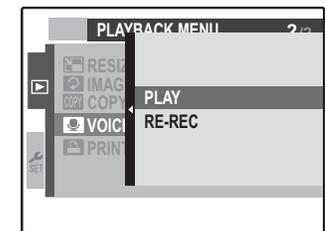

Playing Voice Memos

Pictures with voice memos are indicated by a  icon during playback. To play the voice memo, Select **PLAY**. To pause, press the selector down; to end playback, press the selector up. Press the selector left to rewind, right to fast forward. Volume controls can be displayed by pressing the **MENU/OK** button; press the selector up or down to adjust the volume, and press **MENU/OK** again to resume playback.

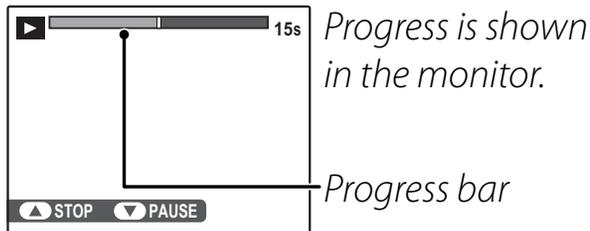


Note

The camera may not play voice memos recorded with other devices.

Caution

Do not cover the speaker during playback.

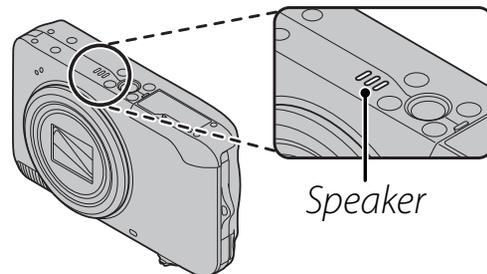

 **ERASE FACE RECOG.** (FinePix JZ500/JZ510 series only)

While playing back an image including faces registered with personal information, select

 **ERASE FACE RECOG.**

to enlarge a registered face.

Press **MENU/OK** to erase the personal information.



Note

Personal information cannot be erased when **IMAGE SIZE** is **640** or **320**.

The Setup Menu

Using the Setup Menu

1 Display the setup menu.


1.1 Press **MENU/OK** to display the menu for the current mode.



1.2 Press the selector left to highlight a left tab.



1.3 Press the selector up or down to select **SET**.
The setup menu appears.

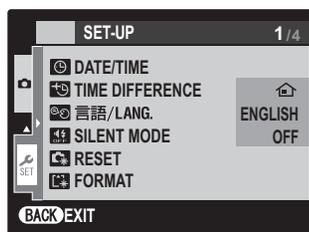


2 Adjust settings.

2.1 Press the selector right to activate the setup menu.



2.2 Press the selector up or down to highlight a menu item.

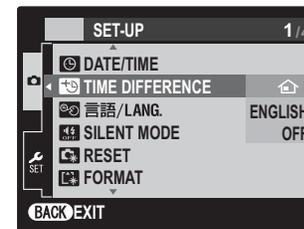

2.3 Press the selector right to display options for the highlighted item.



2.4 Press the selector up or down to highlight an option.



2.5 Press **MENU/OK** to select the highlighted option.



2.6 Press **DISP/BACK** to exit from the menu.



Setup Menu Options

	Menu item	Description	Options	Default
1/4	DATE/TIME	Set the camera clock.	—	—
	TIME DIFFERENCE	Set the clock to local time (pg. 80).	/	
	言語/LANG.	Choose a language.	See page 105	ENGLISH
	SILENT MODE	Turn off the speaker, flash, and self-timer lamp.	ON / OFF	OFF
	RESET	Reset all settings except DATE/TIME , TIME DIFFERENCE , BACKGROUND COLOR , and VIDEO SYSTEM to default values. A confirmation dialog will be displayed, press the selector left or right to highlight OK and press MENU/OK .	—	—
	FORMAT	Format internal memory or memory cards (pg. 81).	—	—
2/4	IMAGE DISP.	Choose how long pictures are displayed after shooting (pg. 81).	3 SEC / 1.5 SEC / ZOOM (CONTINUOUS) / OFF	1.5 SEC
	FRAME NO.	Choose how files are named (pg. 82).	CONTINUOUS / RENEW	CONTINUOUS
	OPERATION VOL.	Adjust the volume of camera controls.	(high) / (mid) / (low) / OFF (mute)	
	SHUTTER VOLUME	Adjust the volume of the shutter sound.		
	SHUTTER SOUND	Choose the sound made by the shutter.	♪ 1 / ♪ 2	♪ 1
PLAYBACK VOLUME	Adjust the volume for movie and voice memo playback (pg. 83).	—	7	

	Menu item	Description	Options	Default
3/4	 LCD BRIGHTNESS	Control the brightness of the display (pg. 83).	—	0
	 LCD MODE	Enable or disable monitor power saving (pg. 83).	 / 	—
	 AUTO POWER OFF	Choose the auto power off delay (pg. 83).	5 MIN / 2 MIN / OFF	2 MIN
	 DUAL IS MODE	Reduce blur. Choose whether the function is performed at all times when the camera is in the shooting mode ( CONTINUOUS), only when the shutter button is pressed halfway ( SHOOTING ONLY) or OFF .	 CONTINUOUS /  SHOOTING ONLY / OFF	
	 RED EYE REMOVAL	Remove “red-eye” effects caused by the flash.	ON / OFF	ON
	 DIGITAL ZOOM	Enable or disable digital zoom (pg. 84).	ON / OFF	OFF
4/4	 SAVE ORG IMAGE	Choose whether to save unprocessed copies of pictures taken using red-eye removal.	ON / OFF	OFF
	 BACKGROUND COLOR	Choose a color scheme for menus and cursors.	—	BLUE
	 GUIDANCE DISPLAY	Choose whether to display tool tips.	ON / OFF	ON
	 VIDEO SYSTEM	Choose a video mode for connection to a TV (pg. 45).	NTSC / PAL	—

TIME DIFFERENCE


When traveling, use this option to switch the camera clock instantly from your home time zone to the local time at your destination.

1 Specify the difference between local time and your home time zone.

1.1 Press the selector up or down to highlight  **LOCAL**.



1.2 Press the selector right to display the time difference.

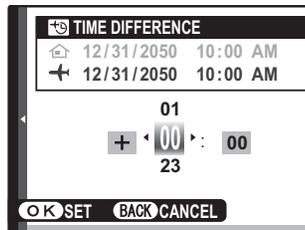

1.3 Press the selector left or right to highlight **+**, **-**, hours, or minutes; press up or down to edit. The minimum increment is 15 minutes.




1.4 Press **MENU/OK** when settings are complete.



2 Switch between local time and your home time zone.

To set the camera clock to local time, highlight  **LOCAL** and press **MENU/OK**.


To set the clock to the time in your home time zone, select  **HOME**. If  **LOCAL** is selected,  will be displayed in the monitor for three seconds after the camera enters shooting mode, and the date will be displayed in yellow.

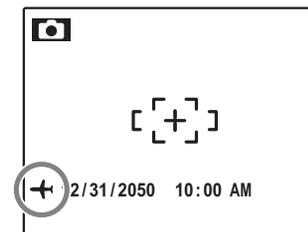

After changing time zones, check that the date and time are correct.

FORMAT

Format internal memory or a memory card. If a memory card is inserted in the camera,  will be displayed in the dialog shown at right and this option will format the memory card. If no memory card is inserted,  will be displayed and this option will format internal memory. Highlight **OK** and press **MENU/OK** to begin formatting.

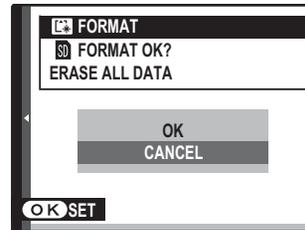

Cautions

- All data—including protected pictures—will be deleted. Be sure important files have been copied to a computer or other storage device.
- Do not open the battery cover during formatting.

IMAGE DISP.

Choose how long pictures are displayed in the monitor after shooting.

- **3 SEC:** Pictures are displayed for about 3 s before being recorded to the memory card.
- **1.5 SEC:** Pictures are displayed for about 1.5 s before being recorded to the memory card.
- **ZOOM (CONTINUOUS):** Pictures are displayed until the **MENU/OK** button is pressed. Pictures can be zoomed in to check fine details.

When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.

When the picture was taken with  **FACE DETECTION** turned on, or taken in the  **DOG** or  **CAT** mode, a detected face is zoomed. When two or more faces have been detected, you can move to the next face by pressing .

ZOOM (CONTINUOUS) is disabled in the following case:

-  is selected in the shooting mode.
- An option other than **OFF** is selected for  **CONTINUOUS**.


← Notes

- Pictures taken in continuous shooting modes are always displayed after shooting.
- The colors displayed at settings of **1.5 SEC** and **3 SEC** may differ from those in the final picture.

FRAME NO.

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used.

The file number is displayed during playback as shown at right. **FRAME NO.** controls whether file numbering is reset to 0001 when a new memory card is inserted or the current memory card or internal memory is formatted.

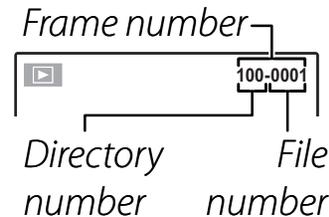


- **CONTINUOUS:** Numbering continues from the last file number used or the first available file number, whichever is higher. Choose this option to reduce the number of pictures with duplicate file names.
- **RENEW:** Numbering is reset to 0001 after formatting or when a new memory card is inserted.

← Notes

- If the frame number reaches 999-9999, the shutter release will be disabled (pg. 98).
- Selecting  **RESET** (pg. 78) resets  **FRAME NO.** to **CONTINUOUS** but does not reset frame numbering.
- Frame numbers for pictures taken with other cameras may differ.


PLAYBACK VOLUME

Press the selector up or down to choose volume for movie and voice memo playback and press **MENU/OK** to select.

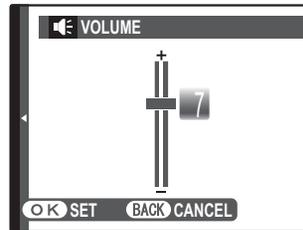

LCD BRIGHTNESS

Press the selector up or down to choose display brightness and press **MENU/OK** to select.

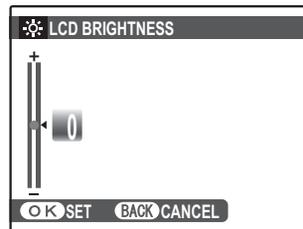

LCD MODE

Control the quality of the display in the monitor. Choose  for improved display quality,  for increased battery life.

AUTO POWER OFF

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually. Note that regardless of the option selected, the camera will not turn off automatically when connected to a printer (pg. 46) or computer (pg. 51) or when a slide show is in progress (pg. 69).

Tip: Reactivating the Camera

To reactivate the camera after it has turned off automatically, use the **ON/OFF** button or press the  button for about a second (pg. 11).



Note

Although **OFF** is selected for  **AUTO POWER OFF**, the camera will turn off automatically if no operations are performed for five minutes in the following case:

- **STANDBY** is displayed in .
-  is displayed in the shooting mode.
- **SR AUTO**, , , or  is selected in the shooting mode.

DIGITAL ZOOM

If **ON** is selected, selecting  at the maximum optical zoom position will trigger digital zoom, further magnifying the image. To cancel digital zoom, zoom out to the minimum digital zoom position and select .

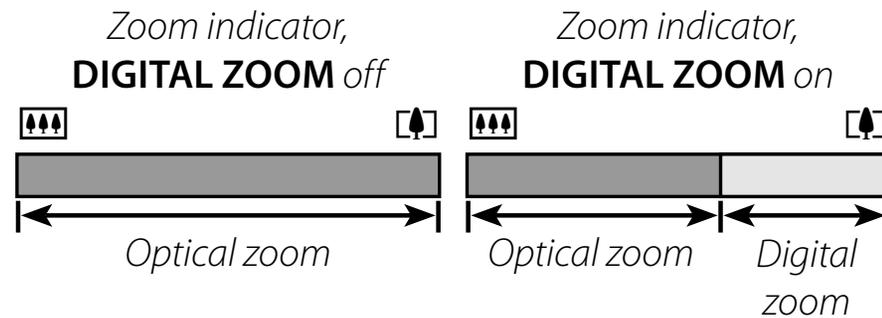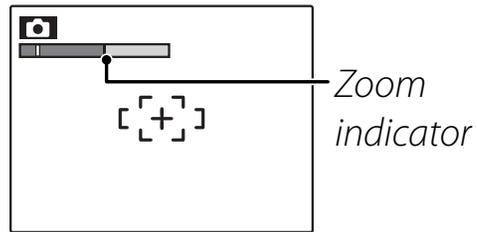


Caution

Digital zoom produces lower quality images than optical zoom.

Optional Accessories



The camera supports a wide range of accessories from FUJIFILM and other manufacturers.

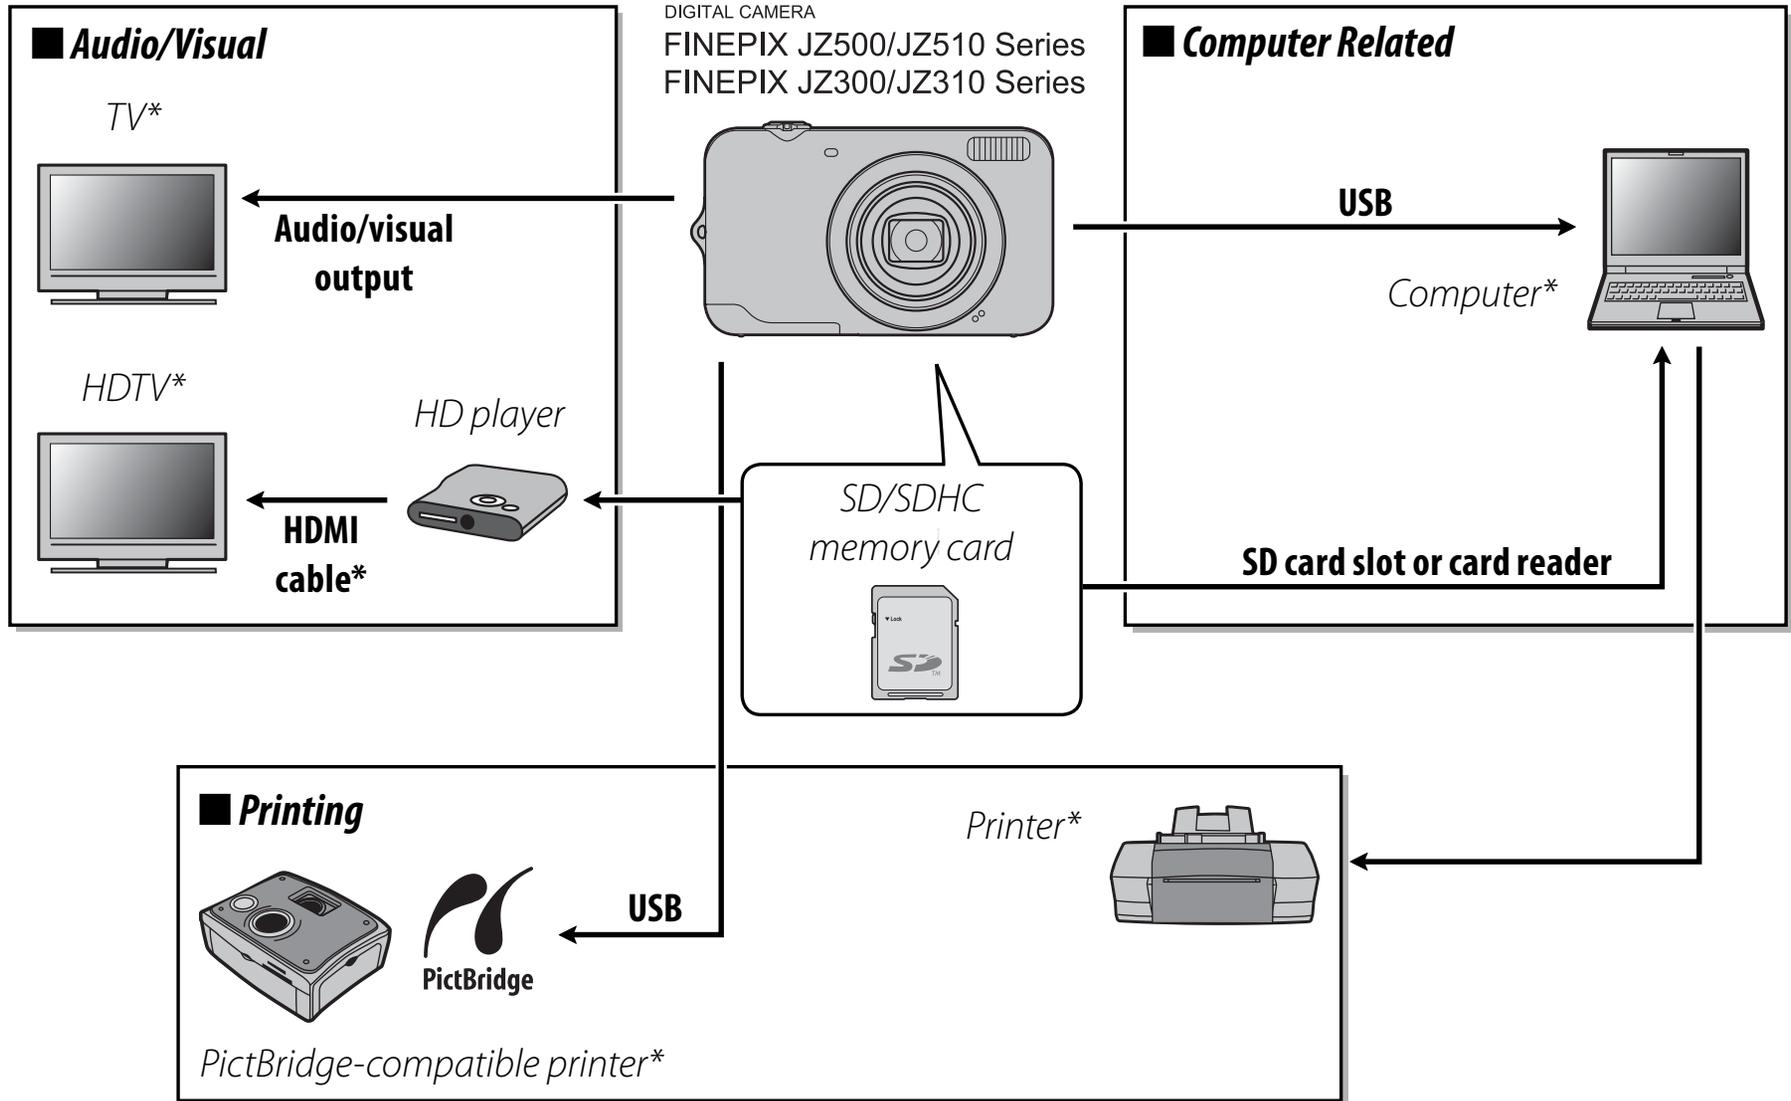

* Available from third-party suppliers.

Accessories from FUJIFILM

The following optional accessories are available from FUJIFILM. For the latest information on the accessories available in your region, check with your local FUJIFILM representative or visit http://www.fujifilm.com/products/digital_cameras/index.html.

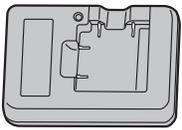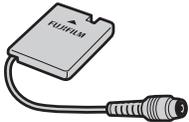Rechargeable Li-ion battery	NP-45	Additional NP-45 large-capacity batteries can be purchased as required.	
Battery charger	BC-45W (supplied)	Replacement battery chargers can be purchased as required. The BC-45 charges an NP-45 battery in about 120 minutes at +25 °C (+77 °F).	
AC power adapter	AC-5VX (requires CP-45)	Use for extended playback or when copying pictures to a computer (shape of adapter and plug vary with region of sale).	
DC coupler	CP-45	Connect the AC-5VX to the camera.	
A/V cable	AV-C1	Connects the camera and a TV.	
HD player	HDP-L1	Still pictures and movies in SD card can be viewed by HDTV (requires HDMI cable, available from third-party suppliers).	

Caring for the Camera

To ensure continued enjoyment of the product, observe the following precautions.

Storage and Use

If the camera will not be used for an extended period, remove the battery and memory card. Do not store or use the camera in locations that are:

- exposed to rain, steam, or smoke
- very humid or extremely dusty
- exposed to direct sunlight or very high temperatures, such as in a closed vehicle on a sunny day
- extremely cold
- subject to strong vibration
- exposed to strong magnetic fields, such as near a broadcasting antenna, power line, radar emitter, motor, transformer, or magnet
- in contact with volatile chemicals such as pesticides
- next to rubber or vinyl products

■ Water and Sand

Exposure to water and sand can also damage the camera and its internal circuitry and mechanisms. When using the camera at the beach or seaside, avoid exposing the camera to water or sand. Do not place the camera on a wet surface.

■ Condensation

Sudden increases in temperature, such as occur when entering a heated building on a cold day, can cause condensation inside the camera. If this occurs, turn the camera off and wait an hour before turning it on again. If condensation forms on the memory card, remove the card and wait for the condensation to dissipate.

Cleaning

Use a blower to remove dust from the lens and monitor, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of FUJIFILM lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. Care should be taken to avoid scratching the lens or monitor. The camera body can be cleaned with a soft, dry cloth. Do not use alcohol, thinner, or other volatile chemicals.

Traveling

Keep the camera in your carry-on baggage. Checked baggage may suffer violent shocks that could damage the camera.

Troubleshooting

Power and Battery

Problem		Possible cause	Solution	Page
Power supply	The camera does not turn on.	The battery is exhausted.	Insert a fresh or fully-charged spare battery.	5, 13
		The battery is not in the correct orientation.	Re-insert the battery in the correct orientation.	6
		The battery-chamber cover is not latched.	Latch the battery-chamber cover.	7
		The AC adapter and DC coupler are not connected properly.	Make sure that the AC adapter and DC coupler are properly connected.	—
	The battery runs down quickly.	The battery is cold.	Warm the battery by placing it in a pocket or other warm place and re-insert it in the camera immediately before taking a picture.	—
		There is dirt on the battery terminals.	Clean the terminals with a soft, dry cloth.	—
		The camera is in SR<i>AUTO</i> mode.	Select another shooting mode.	20
		The battery has been charged many times.	The battery has reached the end of its charging life. Purchase a new battery.	—
		 TRACKING is selected for  AF MODE.	Select  CENTER for  AF MODE.	62
	The camera turns off suddenly.	The battery is exhausted.	Insert a fresh or fully-charged spare battery.	5, 13
The AC adapter or DC coupler has been disconnected.		Make sure that the AC adapter and DC coupler are properly connected.	—	

	Problem	Possible cause	Solution	Page
Battery charger	Charging does not start.	The battery is not correctly inserted.	Re-insert the battery in the charger.	5
		The battery is not in the correct orientation.	Re-insert the battery in the correct orientation.	5
	Charging is slow.	The temperature is low.	Charge the battery at room temperature.	—
	The charging lamp lights, but the battery does not charge.	There is dirt on the battery terminals.	Clean the terminals with a soft, dry cloth.	—
		The battery has been charged many times.	The battery has reached the end of its charging life. Purchase a new battery. If the battery still fails to charge, contact your FUJIFILM dealer.	—
	The charger is not correctly plugged into a power outlet.	Plug the charger correctly into the power outlet.	—	

Menus and Displays

	Problem	Possible cause	Solution	Page
	Menus and displays are not in English.	English is not selected for the  言語/LANG. option in the setup menu.	Select ENGLISH .	12, 78

Shooting

	Problem	Possible cause	Solution	Page
Taking pictures	No picture is taken when the shutter button is pressed.	Memory is full.	Insert a new memory card or delete pictures.	8, 40
		Memory is not formatted.	Format the memory card or internal memory.	81
		There is dirt on the memory card contacts.	Clean the contacts with a soft, dry cloth.	—
		The memory card is damaged.	Insert a new memory card.	8
		The battery is exhausted.	Insert a fresh or fully-charged spare battery.	6
	The camera has turned off automatically.	Turn the camera on.	11	
	The monitor goes dark after shooting.	The flash has fired.	The monitor may darken while the flash charges. Wait for the flash to charge.	31
Focus	The camera does not focus.	The subject is close to the camera.	Select macro mode.	30
		The subject is far away from the camera.	Cancel macro mode.	
		The subject is not suited to autofocus.	Use focus lock.	26
Intelligent Face Detection	Face detection not available.	Intelligent Face Detection is not available in the current shooting mode.	Choose a different shooting mode.	20
	No face is detected.	The subject's face is obscured by sunglasses, a hat, long hair, or other objects.	Remove the obstructions.	24
		The subject's face occupies only a small area of the frame.	Change the composition so that the subject's face occupies a larger area of the frame.	
		The subject's head is at an angle or the subject is not facing the camera.	Ask the subject to face the camera and hold their head straight.	
		The camera is tilted.	Hold the camera straight.	15
		The subject's face is poorly lit.	Shoot in bright light.	—
Wrong subject selected.	The selected subject is closer to the center of the frame than the main subject.	Recompose the picture or turn face detection off and frame the picture using focus lock.	24, 26	
Close-ups	Macro mode is not available.	Macro mode is not available in the current shooting mode.	Choose a different shooting mode.	20

	Problem	Possible cause	Solution	Page
Flash	The flash does not fire.	The flash is charging.	Wait for the flash to charge.	31
		The flash is not available in the current shooting mode.	Choose a different shooting mode.	20
		The battery is exhausted.	Insert a fresh or fully-charged spare battery.	6
		An option other than OFF is selected for  CONTINUOUS .	Turn  CONTINUOUS off.	61
	Flash mode not available.	The desired flash mode is not available in the current shooting mode.	Choose a different shooting mode.	20
		The camera is in silent mode.	Turn silent mode off.	32
	The flash does not fully light the subject.	The subject is not in range of the flash.	Position the subject in range of the flash.	103
		The flash window is obstructed.	Hold the camera correctly.	15
There is a dark part on the fringe of an image.	The image was taken in a very dark location selecting  (wide angle) to zoom.	Take a shot selecting  (telephoto).	15	
AC adapter	Help text is displayed.	The camera was turned on while being powered by an AC adapter.	Follow the on-screen instructions to enter demo mode or press the shutter button to cancel.	—

	Problem	Possible cause	Solution	Page
Problem images	Pictures are blurred.	The lens is dirty.	Clean the lens.	87
		The lens is blocked.	Keep objects away from the lens.	15
		!AF is displayed during shooting and the focus frame is displayed in red.	Check focus before shooting.	17
		! is displayed during shooting.	Use the flash or a tripod.	31
	Pictures are mottled.	The ambient temperature is high and the subject is poorly lit.	This is normal and does not indicate a malfunction. Choose a lower sensitivity.	59
	Vertical lines appear in pictures.	The camera has been used continuously at high temperatures.	Turn the camera off and wait for it to cool down.	—
Recording	Smear appears in pictures.	The sun or another bright object was in the frame.	White or purple vertical lines may appear when a very bright object is framed in the display. This is normal and does not indicate a malfunction. Smear is not recorded in photographs but may appear in movies. If possible, avoid shooting movies with bright objects in or close to the frame.	42
			Pictures are not recorded.	Power was interrupted during shooting.

Movie

	Problem	Possible cause	Solution	Page
Recording	The sound of camera focusing is heard.	<input checked="" type="checkbox"/> CONTINUOUS is selected for <input checked="" type="checkbox"/> AF MODE .	Select <input type="checkbox"/> CENTER for <input checked="" type="checkbox"/> AF MODE .	43
		Zoom in or out while recording a movie.	Stop zoom operation.	42

Playback

	Problem	Possible cause	Solution	Page
Pictures	Pictures are grainy.	The pictures were taken with a different make or model of camera.	—	—
	Playback zoom unavailable.	The pictures were taken at an image size of 640 or with a different make or model of camera. Pictures were saved or cropped at the size of 640 , or copies created with <input checked="" type="checkbox"/> RESIZE .	—	35, 72
Audio	No sound in voice memo and movie playback.	The camera is in silent mode.	Turn silent mode off.	32
		Playback volume is too low.	Adjust playback volume.	83
		The microphone was obstructed.	Hold the camera correctly during recording.	75
		The speaker is obstructed.	Hold the camera correctly during playback.	76
Deletion	Selected pictures are not deleted.	Some of the pictures selected for deletion are protected.	Remove protection using the device with which it was originally applied.	70
Frame no.	File numbering is unexpectedly reset.	The battery-chamber cover was opened while the camera was on.	Turn the camera off before opening the battery-chamber cover.	6, 82

Connections

	Problem	Possible cause	Solution	Page
TV	Monitor is off.	The camera is connected to a TV.	View pictures on the TV.	45
	No picture or sound.	The camera is not properly connected.	Connect the camera correctly.	45
		An A/V cable was connected during movie playback.	Connect the camera once movie playback has ended.	44, 45
		Input on the television is set to "TV".	Set input to "VIDEO".	—
		The camera is not set to the correct video standard.	Match the camera  VIDEO SYSTEM setting to the TV.	79
		The volume on the television is too low.	Adjust the volume.	—
No color.	The camera is not set to the correct video standard.	Match the camera  VIDEO SYSTEM setting to the TV.	79	
Computer	The computer does not recognize the camera.	The camera is not properly connected.	Connect the camera correctly.	55
PictBridge	Pictures can not be printed.	The camera is not properly connected.	Connect the camera correctly.	46
		The printer is off.	Turn the printer on.	—
	Only one copy is printed.	The printer is not PictBridge-compatible.	—	—
	The date is not printed.			

Miscellaneous

Problem	Possible cause	Solution	Page
Nothing happens when the shutter button is pressed.	Temporary camera malfunction.	Remove and reinsert the battery or disconnect and reconnect the AC adapter/DC coupler.	6
	The battery is exhausted.	Insert a fresh or fully-charged spare battery.	6
The camera does not function as expected.	Temporary camera malfunction.	Remove and reinsert the battery or disconnect and reconnect the AC adapter/DC coupler. If the problem persists, contact your FUJIFILM dealer.	6



Warning Messages and Displays

The following warnings are displayed in the monitor:

Warning	Description	Solution
 (red)	The battery is low.	Insert a fresh or fully-charged spare battery.
 (blinks red)	The battery is exhausted.	
	Slow shutter speed. Picture may be blurred.	Use the flash or mount the camera on a tripod.
!AF (displayed in red with red focus frame)	The camera can not focus.	<ul style="list-style-type: none"> • Use focus lock to focus on another subject at the same distance, then recompose the picture (pg. 26). • If the subject is poorly lit, try focusing at a distance of about 2 m (6.6 ft.). • Use macro mode to focus when taking close-ups.
Aperture or shutter speed shown in red	The subject is too bright or too dark. The picture will be over- or under-exposed.	If the subject is dark, use the flash.
FOCUS ERROR TURN OFF THE CAMERA AND TURN ON AGAIN	Camera malfunction.	Turn the camera off and then on again, taking care not to touch the lens. If the message persists, contact a FUJIFILM dealer.
	The lens barrel is touched.	
NO CARD	No memory card inserted when  COPY is selected in the playback menu.	Insert a memory card.
CARD NOT INITIALIZED	The memory card or internal memory is not formatted or the memory card was formatted in a computer or other device.	Format the memory card or internal memory using the  FORMAT option in the camera setup menu (pg. 81).
	The memory card contacts require cleaning.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 81). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.
PROTECTED CARD	The memory card is locked.	Unlock the memory card (pg. 8).
BUSY	The memory card is incorrectly formatted.	Use the camera to format the memory card (pg. 81).

Warning	Description	Solution
CARD ERROR	The memory card is not formatted for use in the camera.	Format the memory card (pg. 81).
	The memory card contacts require cleaning or the memory card is damaged.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 81). If the message persists, replace the memory card.
	Incompatible memory card.	Use a compatible memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.
 MEMORY FULL	The memory card or internal memory is full; pictures can not be recorded or copied.	Delete pictures or insert a memory card with more free space.
 MEMORY FULL		
INTERNAL MEMORY IS FULL INSERT A NEW CARD		
WRITE ERROR	Not enough memory remaining to record additional pictures.	Delete pictures or insert a memory card with more free space.
	The memory card or internal memory is not formatted.	Format the memory card or internal memory (pg. 81).
	Memory card error or connection error.	Re-insert the memory card or turn the camera off and then on again. If the message persists, contact a FUJIFILM dealer.
READ ERROR	The file is corrupt or was not created with the camera.	The file can not be played back.
	The memory card contacts require cleaning.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 81). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.

Warning	Description	Solution
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999).	Format the memory card and select RENEW for the  FRAME NO. option in the  SET-UP menu. Take a picture to reset frame numbering to 100-0001, then return to the  FRAME NO. menu and select CONTINUOUS .
TOO MANY FRAMES	An attempt was made to execute IMAGE SEARCH over too many pictures.	IMAGE SEARCH cannot process 3,000 pictures or more.
 CAN NOT EXECUTE	Red-eye removal can not be applied to the selected picture or movie.	—
 CAN NOT EXECUTE		
PROTECTED FRAME	An attempt was made to delete, rotate, or add a voice memo to a protected picture.	Remove protection before deleting, rotating, or adding voice memos to pictures.
 ERROR	Voice memo file is corrupt.	The voice memo can not be played back.
	Camera malfunction.	Contact a FUJIFILM dealer.
 NO IMAGE	The source device selected in the playback  COPY menu contains no pictures.	Select a different source.
 NO IMAGE		
 CAN NOT CROP	An attempt was made to crop a  picture.	These pictures can not be cropped.
 CAN NOT CROP	An attempt was made to crop a  picture.	
CAN NOT CROP	The picture selected for cropping is damaged or was not created with the camera.	
 CANNOT EXECUTE	An attempt was made to resize a  picture.	These pictures can not be resized.
 CANNOT EXECUTE	An attempt was made to resize a  picture.	
DPOF FILE ERROR	The DPOF print order on the current memory card contains more than 999 images.	Copy the pictures to internal memory and create a new print order.

Warning	Description	Solution
CAN NOT SET DPOF	The picture can not be printed using DPOF.	—
 CAN NOT SET DPOF	Movies can not be printed using DPOF.	—
CAN NOT ROTATE	The picture is protected.	Remove protection before rotating pictures (pg. 79).
 CAN NOT ROTATE	Movies can not be rotated.	—
PRESS AND HOLD THE DISP BUTTON TO DEACTIVATE SILENT MODE	An attempt was made to choose a flash mode or adjust the volume with the camera in silent mode.	Exit silent mode before choosing a flash mode or adjusting the volume.
COMMUNICATION ERROR	A connection error occurred while pictures were being printed or copied to a computer or other device.	Confirm that the device is turned on and that the USB cable is connected.
PRINTER ERROR	Printer out of paper or ink, or other printer error.	Check printer (see printer manual for details). To resume printing, turn the printer off and then turn it back on.
PRINTER ERROR RESUME?		Check printer (see printer manual for details). If printing does not resume automatically, press MENU/OK to resume.
CAN NOT BE PRINTED	An attempt was made to print a movie, a picture not created with the camera, or a picture in a format not supported by the printer.	Movies and some pictures created with other devices can not be printed. If the picture was created with the camera, check the printer manual to confirm that the printer supports the JFIF-JPEG or Exif-JPEG format. If it does not, the pictures can not be printed.

Glossary

Digital zoom: Unlike optical zoom, digital zoom does not increase the amount of visible detail. Instead, details visible using optical zoom are simply enlarged, producing a slightly “grainy” image.

DPOF (Digital Print Order Format): A standard that allows pictures to be printed from “print orders” stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.



EV (Exposure Value): The exposure value is determined by the sensitivity of the image sensor and the amount of light that enters the camera while the image sensor is exposed. Each time the amount of light doubles, EV increases by one; each time the amount of light is halved, EV decreases by one. The amount of light entering the camera can be controlled by adjusting aperture and shutter speed.

Exif Print: A standard that allows information stored with pictures to be used for optimal color reproduction during printing.

JPEG (Joint Photographic Experts Group): A compressed file format for color images. The higher the compression rate, the greater the loss of information and more noticeable drop in quality when the picture is displayed.

Motion JPEG: An AVI (Audio Video Interleave) format that stores sound and JPEG images in a single file. Motion JPEG files can be played in Windows Media Player (requires DirectX 8.0 or later) or QuickTime 3.0 or later.

Smear: A phenomenon specific to CCDs which causes white streaks to appear when very bright light sources, such as the sun or reflected sunlight, appear in the frame.

WAV (Waveform Audio Format): A standard Windows audio file format. WAV files have the extension “*.WAV” and may be compressed or uncompressed. The camera uses uncompressed WAV. WAV files can be played using Windows Media Player or QuickTime 3.0 or later.

White balance: The human brain automatically adapts to changes in the color of light, with the result that objects that appear white under one light source still appear white when the color of the light source changes. Digital cameras can mimic this adjustment by processing images according to the color of the light source. This process is known as “white balance.”

Internal Memory/Memory Card Capacity

The following table shows the recording time or number of available frames at different image qualities. You can take a few pictures for trial without a memory card. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate.

■ FinePix JZ500/JZ510 Series

	Still Pictures (FINE)								Movies		
	14M	12M 3:2	11M 16:9	7M	3M	2M 16:9	2M	640	HD*1*2	640*1	320*1
Internal memory (approx. 40 MB)	7	8	9	11	25	38	41	219	—	26 sec.	61 sec.
1 GB	170	200	230	280	620	930	1,010	5,160	5 min.	12 min.	21 min.
2 GB	360	400	470	560	1,230	1,870	2,000	10,330	10 min.	25 min.	43 min.
4 GB	720	810	950	1,120	2,480	3,760	4,000	20,680	20 min.	50 min.	87 min.
8 GB	1,440	1,620	1,910	2,260	4,980	7,540	8,030	41,500	42 min.	100 min.	176 min.
16 GB	2,870	3,220	3,800	4,490	9,880	14,970	15,940	82,360	83 min.	200 min.	349 min.

*1 Individual movies cannot exceed 2GB in size, regardless of capacity of memory card.

*2 Use a card with a class 4 write speed (4 MB/s) or better when shooting HD movies.

■ FinePix JZ300/JZ310 Series

	Still Pictures (FINE)								Movies		
	12M	11M 3:2	9M 16:9	6M	3M	2M 16:9	2M	640	HD*1*2	640*1	320*1
Internal memory (approx. 40 MB)	8	9	11	13	25	38	41	219	—	26 sec.	61 sec.
1 GB	200	230	270	320	620	930	1,010	5,160	5 min.	12 min.	21 min.
2 GB	410	460	550	650	1,230	1,870	2,000	10,330	10 min.	25 min.	43 min.
4 GB	830	930	1,110	1,310	2,480	3,760	4,000	20,680	20 min.	50 min.	87 min.
8 GB	1,680	1,880	2,240	2,640	4,980	7,540	8,030	41,500	42 min.	100 min.	176 min.
16 GB	3,330	3,740	4,450	5,250	9,880	14,970	15,940	82,360	83 min.	200 min.	349 min.

*1 Individual movies cannot exceed 2GB in size, regardless of capacity of memory card.

*2 Use a card with a class 4 write speed (4 MB/s) or better when shooting HD movies.

Specifications

System	
Model	FinePix JZ500/JZ510 Series FinePix JZ300/JZ310 Series
Effective pixels	14.1 million 12.1 million
CCD	½.3-in., square-pixel CCD with primary color filter
Storage media	• Internal memory (approx. 40 MB) • SD/SDHC memory cards (see page 8)
File system	Compliant with Design Rule for Camera File System (DCF), Exif 2.2, and Digital Print Order Format (DPOF)
File format	• Still pictures: Exif 2.2 JPEG (compressed) • Movies: AVI-format Motion JPEG • Audio: monaural WAV
Image size (pixels)	<ul style="list-style-type: none"> <li style="width: 50%;">• 14M 4,320 × 3,240 <li style="width: 50%;">• 12M 3:2 4,320 × 2,880 <li style="width: 50%;">• 12M 4,000 × 3,000 <li style="width: 50%;">• 11M 3:2 4,000 × 2,664 <li style="width: 50%;">• 11M 16:9 4,320 × 2,432 <li style="width: 50%;">• 7M 3,072 × 2,304 <li style="width: 50%;">• 9M 16:9 4,000 × 2,248 <li style="width: 50%;">• 6M 2,848 × 2,136 <li style="width: 50%;">• 3M 2,048 × 1,536 <li style="width: 50%;">• 2M 16:9 1,920 × 1,080 <li style="width: 50%;">• 3M 2,048 × 1,536 <li style="width: 50%;">• 2M 16:9 1,920 × 1,080 <li style="width: 50%;">• 2M 1,600 × 1,200 <li style="width: 50%;">• 640 640 × 480 <li style="width: 50%;">• 2M 1,600 × 1,200 <li style="width: 50%;">• 640 640 × 480
Lens	Fujinon 10× optical zoom lens, F3.3 (wide angle) – F5.6 (telephoto)
Focal length	f=5.0 mm–50.0 mm (35-mm format equivalent: 28 mm–280 mm)
Digital zoom	Approx. 6.4× (up to 64× when combined with optical zoom) Approx. 6.0× (up to 60× when combined with optical zoom)
Aperture	F3.3/F6.4 (wide angle), F5.6/F11.0 (telephoto), uses Neutral Density (ND) filter
Focus range (distance from front of lens)	Approx. 45 cm (1.5 ft.)–infinity (wide angle); 2 m (6.6 ft.)–infinity (telephoto) Macro: approx. 5 cm–2.5 m/2 in.–8.2 ft. (wide angle); 90 cm–2.5 m/3 ft.–8.2 ft. (telephoto)
Sensitivity	Standard output sensitivity equivalent to ISO 100, 200, 400, 800, 1600, 3200*, AUTO * max. number of recorded pixels: 3M
Metering	256-segment through-the-lens (TTL) metering; MULTI
Exposure control	Programmed autoexposure
Exposure compensation	–2 EV – +2 EV in increments of ⅓ EV (P)

System	
Scene modes	 (NATURAL AND FLASH LIGHTING),  (NATURAL LIGHT),  (PORTRAIT),  (PORTRAIT ENHANCER),  * (DOG),  * (CAT),  (LANDSCAPE),  (SPORT),  (NIGHT),  (NIGHT (TRIPOD)),  (FIREWORKS),  (SUNSET),  * (SNOW),  (BEACH),  (PARTY),  * (FLOWER),  (TEXT) * FinePix JZ500/JZ510 series only
Picture stabilization	Optical stabilization (CCD shift)
Intelligent Face Detection	Available
Shutter speed	1/4 s– 1/2,000 s (AUTO mode); 4 s–1/1,400 s (other modes); combined mechanical and electronic shutter
Continuous	FinePix JZ500/JZ510 series: up to 0.9 fps; max. 3 frames FinePix JZ300/JZ310 series: up to 1.1 fps; max. 3 frames
Focus	<ul style="list-style-type: none"> • Mode: Center AF, Tracking AF (P/AUTO) • Autofocus system: Contrast-detect TTL AF
White balance	Automatic scene detection; six manual preset modes for direct sunlight, shade, daylight fluorescent, warm white fluorescent, cool white fluorescent, and incandescent
Self-timer	Off, 2 sec., 10 sec.
Flash	Auto flash; effective range when sensitivity is set to AUTO is approx. 50 cm–2.6 m/1.6 ft.–8.5 ft. (wide angle), 90 cm–1.7 m/3.0 ft.–5.6 ft. (telephoto)
Flash modes	Auto, forced flash, off, slow synchro (red-eye removal off); auto with red-eye removal, forced flash with red-eye removal, off, slow synchro with red-eye removal (red-eye removal on)
Monitor	2.7-in., 230k-dot color LCD monitor
Frame coverage	Approx. 96%

System	
Movies	<ul style="list-style-type: none"> • HD (1280×720: 720p), 24fps • 640 (640×480: VGA), 30fps • 320 (320×240: QVGA), 30fps
Shooting options	Scene recognition, Face recognition (FinePix JZ500/JZ510 series only), Dog/Cat detection (FinePix JZ500/JZ510 series only), Intelligent Face Detection with red-eye removal, framing guideline, frame number memory, FINEPIX COLOR
Playback options	Intelligent Face Detection, red-eye removal, micro thumbnail, multi-frame playback, image search, crop, resize, slide show, image rotation, voice memo
Other options	PictBridge, Exif Print, language selection (Japanese / English / French / German / Spanish / Italian / Simplified Chinese / Korean / Dutch / Portuguese / Russian / Thai / Turkish / Traditional Chinese / Czech / Hungarian / Polish / Swedish / Slovak / Danish / Norwegian / Finnish / Arabic / Farsi / Greek / Lithuanian / Ukraine), time difference, silent mode
Input/output terminals	
A/V OUT (audio/video output)	NTSC or PAL with monaural sound
Digital input/output	USB 2.0 High Speed; shares A/V OUT connector

Power supply/other	
Power supply	NP-45A rechargeable battery; optional AC power adapter AC-5VX and DC coupler CP-45
Guide to the number of available frames for battery operation	<p>Battery Type NP-45A Number of frames Approx. 230 frames (📷)</p> <p>According to the CIPA (Camera & Imaging Products Association) standard procedure for measuring digital still camera battery consumption (extract):</p> <p>When using a battery, use the battery supplied with the camera. The storage media should be SD memory card.</p> <p>Note that the number of shots that can be taken with a fully-charged battery varies with temperature and shooting conditions.</p>
Camera dimensions (W × H × D)	97.0 mm × 57.0 mm × 28.5 (22.0*) mm / 3.8 in. × 2.2 in. × 1.1 (0.9*) in. * excluding projecting parts, measured at the thinnest part
Camera weight	Approx. 148 g / 5.2 oz., excluding batteries, accessories, and memory cards
Shooting weight	Approx. 165 g / 5.8 oz., including batteries and memory card
Operating conditions	Temperature: 0°C to +40°C (+32°F to +104°F) 80% humidity or less (no condensation)

NP-45A rechargeable battery

Nominal voltage	DC 3.7V
Nominal capacity	720mAh
Operating temperature	0°C – +40°C/+32°F – +104°F
Dimensions (W × H × D)	31.0 mm × 39.6 mm × 6.0 mm/1.2 in. × 1.6 in. × 0.2 in.
Weight	Approx. 15 g/0.5 oz.

BC-45W battery charger

Rated input	100V–240V AC, 50/60 Hz
Input capacity	8.0VA (100V) 12VA (240V)
Rated output	4.2V DC, 550mA
Supported batteries	NP-45A/NP-45 rechargeable batteries
Charging time	Approx. 120 minutes
Dimensions (W × H × D)	91 mm × 62 mm × 23 mm/3.6 in. × 2.4 in. × 0.9 in.
Weight	Approx. 67 g/2.4 oz., excluding battery
Operating temperature	0°C – +40°C/+32°F – +104°F

The weight and dimensions vary with the country or region of sale.

Color Television Systems

NTSC (**N**ational **T**elevision **S**ystem **C**ommittee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (**P**hase **A**lternation by **L**ine) is a color television system adopted mainly in European countries and China.

Notices

- Specifications subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in this manual.
- Although the monitor is manufactured using advanced high-precision technology, small bright points and anomalous colors (particularly in the vicinity of text) may appear. This is normal for this type of monitor and does not indicate a malfunction; images recorded with the camera are unaffected.
- Digital cameras may malfunction when exposed to strong radio interference (e.g., electric fields, static electricity, or line noise).
- Due to the type of lens used, some distortion may occur at the periphery of images. This is normal.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<http://www.fujifilm.com/>

FUJIFILM

FinePix CD

FINEPIX JZ500/JZ510 Series
FINEPIX JZ300/JZ310 Series

Software G01

MyFinePix Studio Ver.1.0 (for Windows)

日本語 / English / Français / Deutsch
中文 / Español / 한국어

FinePixViewer Ver.3.6
(for Mac OS X 10.3-10.6)

日本語 / English / Français /
Deutsch / 中文

Owner's Manual

Owner's Manual (pdf format)

Adobe Reader Installer
(For Windows only)



DUPLICATED IN CHINA
FZ07810-100

Windows is trademarks or registered trademarks of Microsoft in the U. S. and other countries.

Macintosh, MacOS, QuickTime and QuickTime logo are trademarks of Apple inc. registered in the U. S. and other countries.

Adobe and Adobe Reader are either trademarks or registered trademarks of Adobe Systems Incorporated in the U.S.A and/or other countries.



Copyright© 2010
FUJIFILM Corporation
All rights reserved.



USA ONLY

**PLEASE DO NOT RETURN THIS PRODUCT TO YOUR PLACE OF
PURCHASE BEFORE CONTACTING FUJIFILM**

Many questions regarding technical issues, product information, warranties, parts and service can be answered by visiting our website at www.fujifilmusa.com

If you are experiencing technical problems or need product information, please contact our Digital Help Desk at:

(800) 800-FUJI (3854), Option 1
Monday-Friday 9:00am to 8:00pm EST
digitalinfo@fujifilm.com

For warranty, parts or service inquiries, please contact our Camera Repair Department at:

(800) 659-3854, Option 1
Monday-Friday 9:00am to 8:00pm EST

THANK YOU

FUJIFILM



**CANADA ONLY
CANADA SEULEMENT**

**PLEASE DO NOT RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE BEFORE CONTACTING FUJIFILM
S'IL VOUS PLAÎT, VEUILLEZ CONTACTER FUJIFILM AVANT DE RETOURNER CE PRODUIT AU MAGASIN**

Please visit www.fujiowner.ca to register your digital camera and for free extended warranty information.

Upon completion of registration your technical support and warranty will be activated.

Visitez www.fujiowner.ca afin d'enregistrer votre appareil photo numérique et recevoir votre garantie prolongée gratuite.

Une fois l'enregistrement terminé, le soutien technique et la garantie seront activés.

Warranty/Technical Support. This camera is covered by Fujifilm Canada's manufacturer warranty which includes technical support.

Your sales receipt is required for warranty service and on-line registration activates your technical support and warranty.*1

*1 Our warranty policy is found on our website at www.fujifilm.ca

Garantie / soutien technique. Cette caméra est couverte par la garantie de manufacture de FUJIFILM CANADA incluant le support technique. Votre relevé de caisse est requis pour la garantie, et l'enregistrement en ligne activera le service de soutien technique et garantie à votre intention.*2

*2 Notre politique de garantie peut être trouvée sur notre site Web au www.fujifilm.ca

Need Help? Do not return your camera to the store.

Visit us online at www.fujihelp.ca to find Frequently Asked Questions, Manuals and Software Downloads as well as E-mail Support. For telephone support call us at 1-866-818-3854, in the Greater Toronto Area call 905-755-2870.

Vous avez besoin d'aide? Ne retournez pas votre appareil photo au magasin.

Composez le 1-866-818-3854 (numéro sans frais) ou le 905-755-2870 (région de Toronto) ou bien visitez notre site Web à www.fujihelp.ca pour explorer les questions qui sont fréquemment posées, télécharger des logiciels et obtenir de l'aide par courrier électronique.

THANK YOU / MERCI

FUJIFILM

BB21305-100

FUJIFILM



PRODUCT REGISTRATION

To register your product visit

www.fujifilmusa.com/register

Benefits of product registration include:

- **Product Protection**
 - o With the information you provide we can confirm the date of purchase of your product. This is a benefit to you in the event your original proof of purchase is lost.
 - **Registration Incentives**
 - o By registering your product, you will be eligible for special promotions!
- 

FUJIFILM NORTH AMERICA CORPORATION
ONE YEAR LIMITED WARRANTY FOR FUJIFILM DIGITAL CAMERA

The FUJIFILM Digital Camera ("Product") contained in this package is warranted to the original end user purchaser by FUJIFILM North America Corporation ("FUJIFILM") only against defects in workmanship and materials for one (1) full year from the date of purchase ("Warranty Period") from an authorized FUJIFILM dealer in the U.S.A. This limited warranty does not apply to any Product purchased outside the U.S.A. or from an unauthorized dealer, distributor or seller or to any refurbished or reconditioned product. This limited warranty does not cover software, cables, memory cards, batteries, flash equipment or any other accessories which may be contained in this package ("Accessories"). This limited warranty is non-transferable and subject to the conditions and limitations set forth herein.

FUJIFILM will, at its option, repair and/or replace (with a unit of like condition which may be refurbished), a defective Product that is returned, postpaid and insured, within the Warranty Period to an authorized FUJIFILM Repair Center. If replacement parts are used in making repairs, these parts may be remanufactured or contain remanufactured materials. This limited warranty is the purchaser's sole remedy should the Product be found to be defective. This limited warranty does not apply if the Product has been damaged by accident, mishandling, misuse, abuse, alteration, use with incompatible accessories, an electrical power problem, a third party device, failure to follow operating or maintenance instructions or if the Product defect or damage is due to services performed by anyone other than an authorized FUJIFILM Repair Center.

In returning the Product for repair, the Product must be delivered in either a cardboard shipping box or in another carton offering a sufficient degree of protection. Do not include any other items or Accessories with the Product. It is advisable to return the Product using a courier service which provides a shipping tracking number. The Product must be accompanied by written evidence of the date of purchase, such as the original dated sales receipt. FUJIFILM will not be responsible for any loss or damage incurred in transit or otherwise in connection with the return of the Product, nor will FUJIFILM be responsible for the return of any items that are included with the Product.

SOME STATES DO NOT ALLOW CERTAIN CONDITIONS ON THE REPAIR OR REPLACEMENT OF WARRANTED PRODUCTS, SO THE ABOVE MAY NOT APPLY TO YOU.

THE FOREGOING LIMITED WARRANTY IS FUJIFILM'S ONLY WARRANTY WITH RESPECT TO THE PRODUCT AND FUJIFILM MAKES NO OTHER EXPRESS WARRANTY WITH RESPECT TO THE PRODUCT. NO IMPLIED WARRANTY, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND ANY WARRANTY ARISING OUT OF A COURSE OF DEALING OR USAGE OF TRADE APPLIES TO THE PRODUCT AFTER THE WARRANTY PERIOD. (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU).

EXCEPT TO THE EXTENT A WRITTEN WARRANTY FROM FUJIFILM FOR ACCESSORIES IS SEPARATELY PROVIDED, FUJIFILM MAKES NO WARRANTY WHATSOEVER, WRITTEN OR ORAL, EXPRESS OR IMPLIED, WITH RESPECT TO ANY ACCESSORY, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT AND ANY WARRANTY ARISING OUT OF A COURSE OF DEALING OR USAGE OF TRADE. ALL ACCESSORIES ARE SOLD "AS IS." SOME STATES PROHIBIT OR LIMIT THE DISCLAIMER OF IMPLIED WARRANTIES SO THIS PARAGRAPH MAY NOT APPLY TO YOU.

In no event will FUJIFILM or its authorized dealers be liable for any lost profits or special, consequential or incidental damages even if such damages result from negligence or other fault.

SOME STATES DO NOT ALLOW THE FOREGOING EXCLUSIONS OR LIMITATIONS OF DAMAGES, SO SUCH LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

If any court having jurisdiction finally holds that this limitation of remedies and liabilities is void or unenforceable, FUJIFILM's liability for any claim shall be limited to the purchase price of the Product giving rise to the claim, excluding any taxes, shipping or other costs.

For camera repair/service support, the address of an authorized FUJIFILM Repair Center, or information regarding your FUJIFILM limited warranty:

Call: 1-800-659 FUJI (3854)

OR

Go to: [http:// www.fujifilmusa.com](http://www.fujifilmusa.com)

- Click "Support & Contact" tab &
- Click "Digital Camera Limited Warranty Policies & Accessory Support" link

BB21294-101
Printed in China