

SUB-MINIATURE COAX 50/350 SERIES, TPS/TCM JACKS & PLUGS

PL50-1 Shown

CABLE PLUG	50Ω	3-lug	PL50- ⚠
WRENCH CRIMP	50Ω	4-lug	PL50FL- ⚠
	50Ω	Threaded	PL350- ⚠

BULKHEAD JACK	50Ω	3-lug	BJ50
FRONT MOUNT, SOLDER POT	50Ω	4-lug	BJ50FL
	50Ω	Threaded	BJ350

Mounting Hole: D6.218

PL50C-001 Shown

CABLE PLUG	75Ω	3-lug	UPL50C- ⚠
TOOL CRIMP	50Ω	3-lug	PL50C- ⚠
	50Ω	4-lug	PL50CFL- ⚠
	50Ω	Threaded	PL350C- ⚠

BJ57 Shown

INSULATED BULKHEAD JACK			
FRONT MOUNT, SOLDER POT	50Ω	3-lug	BJ57
	50Ω	4-lug	BJ57FL
	50Ω	Threaded	BJ357

Mounting Hole: D4.187

PL53-1 Shown

PUSH-ON PLUG	50Ω	3-lug	PL53- ⚠
WRENCH CRIMP, TPS/TCM			

TPS PUSH-ON	50Ω		BJ51
SOLDER POT PANEL JACK	50Ω	Ground Lug	

Max Panel Thk: .088

CJ50-1 Shown

CABLE JACK	50Ω	3-lug	CJ50- ⚠
WRENCH CRIMP	50Ω	4-lug	CJ50FL- ⚠
	50Ω	Threaded	CJ350- ⚠

FEED-THRU JACK	50Ω	3-lug	BJ58
	50Ω	4-lug	BJ58FL
	50Ω	Threaded	BJ358

Mounting Hole: D5.190 / D4.190 (Threaded)

CIRCUIT BOARD JACK	50Ω	3-lug	CBJ50
WRENCH CRIMP	50Ω	4-lug	CBJ50FL
	50Ω	Threaded	CBJ350

BJ59-1 Shown

BULKHEAD JACK	50Ω	3-lug	BJ59- ⚠
WRENCH CRIMP	50Ω	4-lug	BJ59FL- ⚠
	50Ω	Threaded	BJ359- ⚠

Mounting Hole: D4.187

⚠ - Refers to cable group table, see pages 68-88. "D" mounting holes are on page 45.