
Contact Arrangements

Orientation

To prevent mismating or cross plugging, shell to shell key and keyway orientations are offered in normal 'N' (single phase) or 'F' (three phase).

Single Phase 'N' Orientation

SHELL SIZE 18

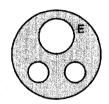


18-03

1 # 8 EARTH max. current 25 amps

2 # 12 max. current 25 amps

SHELL SIZE 22

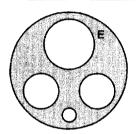

22-04


1 # 4 EARTH max. current 50 amps

2 # 8

max. current 50 amps

1 # 16 PILOT max. current 5 amps

SHELL SIZE 28

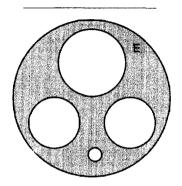

28-04

1 # 0 EARTH max. current 100 amps


2 # 4

max. current 100 amps

1 # 16 PILOT max. current 5 amps

3 Phase 'F' Orientation

SHELL SIZE 22

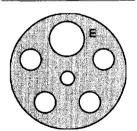


22-06

1 # 8 EARTH max. current 30 amps

4 # 12 max. current 30 amps

1 # 16 PILOT max. current 5 amps

SHELL SIZE 28

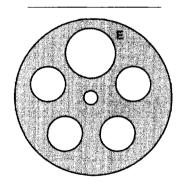

28-06

1 # 4 EARTH max. current 50 amps


1#8

max. current 50 amps

1 # 16 PILOT max. current 5 amps

AB Part Number Explanation

CONNECTOR

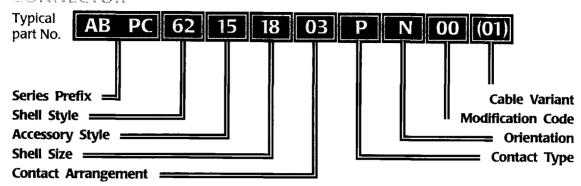

Explanation

Series Prefix

ABPC Power Connector

Shell Style

- 00 No Connector Supplied.
- 18 Reverse Fixed Connector (Pin contact Only).
- 20 Fixed Connector (Socket Contact Only).
- 59 Reverse Free Connector (Socket Contact Only).
- 62 Free Connector (Pin Contact Only).

Accessory Style

- **00** No Accessory
- 14 Straight Outlet (Without Cable Seal Kit).
- 15 Straight Outlet (With Cable Seal Kit).
- 20 Fixed/Rev-Fixed Connector with Panel Mounting Gasket.
- 25 Connector Supplied with Protective Cap.
- 26 Connector Supplied with Protective Cap.
 8 Straight Outlet.
- 35 Fixed/Rev-Fixed Connector Supplied with Protective Cap & Panel Mounting Gasket.
- **63** Protective Cap for Free Connector.
- 64 Protective Cap for Reverse Fixed Connector.
- 65 Protective Cap for Fixed Connector.
- 74 Protective Cap for Reverse Free Connector.
- **78** Protective Cap Without Cord (Reverse Free & Fixed Connector).
- **79** Protective Cap Without Cord (Free & Reverse Fixed Connector).
- 84 Cable Seal Kit.
- 95 Panel Mounting Gasket.

Shell Size

18, 22, 28.

Contact Arrangement

- See Selection on Page 3.

Contact Type

- **P** = Pin
- S = Socket

Orientation

 Key / Keyway. 'N' or 'F'. See Contact Arrangement Selection on Page 3.

Mod-Code

- 00 Solder Contacts (Cadmium Plated Shells).
- O1 Solder Contacts (Zinc Cobalt Plated Shells).
- 02 2.5mm² cable.
- 04 4mm² cable.
- 06 6mm² cable.
- 10 10mm² cable.
- 15 No Contacts (Cadmium Plated Shells).
- 16 No Contacts (Zinc Cobalt Plated Shells).
- 25 25mm² cable.

Cable /Plating Variant

- **01** For Use With BS 6007 Cable (Cadmium Plated Metalwork).
- O3 For Use With Def. Stan. 61-12 part 27 Cable (Cadmium Plated Metalwork).
- O4 For Use With BS 6007 Cable (Zinc Cobalt Plated Metalwork).
- **06** For Use With Def. Stan. 61-12 part 27 Cable (Zinc Cobalt Plated Metalwork).

NB. Cable variant only applies to items supplied with cable seals e.g.

Free Connector Cable Seal Kit etc.

Not Fixed Connector Protective Caps etc.

Examples

Free connector with straight outlet including cable kit size 22-04 pin orientation. 'N' solder contacts BS.6007 cable: ABPC 6215 22 04PN 10 01

Reverse fixed connector no accessory size 28-06 pin orientation 'F' solder contacts: ABPC 1800 28 06PF 00

Protective cap for size 18 fixed connector:

ABPC 0065 18 0000 15

Panel gasket for size 18 fixed connector: **ABPC 0095 18 0000 15**

Fixed connector supplied with protective cap size 28-06 socket orientation 'F' solder contacts:

ABPC 2025 28 06SF 00

Reverse free connector with straight outlet including cable kit and protective cap size 22-04 socket 'N' orientation solder contacts Def. Stan. 61-12 cable 3 core 6mm² + pilot:

ABPC 5915 2204 06 03

General note - when digit not appicable add '0' NOTE. For filler plug ordering details see page 9

