Rev. 6, 4/2006 **Technical Data √RoHS CATV Amplifier Module** Features **MHW8222BN** · Specified for 77-, 110- and 128-Channel Loading Excellent Distortion Performance Silicon Bipolar Transistor Technology • Unconditionally Stable Under All Load Conditions • 860 MHz Applications 22.7 dB GAIN CATV Systems Operating in the 40 to 860 MHz Frequency Range 128-CHANNEL Input Stage Amplifier in Optical Nodes, Line Extenders and Trunk • **CATV AMPLIFIER MODULE Distribution Amplifiers for CATV Systems** Driver Amplifier in Linear General Purpose Applications ٠ Output Stage Amplifier on Applications Requiring Low Power Dissipation ٠ Description 24 Vdc Supply, 40 to 860 MHz, CATV Forward Amplifier Module • Replaced MHW8222B. There are no form, fit or function changes with this part replacement. **RoHS** Compliant • CASE 1302-01, STYLE 1 Table 1. Maximum Ratings

Rating	Symbol	Value	Unit	
DC Supply Voltage	V _{CC}	+28	Vdc	
RF Input Voltage (Single Tone)	V _{in}	+70	dBmV	
Operating Case Temperature Range	Т _С	- 20 to +100	°C	
Storage Temperature Range	T _{stg}	- 40 to +100	°C	

Table 2. Electrical Characteristics (V_{CC} = 24 Vdc, T_{C} = + 30°C, 75 Ω system unless otherwise noted)

Charact	eristic	Symbol	Min	Тур	Max	Unit
Frequency Range		BW	40	_	860	MHz
Power Gain	f = 50 MHz f = 860 MHz	G _p	21.4 21.8	21.9 22.7	22.4 24	dB
Slope (f = 40 - 860 MHz)		S	0.1	0.8	1.5	
Gain Flatness (Peak To Valley)	(f = 40 - 860 MHz)	G _F	_	0.4	0.6	
Input/Output Return Loss @ f = 40 MHz		IRL/ORL	20	24	—	dB
Derate Return Loss @ f > 40 MHz		RLD	_	_	0.009	dB/MHz
Composite Second Order (V _{out} = +38 dBmV/ch; 128 Channels) (V _{out} = +40 dBmV/ch; 110 Channels) (V _{out} = +44 dBmV/ch; 77 Channels)		CSO ₁₂₈ CSO ₁₁₀ CSO ₇₇		- 68 - 64 - 65	- 60 - 61 - 62	dBc



© Freescale Semiconductor, Inc., 2006. All rights reserved.


Freescale Semiconductor

Document Number: MHW8222BN

		, .				
Characteristic	Symbol	Min	Тур	Max	Unit	7
Cross Modulation Distortion					dB	
(V _{out} = +38 dBmV/ch, 128-Channel @ Fm = 55.25 MHz)	XMD ₁₂₈	_	- 65	- 63		
(V _{out} = +40 dBmV/ch, 110-Channel @ Fm = 55.25 MHz)	XMD ₁₁₀	—	- 63	- 60		
(V _{out} = +44 dBmV/ch, 77-Channel @ Fm = 55.25 MHz)	XMD ₇₇	—	- 59	- 56		
Composite Triple Beat					dBc	
(V _{out} = +38 dBmV/ch, 128-Channels, Worst Case)	CTB ₁₂₈	_	- 66	- 64		
(V _{out} = +40 dBmV/ch, 110-Channels, Worst Case)	CTB ₁₁₀	—	- 64	- 61		
(V _{out} = +44 dBmV/ch, 77-Channels, Worst Case)	CTB ₇₇	—	- 65	- 62		
Noise Figure f = 50 MHz	NF	_	3.7	4.5	dB	-
f = 750 MHz		—	5	6.5		
f = 860 MHz		-	5.6	7		
DC Current	I _{DC}	180	220	240	mA	C

MHW8222BN

PACKAGE DIMENSIONS

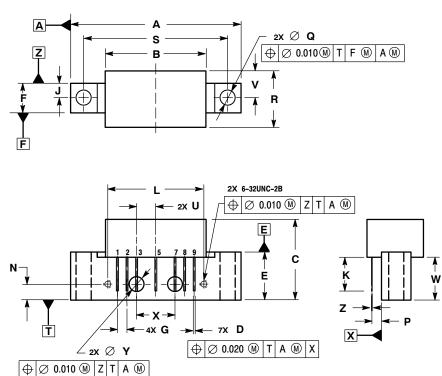

NOTES: 1. DIMENSIONS ARE IN INCHES. 2. INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5M, 1994.

	INCHES		MILLIMETERS			
DIM	MIN	MAX	MIN	MAX		
Α		1.775		45.085		
В		1.085		27.559		
С		0.840		21.336		
D	0.015	0.021	0.381	0.533		
Е	0.465	0.510	11.811	12.954		
F	0.300	0.325	7.62	8.255		
G	0.100) BSC	SC 2.540 BS			
J	0.156 BSC		3.96	2 BSC		
К	0.315	0.355	8.001	9.017		
L	1.000) BSC	25.400 BSC			
Ν	0.165	5 BSC	4.191 BSC			
Ρ	0.100	BSC	2.540	BSC		
Q	0.148	0.168	3.759	4.267		
R		0.600		15.24		
S	1.500) BSC	38.100 BSC			
U	0.200 BSC		5.080 BSC			
V		0.250		6.350		
W	0.435		11.049			
X	0.400	BSC	10.160 BSC			
Y	0.152	0.163	3.861	4.140		
z	0.009	0.011	0.229	0.279		

STYLE 1: PIN 1. RF INPUT 2. GROUND 3. GROUND 4. DELETED 5. VDC 6. DELETED 7. GROUND 8. GROUND 9. RF OUTPUT

CASE 1302-01 **ISSUE E**

MHW8222BN

How to Reach Us:

Home Page: www.freescale.com

F-mail. support@freescale.com

USA/Europe or Locations Not Listed:

Freescale Semiconductor Technical Information Center, CH370 1300 N. Alma School Road Chandler, Arizona 85224 +1-800-521-6274 or +1-480-768-2130 support@freescale.com

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH **Technical Information Center** Schatzbogen 7 81829 Muenchen, Germany +44 1296 380 456 (English) +46 8 52200080 (English) +49 89 92103 559 (German) +33 1 69 35 48 48 (French) support@freescale.com

Japan:

Freescale Semiconductor Japan Ltd. Headquarters ARCO Tower 15F 1-8-1, Shimo-Meguro, Meguro-ku, Tokyo 153-0064 Japan 0120 191014 or +81 3 5437 9125 support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd. Technical Information Center 2 Dai King Street Tai Po Industrial Estate Tai Po, N.T., Hong Kong +800 2666 8080 support.asia@freescale.com

For Literature Requests Only: Freescale Semiconductor Literature Distribution Center P.O. Box 5405 Denver, Colorado 80217 1-800-441-2447 or 303-675-2140 Fax: 303-675-2150 LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale[™] and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2006. All rights reserved.

