

COAX PATCH JACKS

J3W Shown

PATCH JACK
BNC REAR INTERFACE

50Ω RCA Center pin-.070"
75Ω WE Center pin-.090"

J3
J3W

PATCH JACK
"N"

50Ω "N", RCA Center pin -.070"
75Ω "N", WE Center pin -.090"

J9
UJ9W

Minimum vertical/horizontal centers .875"

PATCH JACK
CRIMP

50Ω RCA Center pin-.070"
75Ω WE Center pin-.090"

J3C-⚠
J3CW-⚠

Microswitch not available.

PATCH JACK
BNC

50Ω RCA Center pin-.070"
75Ω WE Center pin-.090"

J10
J10W

Requires special threaded panel .5-.28 UNEF-2A. Contact Factory when ordering panels.

PATCH JACK
SOLDER POT

50Ω RCA Center pin-.070"
75Ω WE Center pin-.090"

J3D
J3WD

(WECO 468 type)

PATCH JACK
TNC

50Ω RCA Center pin-.070"
75Ω WE Center pin-.090"

J5
J5W

J3E-1 Shown

PATCH JACK
CABLE ENTRY

50Ω RCA Center pin-.070"
75Ω WE Center pin-.090"

J3E-⚠
J3WE-⚠

(WECO 447 type) Microswitch not available

PATCH JACK
SELF-TERMINATING

BNC 50Ω RCA Center pin-.070"
BNC 75Ω WE Center pin-.090"
(WECO 477B type)

TNC 50Ω
TNC 75Ω

J13-R
J13W-R
J13H-R
J13WH-R

BNC
PATCH JACK

50Ω RCA Center pin-.070"
75Ω WE Center pin-.090"

J3A
J3WA

External SPDT Microswitch (125-250 VAC, 5 amps/28 VDC, 1amp res, 3 amp. ind)

PATCH JACK
SELF-TERMINATING

50Ω RCA Center pin-.070"
75Ω WE Center pin-.090"

J13C-R-⚠
J13WC-R-⚠

Cable crimp: Circuit is terminated when plug is removed.

⚠ - Refers to Cable Group Table, see pages 91-133. Standard Panels are on page 51-54. Consult with the factory for special requirements. R = Resistance