

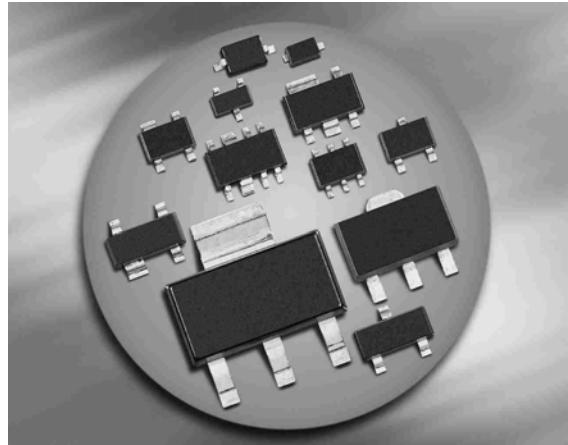


### NPN Silicon Digital Transistor

- Switching circuit, inverter, interface circuit, driver circuit
- Built in bias resistor ( $R_1=2.2\text{k}\Omega$ ,  $R_2=47\text{k}\Omega$ )
- For 6-PIN packages: two (galvanic) internal isolated transistors with good matching in one package

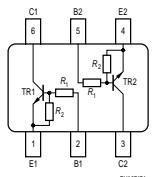

**BCR108/F/L3**  
**BCR108T/W**

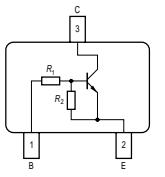

Type	Marking	Pin Configuration						Package
BCR108	WHs	1=B	2=E	3=C	-	-	-	SOT23
BCR108F	WHs	1=B	2=E	3=C	-	-	-	TSFP-3
BCR108L3	WH	1=B	2=E	3=C	-	-	-	TSLP-3-4
BCR108S	WHs	1=E1	2=B1	3=C2	4=E2	5=B2	6=C1	SOT363
BCR108T	WHs	1=B	2=E	3=C	-	-	-	SC75
BCR108W	WHs	1=B	2=E	3=C	-	-	-	SOT323

### Maximum Ratings

Parameter	Symbol	Value	Unit
Collector-emitter voltage	$V_{CEO}$	50	V
Collector-base voltage	$V_{CBO}$	50	
Emitter-base voltage	$V_{EBO}$	5	
Input on voltage	$V_{i(on)}$	10	
Collector current	$I_C$	100	mA
Total power dissipation- BCR108, $T_S \leq 102^\circ\text{C}$ BCR108F, $T_S \leq 128^\circ\text{C}$ BCR108L3, $T_S \leq 135^\circ\text{C}$ BCR108S, $T_S \leq 115^\circ\text{C}$ BCR108T, $T_S \leq 109^\circ\text{C}$ BCR108W, $T_S \leq 124^\circ\text{C}$	$P_{tot}$	200 250 250 250 250 250	mW
Junction temperature	$T_j$	150	$^\circ\text{C}$
Storage temperature	$T_{stg}$	-65 ... 150	

### Thermal Resistance

Parameter	Symbol	Value	Unit
Junction - soldering point <sup>1)</sup> BCR108 BCR108F BCR108L3 BCR108S BCR108T BCR108W	$R_{thJS}$	$\leq 240$ $\leq 90$ $\leq 60$ $\leq 140$ $\leq 165$ $\leq 105$	K/W


<sup>1)</sup>For calculation of  $R_{thJA}$  please refer to Application Note Thermal Resistance

**Electrical Characteristics at  $T_A = 25^\circ\text{C}$ , unless otherwise specified**


Parameter	Symbol	Values			Unit
		min.	typ.	max.	
<b>DC Characteristics</b>					
Collector-emitter breakdown voltage $I_C = 100 \mu\text{A}, I_B = 0$	$V_{(\text{BR})\text{CEO}}$	50	-	-	V
Collector-base breakdown voltage $I_C = 10 \mu\text{A}, I_E = 0$	$V_{(\text{BR})\text{CBO}}$	50	-	-	
Collector-base cutoff current $V_{CB} = 40 \text{ V}, I_E = 0$	$I_{\text{CBO}}$	-	-	100	nA
Emitter-base cutoff current $V_{EB} = 5 \text{ V}, I_C = 0$	$I_{\text{EBO}}$	-	-	164	$\mu\text{A}$
DC current gain <sup>1)</sup> $I_C = 5 \text{ mA}, V_{CE} = 5 \text{ V}$	$h_{\text{FE}}$	70	-	-	-
Collector-emitter saturation voltage <sup>1)</sup> $I_C = 10 \text{ mA}, I_B = 0.5 \text{ mA}$	$V_{\text{CEsat}}$	-	-	0.3	V
Input off voltage $I_C = 100 \mu\text{A}, V_{CE} = 5 \text{ V}$	$V_{i(\text{off})}$	0.4	-	0.8	
Input on voltage $I_C = 2 \text{ mA}, V_{CE} = 0.3 \text{ V}$	$V_{i(\text{on})}$	0.5	-	1.1	
Input resistor	$R_1$	1.5	2.2	2.9	k $\Omega$
Resistor ratio	$R_1/R_2$	0.042	0.047	0.052	-
<b>AC Characteristics</b>					
Transition frequency $I_C = 10 \text{ mA}, V_{CE} = 5 \text{ V}, f = 1 \text{ MHz}$	$f_T$	-	170	-	MHz
Collector-base capacitance $V_{CB} = 10 \text{ V}, f = 1 \text{ MHz}$	$C_{cb}$	-	2	-	pF

<sup>1</sup>Pulse test:  $t < 300\mu\text{s}$ ; D < 2%


**DC current gain  $h_{FE} = f(I_C)$**   
 $V_{CE} = 5V$  (common emitter configuration)

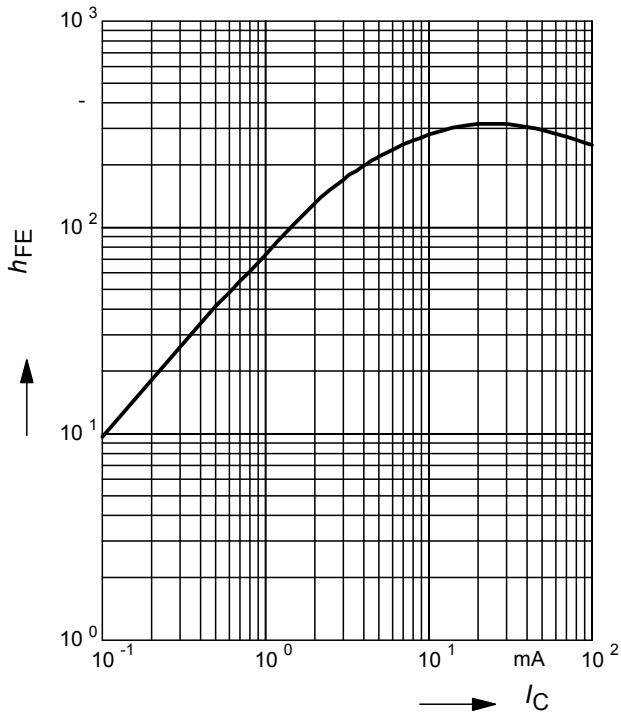


**Input on Voltage  $V_{i(on)} = f(I_C)$**   
 $V_{CE} = 0.3V$  (common emitter configuration)

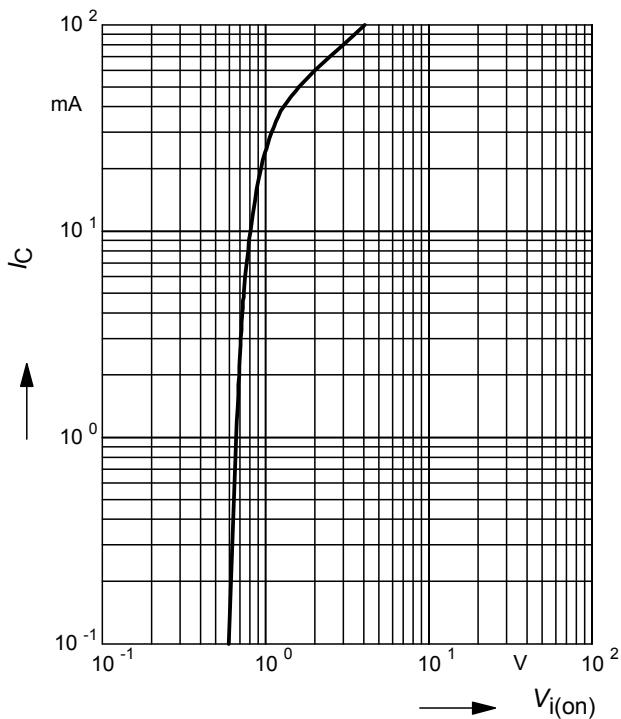


**Collector-emitter saturation voltage**  
 $V_{CEsat} = f(I_C), h_{FE} = 20$

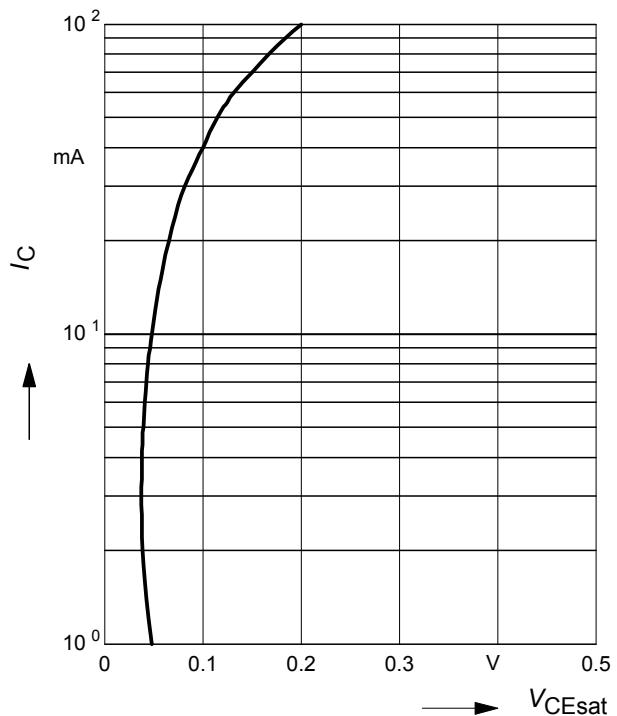


**Input off voltage  $V_{i(off)} = f(I_C)$**   
 $V_{CE} = 5V$  (common emitter configuration)

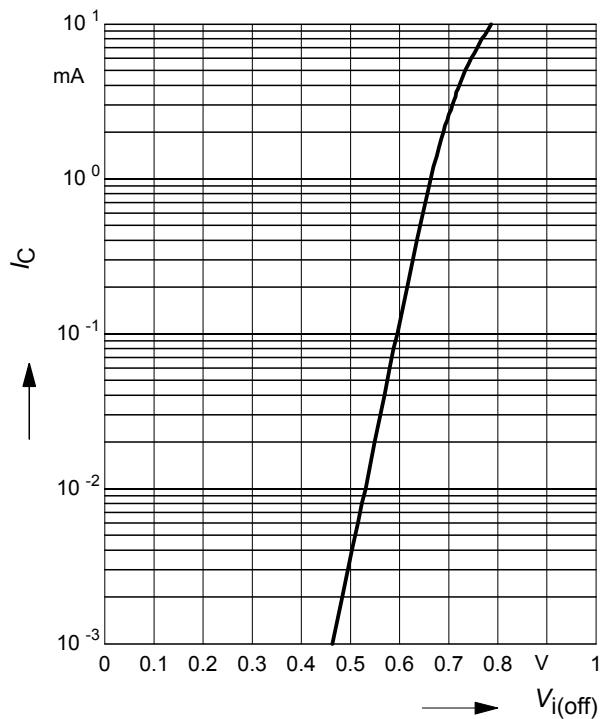


**Total power dissipation  $P_{\text{tot}} = f(T_S)$**   
BCR108

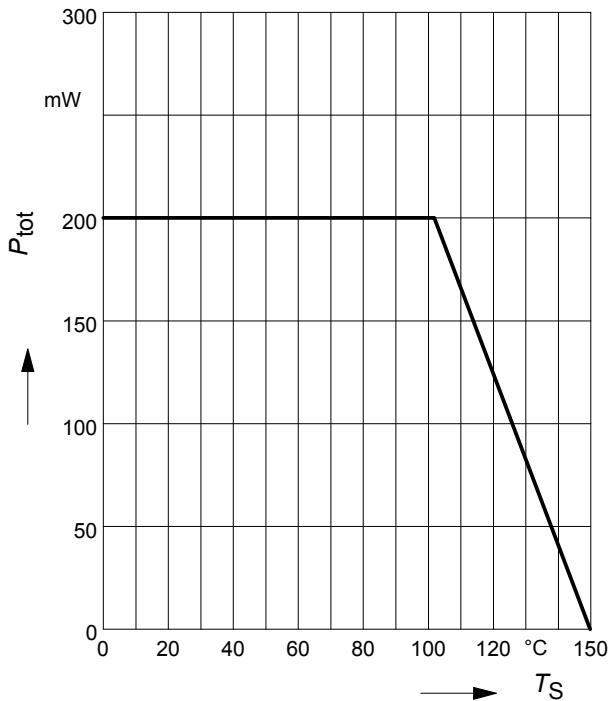


**Total power dissipation  $P_{\text{tot}} = f(T_S)$**   
BCR108L3

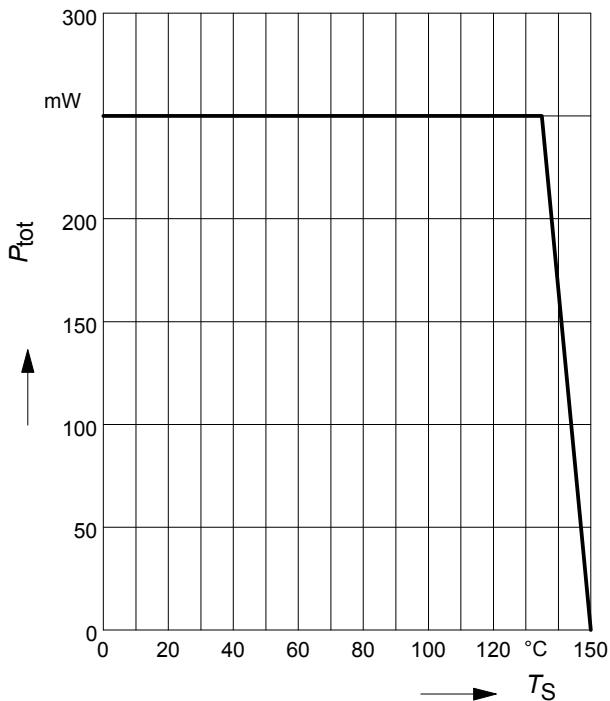


**Total power dissipation  $P_{\text{tot}} = f(T_S)$**   
BCR108F

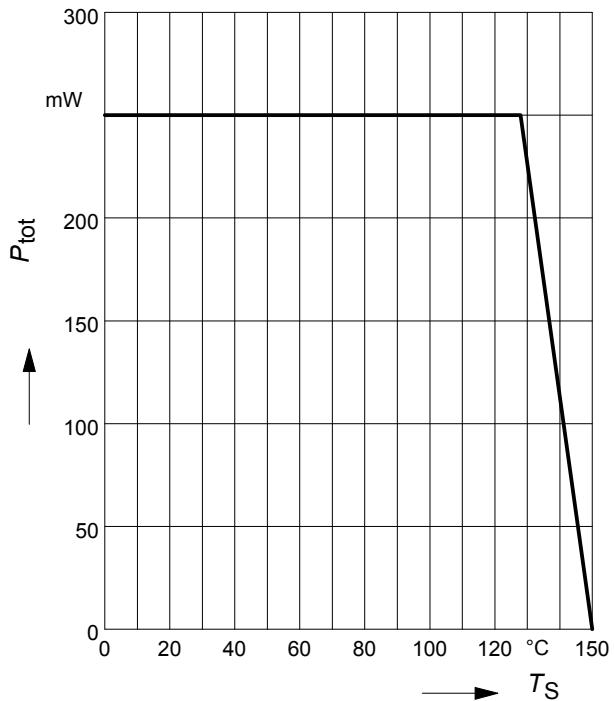


**Total power dissipation  $P_{\text{tot}} = f(T_S)$**   
BCR108S

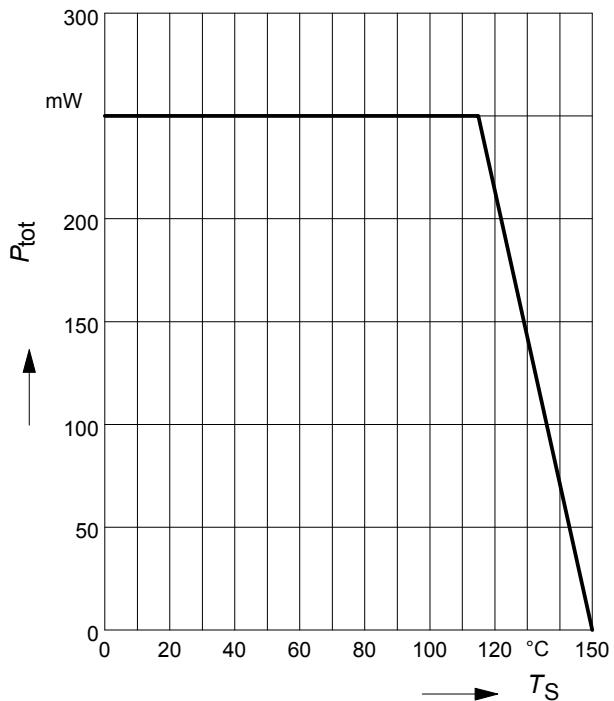


**Total power dissipation**  $P_{\text{tot}} = f(T_S)$   
BCR108T

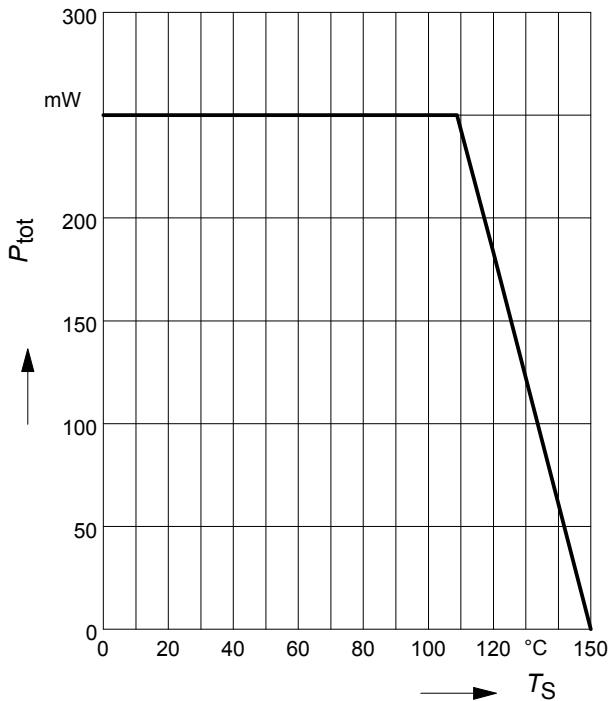


**Permissible Pulse Load**  $R_{\text{thJS}} = f(t_p)$   
BCR108

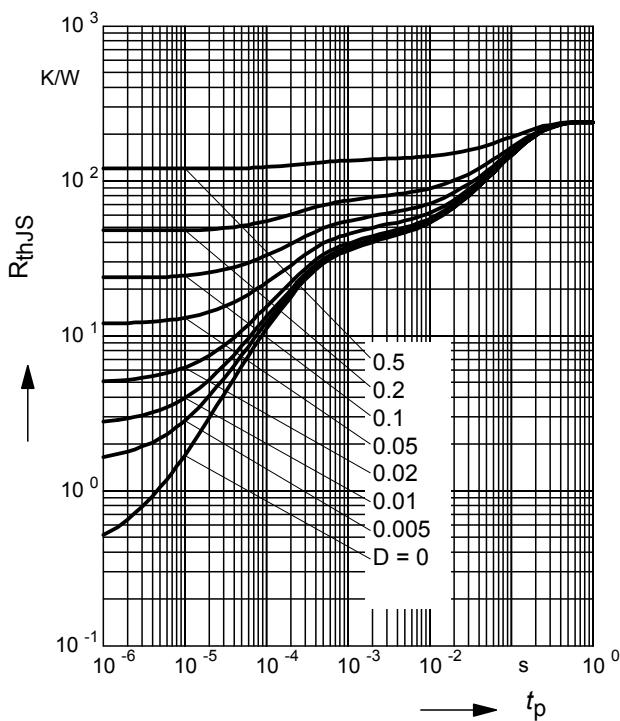

**Total power dissipation**  $P_{\text{tot}} = f(T_S)$   
BCR108W

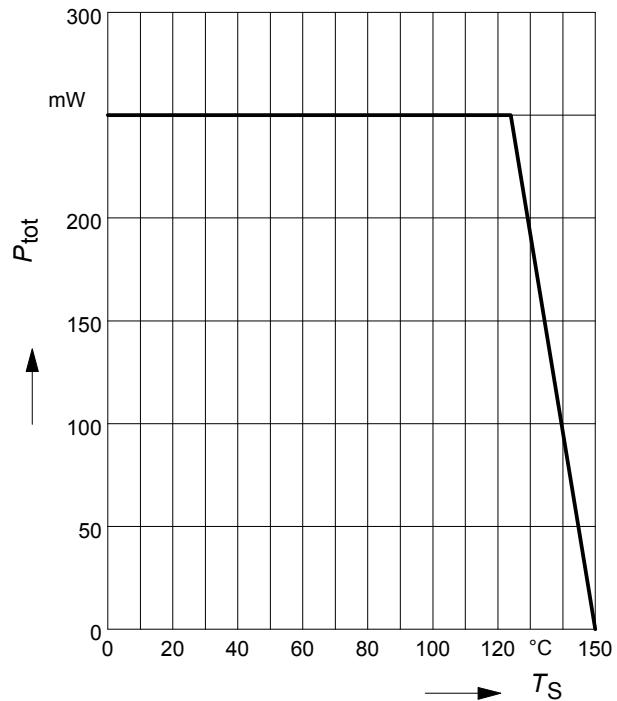


**Permissible Pulse Load**  
 $P_{\text{totmax}}/P_{\text{totDC}} = f(t_p)$   
BCR108

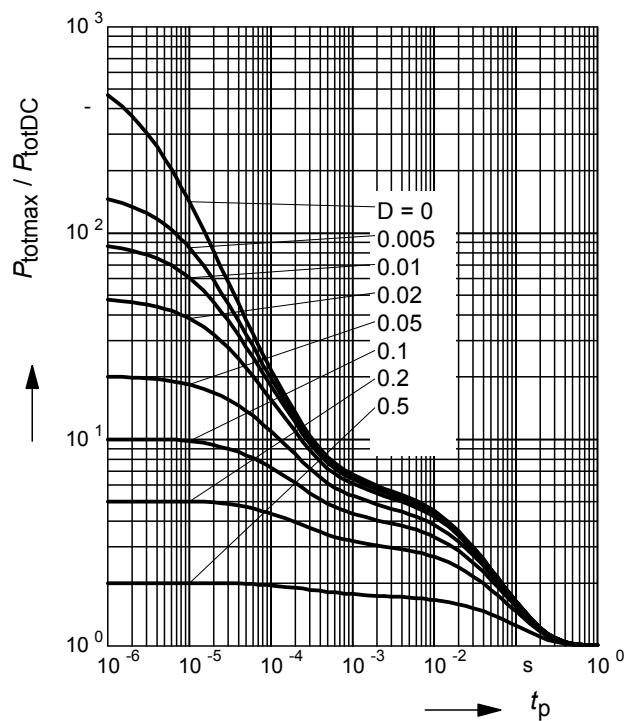


**Permissible Puls Load  $R_{\text{thJS}} = f(t_p)$** 

BCR108F

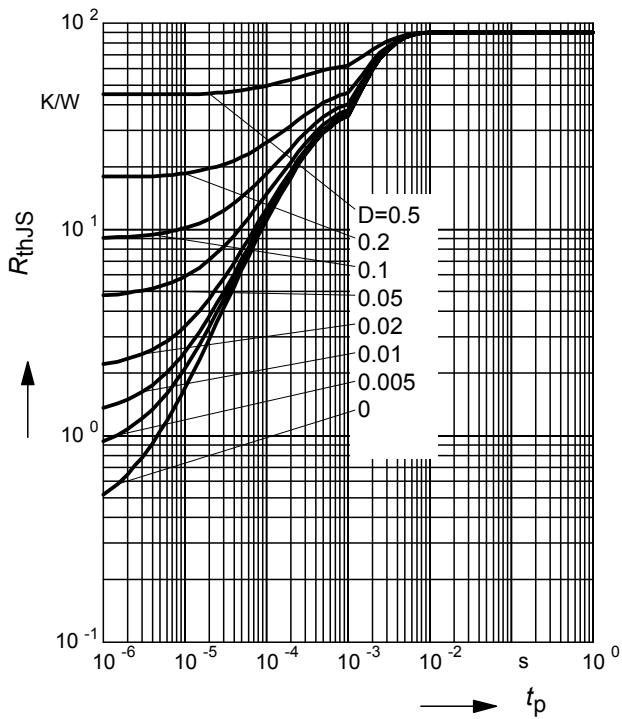

**Permissible Puls Load  $R_{\text{thJS}} = f(t_p)$** 

BCR108L3

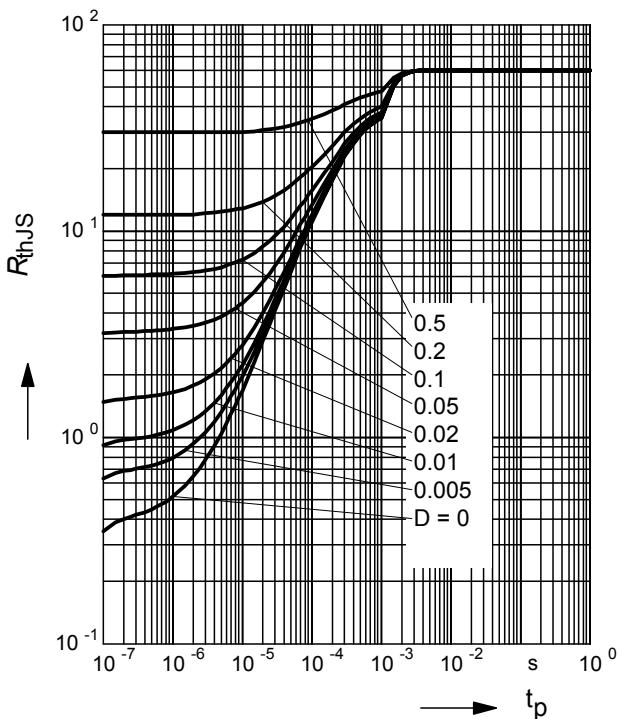
**Permissible Pulse Load**


$$P_{\text{totmax}}/P_{\text{totDC}} = f(t_p)$$

BCR108F

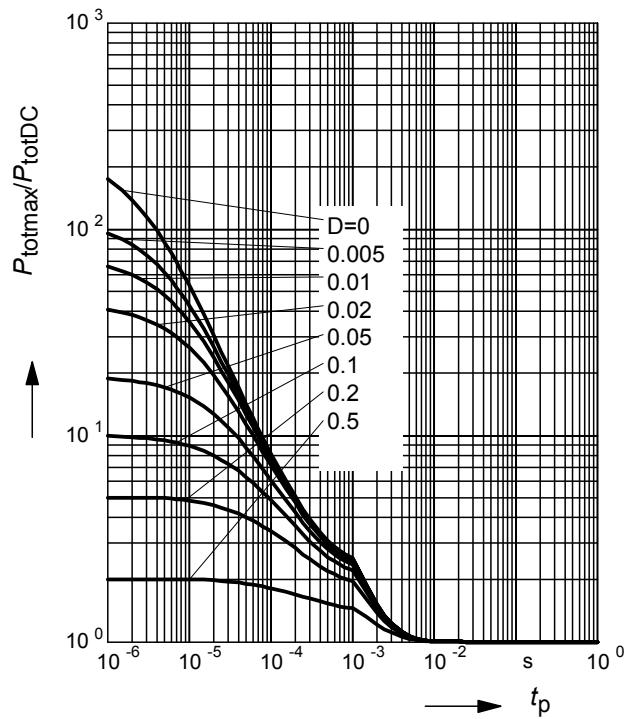
**Permissible Pulse Load**


$$P_{\text{totmax}}/P_{\text{totDC}} = f(t_p)$$

BCR108L3

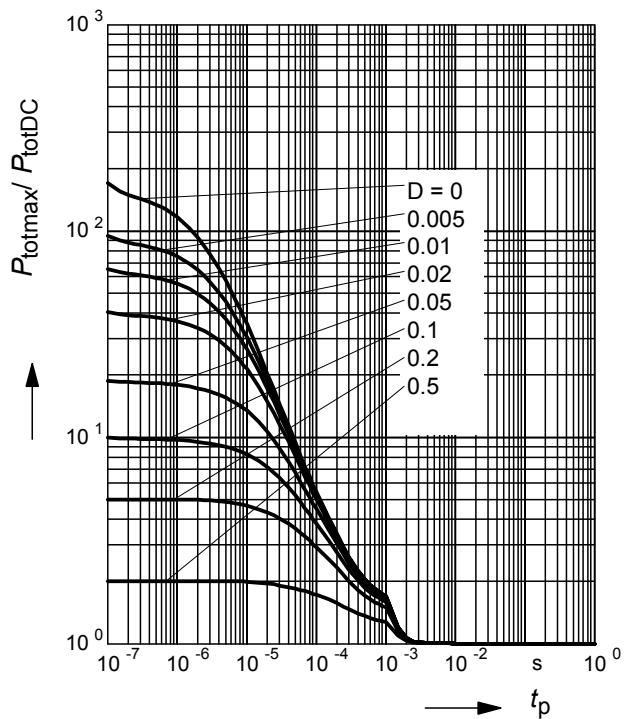


**Permissible Puls Load  $R_{\text{thJS}} = f(t_p)$** 

BCR108S

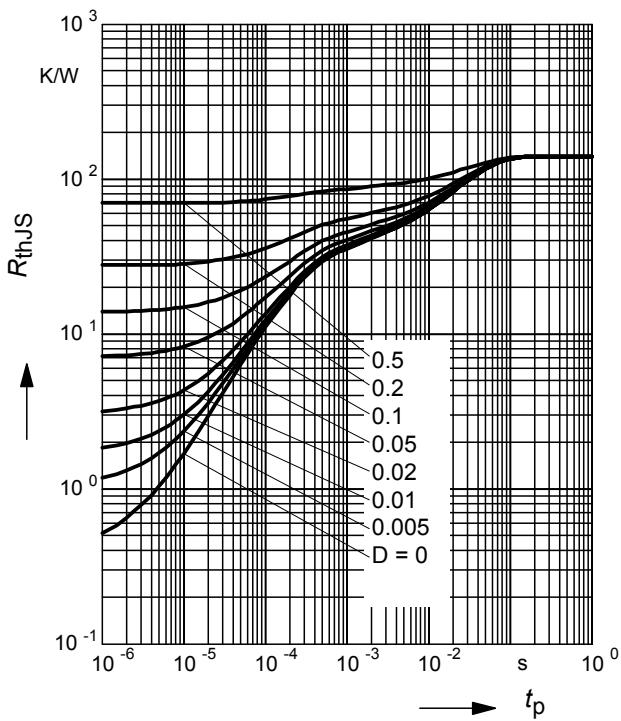

**Permissible Puls Load  $R_{\text{thJS}} = f(t_p)$** 

BCR108T

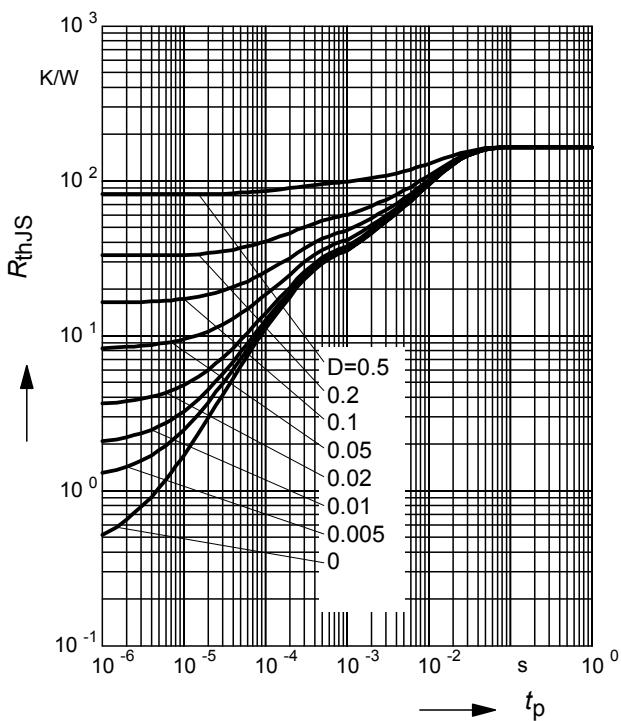
**Permissible Pulse Load**


$$P_{\text{totmax}}/P_{\text{totDC}} = f(t_p)$$

BCR108S

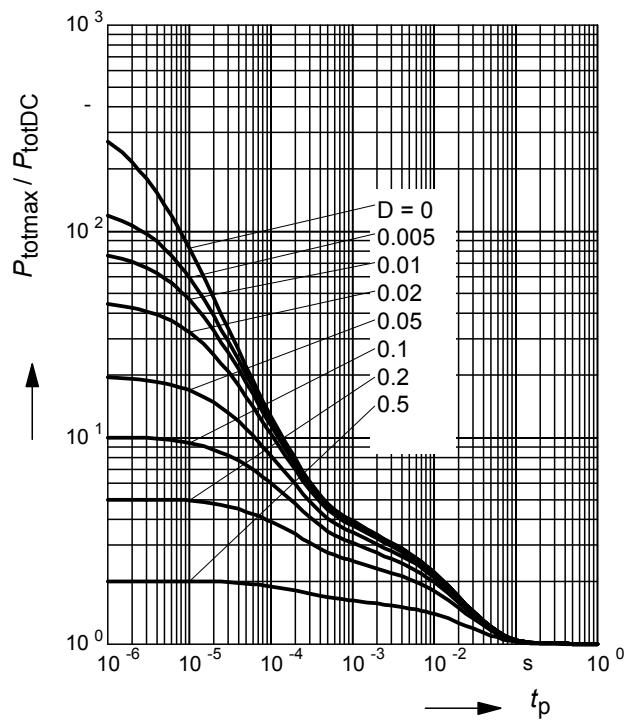
**Permissible Pulse Load**


$$P_{\text{totmax}}/P_{\text{totDC}} = f(t_p)$$

BCR108T

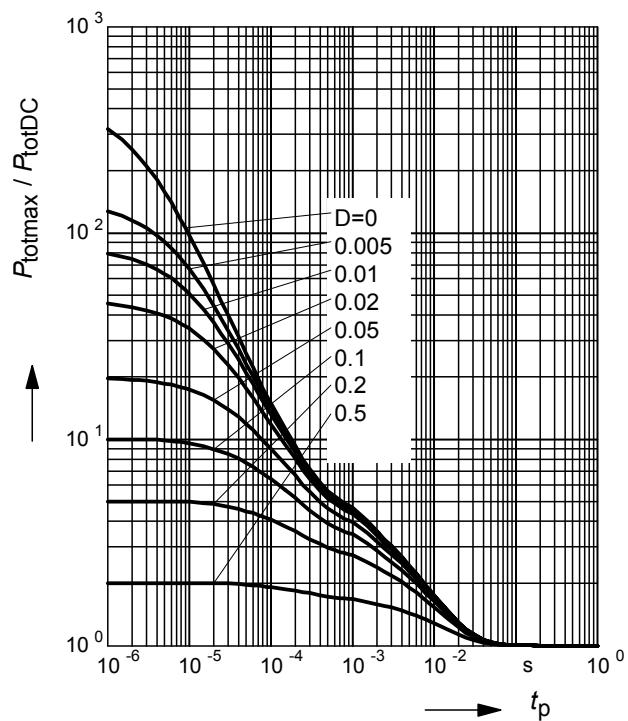

**Permissible Puls Load  $R_{\text{thJS}} = f(t_p)$**

BCR108W

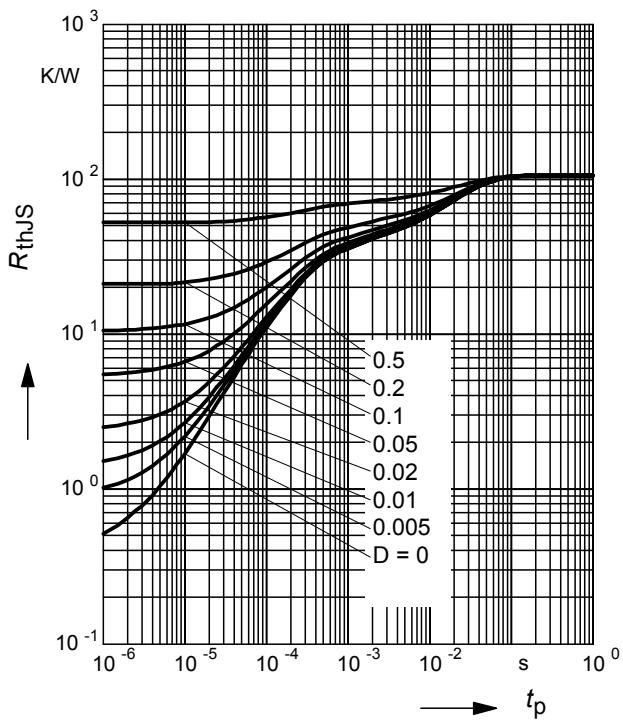

**Permissible Pulse Load**

$P_{\text{totmax}}/P_{\text{totDC}} = f(t_p)$

BCR108W

