


M65KA128AL

128Mbit (4 Banks x 2M x 16) 1.8V Supply, Low Power SDRAMs

Feature summary

- 128Mbit Synchronous Dynamic RAM
 - Organized as 4 Banks of 2 MWords, each 16 bits wide
- Supply Voltage
 - V_{DD} = 1.65V to 1.95V
 - V_{DDQ} = 1.65 to 1.95V for Input/Output
- Synchronous Burst Read and Write
 - Fixed Burst lengths: 1, 2, 4, 8 words or full Page
 - Burst Types: Sequential and Interleaved.
 - Maximum clock frequency: 104MHz
 - CAS Latency 2, 3
- Automatic Precharge
- Low Power features:
 - PASR (Partial Array Self Refresh),
 - Automatic TCSR (Temperature Compensated Self Refresh)
 - Driver Strength (DS)
 - Deep Power-Down Mode
- Delivery form: Unsawn Wafer
- Auto Refresh and Self Refresh
- LVCMOS Interface Compatible with Multiplexed Addressing
- Operating temperature
 - − −25°C to +90°C

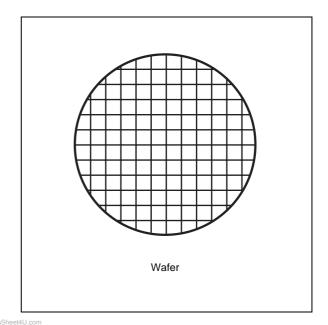

The M65KA128AL is only available as part of a Multi-Chip Package Product.

Contents M65KA128AL

Contents

1	Sum	mary description	6
2	Sign	al descriptions	9
	2.1	Address Inputs (A0-A11)	9
	2.2	Bank Select Inputs (BA0-BA1)	9
	2.3	Data Inputs/Outputs (DQ0-DQ15)	9
	2.4	Chip Select (E)	9
	2.5	Column Address Strobe (CAS)	9
	2.6	Row Address Strobe (RAS)	9
	2.7	Write Enable (W)	9
	2.8	Clock Input (K)	10
	2.9	Clock Enable (KE)	10
	2.10	Lower/Upper Data Input/Output Mask (LDQM/UDQM)	10
	2.11	V _{DD} Supply Voltage	10
	2.12	V _{DDQ} Supply Voltage	10
	2.13	V _{SS} Ground	10
	2.14	V _{SSQ} Ground	11
3	Oper	rations	12
	3.1	Power-Up	12
	3.2	Burst Read	12
	3.3	Burst Write	13
	3.4	Self Refresh	13
	3.5	Auto Refresh	13
	3.6	Power-Down	13
	3.7	Deep Power-Down	14
4	Com	mands	15
	4.1	Mode Register Set command	15
	4.2	Extended Mode Register Set command	15
	4.3	Bank (Row) Activate command	
	4.4	Read command	16

	4.5	Write command 16
	4.6	Precharge command
	4.7	Auto Precharge command
	4.8	Burst Terminate command
	4.9	Data Mask command
	4.10	Clock Suspend command
	4.11	Power-Down command
	4.12	Auto Refresh command 17
	4.13	Self Refresh command
	4.14	Deep Power-Down command
5	Regi	ster descriptions
	5.1	Mode Register description
	5.2	Extended Mode Register description
6	Maxi	mum rating
7	DC a	nd AC parameters
8	Part	numbering
9	Revi	sion history

List of tables M65KA128AL

List of tables

Table 1.	Signal Names	7
Table 2.	Operating Modes	14
Table 3.	Commands	18
Table 4.	Mode Register Definition	20
Table 5.	Extended Mode Register Definition	21
Table 6.	Absolute Maximum Ratings	22
Table 7.	Operating and AC Measurement Conditions	23
Table 9.	Capacitance	24
Table 10.	DC Characteristics 1	24
Table 11.	DC Characteristics 2	25
Table 12.	Self Refresh Current (I _{DD6}) Values in Normal Operating Mode	25
Table 13.	Synchronous AC Characteristics	
Table 14.	Asynchronous AC Characteristics	27
Table 15.	Ordering Information Scheme	
Table 16	Document revision history	

M65KA128AL List of figures

List of figures

Figure 1.	Logic Diagram7
Figure 2.	Functional Block Diagram8
Figure 3.	AC Measurement I/O Waveform23
Figure 4.	Chip Enable Signal During Read, Write and Precharge
Figure 5.	Read with Precharge AC Waveforms
Figure 6.	Read with Auto Precharge AC Waveforms
Figure 7.	Clock Suspend During Burst Read AC Waveforms
Figure 8.	Random Column Read AC Waveforms
Figure 9.	Random Row Read AC Waveforms
Figure 10.	Column Interleaved Read AC Waveforms
Figure 11.	Burst Column Read Followed by Auto Precharge AC Waveforms
Figure 12.	Write AC Waveforms
Figure 13.	Byte Write AC Waveforms
Figure 14.	Mode Register Set AC Waveforms
Figure 15.	Clock Suspend During Burst Write AC Waveforms
Figure 16.	Random Column Write AC Waveforms
Figure 17.	Random Row Write AC Waveforms
Figure 18.	Column Interleaved Write AC Waveforms
Figure 19.	Burst Column Write Followed by Auto Precharge AC Waveforms
Figure 20.	Precharge Termination
Figure 21.	Power-On Sequence
Figure 22.	Power-Down Mode and Clock Masking AC Waveforms46
Figure 23.	Auto Refresh
Figure 24.	Self Refresh
Figure 25.	Deep Power-Down Entry AC Waveforms
Figure 26.	Deep Power-Down Exit AC Waveforms

1 Summary description

The M65KA128AL is a 128 Mbit Low Power Synchronous DRAM (SDRAM) organized as 4 Banks of 2,097,152 Words of 16 bits each.

The Low Power SDRAM achieves low power consumption and high-speed data transfer using the pipeline architecture. It is well suited for handheld battery powered applications like PDAs, 2.5 and 3G mobile phones and handheld computers.

The device architecture is illustrated in *Figure 2: Functional Block Diagram*. The device uses Burst mode to read and write data. It is capable of one, two, four, eight-word and full page, sequential and interleaved Burst.

To minimize current consumption during self-refresh operations, the M65KA128AL includes three system-accessible mechanisms configured via the Extended Mode Register:

- Automatic Temperature Compensated Self Refresh (TCSR) is used to adapts the refresh rate according to the operating temperature.
- Partial Array Self Refresh (PASR) performs a limited refresh of a half bank, a quarter of bank, one bank, two banks or all banks.
- The Deep Power-Down (DPD) mode completely halts the refresh operation and achieves minimum current consumption by cutting off the supply voltage from the whole memory array.

The M65KA128AL is programmable through two registers, the Mode Register and the Extended Mode Register:

- The Mode Register is used to select the CAS Latency, the Burst Type (sequential or interleaved) and the Burst Length. For more details, refer to *Table 4: Mode Register Definition*, and to *Section 4.1: Mode Register Set command*.
- The Extended Mode Register is used to program the Low Power features (PASR and Driver Strength) to reduce the current consumption during the Self Refresh operations. For more details, refer to Table 5: Extended Mode Register Definition, and to Section 4.2: Extended Mode Register Set command.

The M65KA128AL is offered in unsawn wafer.

Figure 1. Logic Diagram


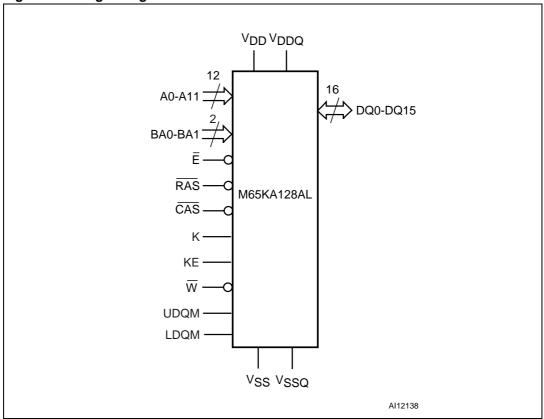


Table 1. Signal Names

A0-A11	Address Inputs
BA0-BA1	Bank Select Inputs
DQ0-DQ15	Data Inputs/Outputs
К	Clock Input
KE	Clock Enable Input
Ē	Chip Select Input
W	Write Enable Input
RAS	Row Address Strobe Input
CAS	Column Address Strobe Input
UDQM	Upper Data Input/Output Mask
LDQM	Lower Data Input/Output Mask
V_{DD}	Supply Voltage
V_{DDQ}	Input/Output Supply Voltage
V _{SS}	Ground
V _{SSQ}	Input/Output Ground

7/53

Figure 2. Functional Block Diagram

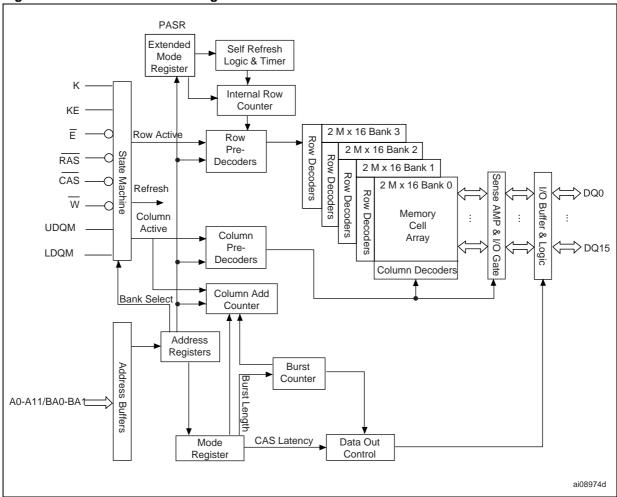

M65KA128AL Signal descriptions

2 Signal descriptions

See Figure 1: Logic Diagram, and Table 1: Signal Names, for a brief overview of the signals connected to this device.

2.1 Address Inputs (A0-A11)

The A0-A11 Address Inputs are used to select the row or column to be made active. If a row is selected, all A0-A11 Address Inputs are used. If a column is selected, only the nine least significant Address Inputs, A0-A8, are used. In this latter case, A10 determines whether Auto Precharge is used. If A10 is High (set to '1') during Read or Write, the Read or Write operation includes an Auto Precharge cycle. If A10 is Low (set to '0') during Read or Write, the Read or Write cycle does not include an Auto Precharge cycle.

2.2 Bank Select Inputs (BA0-BA1)

The BA0 and BA1 Banks Select Inputs are used to select the bank to be made active.

The device must be enabled, the Row Address Strobe, \overline{RAS} , must be Low, V_{IL} , the Column Address Strobe, \overline{CAS} , and \overline{W} must be High, V_{IH} , when selecting the addresses. The address inputs are latched on the rising edge of the clock signal, K.

2.3 Data Inputs/Outputs (DQ0-DQ15)

The Data Inputs/Outputs output the data stored at the selected address during a Read operation, or are used to input the data during a write operation.

2.4 Chip Select (\overline{E})

The Chip Select input \overline{E} activates the memory state machine, address buffers and decoders when driven Low, V_{II} . When High, V_{IH} , the device is not selected.

2.5 Column Address Strobe (CAS)

The Column Address Strobe, \overline{CAS} , is used in conjunction with Address Inputs A8-A0 and BA1-BA0, to select the starting column location prior to a Read or Write.

2.6 Row Address Strobe (RAS)

The Row Address Strobe, RAS, is used in conjunction with Address Inputs A11-A0 and BA1-BA0, to select the starting address location prior to a Read or Write.

2.7 Write Enable (\overline{W})

The Write Enable input, W, controls writing.

Signal descriptions M65KA128AL

2.8 Clock Input (K)

The Clock signal, K, is used to clock the Read and Write cycles. During normal operation, the Clock Enable pin, KE, is High, V_{IH} . The clock signal K can be suspended to switch the device to the Self Refresh, Power-Down or Deep Power-Down mode by driving KE Low, V_{IL} .

2.9 Clock Enable (KE)

The Clock Enable, KE, pin is used to control the synchronizing of the signals to Clock signal K. The signals are clocked when KE is High, V_{IH} When KE is Low, V_{IL} , the signals are no longer clocked and data Read and Write cycles are extended. KE is also involved in switching the device to the Self Refresh, Power-Down and Deep Power-Down modes.

2.10 Lower/Upper Data Input/Output Mask (LDQM/UDQM)

Lower Data Input/Output Mask and Upper Data Input/Output Mask pins are input signals used to control the Input and Output buffers, respectively.

During Read operations, LDQM and UDQM control the Output buffer. When both LDQM and UDQM are High, V_{IH} , the Output buffer is disabled. When held Low, V_{IL} , the Output buffer is enabled. LDQM and UDQM are used to mask the data read or written from or to the memory array. LDQM Low, V_{IL} , gates the data from or to the Lower Byte Data I/O (DQ0 to DQ7) while UDQM Low, gates the data from or to the Upper Byte Data I/Os (DQ8 to DQ15).

During read operations, the latency between LDQM/UDQM High or Low and data output disabled or enabled is two clock cycles. During write operations, there is no latency between LDQM/UDQM stable and data input valid.

2.11 V_{DD} Supply Voltage

V_{DD} provides the power supply to the internal core of the memory device. It is the main power supply for all operations (Read and Write).

2.12 V_{DDQ} Supply Voltage

 V_{DDQ} provides the power supply to the I/O pins and enables all Outputs to be powered independently of V_{DD} . V_{DDQ} can be tied to V_{DD} or can use a separate supply.

It is recommended to power-up and power-down V_{DD} and V_{DDQ} together to avoid certain conditions that would result in data corruption.

2.13 V_{SS} Ground

Ground, $V_{SS,}$ is the reference for the core power supply. It must be connected to the system ground.

M65KA128AL Signal descriptions

2.14 V_{SSQ} Ground

 $\rm V_{SSQ}$ ground is the reference for the input/output circuitry driven by $\rm V_{DDQ}.~V_{SSQ}$ must be connected to $\rm V_{SS}.$

Note: Each device in a system should have V_{DD} and V_{DDQ} decoupled with a $0.1\mu F$ ceramic capacitor close to the pin (high frequency, inherently low inductance capacitors should be as close as possible to the package).

11/53

Operations M65KA128AL

3 Operations

There are 7 operating modes that control the memory. Each of these is described in this section, see *Table 2: Operating Modes*, for a summary.

3.1 Power-Up

The Low Power SDRAM has to be powered up and initialized in a well determined manner:

- Power must be applied to V_{DD} and V_{DDQ} simultaneously.
- 2. After applying V_{DD} and VD_{DQ} , a minimum pause of 200 μ s must be respected before the signals can be toggled.
- The Precharge command must then be issued to all banks. The Clock Enable input, KE, and UDQM/LDQM must be held High until the Precharge command is issued to make sure that DQ0-DQ15 remain high impedance.
- 4. t_{RP} after precharging all the banks, the Mode Register and the Extended Mode Register must be set by issuing a Mode Register Set command and an Extended Mode Register Set command, respectively. A minimum pause of t_{MRD} must be respected after each register set command.
- 5. After configuring the registers, 2 or more Auto Refresh cycles must be executed before the device is ready for normal operation.

The fourth and fifth steps can be swapped.

3.2 Burst Read

The Read Command is used to switch the device to Burst Read mode (see Section 4.4: Read command for details). In Burst Read mode the data is output in bursts synchronized with the clock. A valid Burst Read operation is initiated by driving \overline{E} and \overline{CAS} Low, V_{IL} , and by driving \overline{W} and \overline{RAS} High, V_{IH} , at the positive edge of the clock signal, K.

Burst Read can be accompanied by an Auto Precharge cycle depending on the state of the A10 Address Input. If A10 is High (set to '1') when the Burst Read command is issued, the Burst Read operation will be followed by an Auto Precharge cycle.

During Burst Read operation, the memory reads data from the activated bank. Different Burst Types and Lengths can be programmed using the Mode Register bits (see Section 5.1: Mode Register description). The Burst Types available are Sequential and Interleaved, selected using Mode Register Bit A3. Possible Burst Lengths are 1-, 2-, 4-, 8-Word and Full Page, selected using Mode Register Bits A2 to A0.

M65KA128AL Operations

3.3 Burst Write

The Write Command is used to switch the device to Burst Write mode (see Section 4.5: Write command for details). In Burst Write mode the data is input in bursts synchronized with the clock. A valid Burst Write is initiated by driving \overline{E} , \overline{CAS} and \overline{W} Low, V_{IL} , and by driving \overline{RAS} High, V_{IH} , at the positive edge of the clock signal, K.

Burst Write can be accompanied by an Auto Precharge cycle depending on the state of the A10 Address Input. If A10 is High (set to '1') when the Write command is issued, the Write operation will be followed by an Auto Precharge cycle.

During Burst Write operation, the memory writes data to the activated bank. As for Burst Read, different Burst Types and Lengths can be utilized, programmed in the same fashion.

3.4 Self Refresh

In Self Refresh mode, the data contained in the Low Power SDRAM memory array is retained and refreshed. The Low Power SDRAM refresh cycles are asynchronous.

The Self-Refresh mode is entered by driving KE Low (set to '0'), with \overline{E} , \overline{RAS} , and \overline{CAS} Low, and \overline{W} High (set to '1'). When in this mode, the device is not clocked any more.

The Self Refresh mode is exited by driving KE from Low to High, with \overline{E} High, \overline{RAS} , \overline{CAS} and \overline{W} Don't Care, or with \overline{E} Low and \overline{RAS} , \overline{CAS} and \overline{W} High.

3.5 Auto Refresh

The Auto Refresh mode is used to refresh the Low Power SDRAM in normal operation mode whenever needed.

During an auto refresh operation, KE must be kept High, V_{IH} and the address bits are "Don't Care" because the specific address bits are generated by the internal refresh address counter.

3.6 Power-Down

In Power-Down mode, the current is reduced the Standby current.

For the memory to enter the Power-Down mode, KE must be held Low (set to '0'), after the Precharge Time \underline{t}_{RP} with \overline{E} High (set to '1'), \overline{RAS} , \overline{CAS} and \overline{W} Don't Care, or with \overline{E} Low, \overline{RAS} , \overline{CAS} and \overline{W} High.

The Power-Down mode is exited by driving KE High, with \overline{E} High, \overline{RAS} , \overline{CAS} and \overline{W} Don't Care, or with \overline{E} Low and \overline{RAS} , \overline{CAS} and \overline{W} High.

Operations M65KA128AL

3.7 Deep Power-Down

The purpose of this mode is to achieve maximum power reduction by cutting the power supply to the whole memory array. Data is no longer retained when the device enters Deep Power-Down Mode.

The Low Power SDRAM is switched to Deep Power-Down mode by applying V_{IL} to \overline{E} and \overline{W} , and V_{IH} to \overline{RAS} and \overline{CAS} on the rising edge of the clock, K, and by driving KE Low, V_{IL} . For more information, see *Figure 25: Deep Power-Down Entry AC Waveforms*.

The Low Power SDRAM is released from Deep Power-Down mode by applying V_{IH} to KE, with all other pins Don't Care. Then a special sequence, is required before the device can take any new command into account:

- 1. Maintain No Operation status conditions (see *Table 3* for a minimum time of 200µs,
- 2. Issue a Precharge command to all the banks of the device (see *Section 4.6: Precharge command* for details),
- 3. Issue 2 or more Auto-Refresh commands,
- 4. Issue a Mode Register Set command and an Extended Mode Register Set command to initialize the Mode Register and the Extended Mode Register, respectively.

The third and fourth steps can be swapped.

The Deep Power-Down mode exit sequence is illustrated in *Figure 26: Deep Power-Down Exit AC Waveforms*.

Table 2. Operating Modes (1)

Operating Mode	KEn-1	KEn	Ē	RAS	CAS	W	A10	A9, A11	A0-A7	BA0-BA1
Burst Read	V _{IH}	Х	V _{IL}	V _{IH}	V _{IL}	V _{IH}	V _{IL}	Valid	Start Column Address	Bank Select
Burst Write	V _{IH}	Х	V _{IL}	V _{IH}	V _{IL}	V _{IL}	V _{IL}	Valid	Start Column Address	Bank Select
Self Refresh	V_{IH}	V_{IL}	V _{IL}	V_{IL}	V_{IL}	V _{IH}		Х		Х
Auto Refresh	V_{IH}	V_{IH}	V_{IL}	V_{IL}	V_{IL}	V_{IH}		Х		X
Power-Down	V _{IH}	V _{IL}	V_{IL}	V _{IH}	V_{IH}	V_{IH}		Х		X
I owel-bowii	VIН	V IL	V _{IH}	Х	Χ	Х		Χ		^
Deep Power-Down	V_{IH}	V_{IL}	V _{IL}	V _{IH}	V_{IH}	V_{IL}		Х		Х
Device Deselect	V_{IH}	Х	V _{IH}	Х	Х	Х	X X X		Х	
No Operation	V_{IH}	Х	V _{IL}	V _{IH}	V_{IH}	V_{IH}		X		

^{1.} $X = Don't Care V_{IL} or V_{IH}$.

M65KA128AL Commands

4 Commands

There are 16 commands that control the memory. Refer to *Table 3: Commands*, in conjunction with the text descriptions below and to *Table 3: Commands*.

4.1 Mode Register Set command

The Mode Register Set command is issued by applying V_{IL} to \overline{E} , \overline{RAS} , \overline{CAS} and \overline{W} and by setting BA1 to '0', and BA0 to '0'.

The Mode Register Set command must be executed after the Power-Up sequence prior to issuing a Bank (Row) Active command.

The execution of a Mode Register Set command will re-program the Mode Register, modifying its contents.

4.2 Extended Mode Register Set command

The Extended Mode Register Set command is issued by applying V_{IL} to \overline{E} , \overline{RAS} , \overline{CAS} and \overline{W} , and then by setting BA1 to '1', and BA0 to '0'.

The Extended Mode Register Set command must be executed after the Power-Up sequence prior to issuing a Bank (Row) Active command.

The execution of an Extended Mode Register Set command will re-program the Extended Mode Register, modifying its contents.

4.3 Bank (Row) Activate command

The Bank (Row) Active command is used to activate a row in a specific bank of the device. This command is initiated by driving \overline{E} and \overline{RAS} Low, V_{IL} , and driving \overline{CAS} and \overline{W} High, V_{IH} , at the positive edge of the clock signal, K. The value on BA1 and BA0 selects the bank, and the value on A0-A11 selects the row. The selected row remains active for column access until a Precharge command is issued to the bank containing the row.

A minimum time of t_{RCD} is required after issuing the Bank (Row) Active command prior to initiating Read and Write operations from and to the activated bank.

Commands M65KA128AL

4.4 Read command

The Read command is used to switch the Low Power SDRAM to Burst Read mode (see Section 3.2: Burst Read).

During Burst Read operation, the memory reads data from the activated bank. Inputs BA1 and BA0 are used to select a bank, Address inputs A8-A0 are used to select a starting column location. The value at input A10 determines whether Auto Precharge is activated. If Auto Precharge is selected, the row being accessed will be precharged at the end of the Burst Read operation. If Auto Precharge is not selected, the row will remain active for subsequent accesses. Different Burst Types and Lengths can be programmed using the Mode Register bits (see *Table 4: Mode Register Definition*):

- The Burst Types available are Sequential and Interleaved selected using Mode Register Bit MR3.
- Possible Burst Lengths are 1-, 2-, 4-, 8-Word and Full Page, selected using Mode Register Bits MR0 to MR2.

4.5 Write command

The Write command is used to switch the Low Power SDRAM to Burst Write mode (see Section 3.3: Burst Write).

During Burst Write operation, the memory writes data to the activated bank. Inputs BA1 and BA0 inputs are used to select a bank, the A8-A0 Address Inputs are used to select a starting column location. The value at the A10 input determines whether Auto Precharge is activated. If Auto Precharge is selected, the row being accessed will be precharged at the end of the Write burst. If Auto Precharge is not selected, the row will remain active for subsequent accesses.

Burst Types and Lengths apply to Burst Write operation in the same manner as they do to Burst Read operations.

4.6 Precharge command

The Precharge command is used to close the open row in a particular bank, or the open rows in all the banks, depending on the value on the A10 Address Input. If A10 is High, at V_{IH} , when the Precharge command is issued, the command will be applied to all the banks, closing all the open rows in these banks. If A10 is Low, at V_{IL} , when the Precharge command is issued, the command will be applied only to the selected bank, closing the open row of this bank.

The Precharge command can also be used to terminate a Burst. Issued during a Burst Read or Burst Write cycle, the Precharge command will interrupt the Burst operation and close the active bank.

The precharge command can be issued any time after t_{RAS} min. is satisfied. Soon after the precharge command is issued, the precharge operation performed and the synchronous DRAM enters the idle state after t_{RP} is satisfied. The t_{RP} parameter is the time required to perform the precharge. The earliest timing in a read cycle that a precharge command can be issued without losing any data in the burst is CL-1 clock cycles before the reference clock that indicates the last data word is valid (see *Figure 5*)

M65KA128AL Commands

In order to write all data to the memory cell correctly, the asynchronous parameter t_{DPL} must be satisfied. The t_{DPL} (min.) specification defines the earliest time that a precharge command can be issued.

After the Precharge command is issued, a minimum time of t_{RP} is required before the bank(s) are available.

4.7 Auto Precharge command

The Auto Precharge command is used to close the open row in a specific bank after a Read or Write cycle. Read or Write with Auto Precharge is initiated if the A10 Address Input is High, at $V_{\rm IH}$, when a Read or Write command is issued.

4.8 Burst Terminate command

The Burst Terminate command is used to terminate a Burst operation. A Burst operation can be interrupted by using the Precharge command (see the Section 4.6: Precharge command for details), or by issuing the Burst Terminate command. Issuing the Burst Terminate command during a Burst Read or Write cycle will terminate the burst while leaving the bank open.

4.9 Data Mask command

The Data Mask command is used to mask the Read or Write data. A Data Mask command issued during a Read cycle will disable the data outputs, switching them to the high-impedance state after a delay of two clock cycles. A Data Mask command issued during a Write cycle will disable the data inputs with no delay.

4.10 Clock Suspend command

The Clock Suspend command is used to interrupt the internal clock of the Low Power SDRAM. The command is controlled by the Clock Enable input, KE, which is High, V_{IH} , in normal access mode. The Clock Suspend command is issued by driving KE Low, V_{IL} thus freezing the internal clock and extending data Read and Write cycles.

4.11 Power-Down command

The Power-Down command is used to put the device in Power-Down mode where the operating current is reduced to the Standby current.

All banks must be precharged and a minimum time of t_{RP} must elapse before issuing the Power-Down command.

4.12 Auto Refresh command

The Auto Refresh command is used to put the device in Auto refresh mode (see Section 3.5: Auto Refresh).

Commands M65KA128AL

4.13 Self Refresh command

The purpose of the Self Refresh command is used to put the device in Self Refresh mode to retain and refresh the data contained in the Low Power SDRAM memory array. In Self Refresh mode, the Low Power SDRAM runs Refresh cycles asynchronously.

The Self Refresh cycle is performed according to the Extended Mode Register settings:

- EMR3 to EMR4 bits configure the Refresh rate at which the memory array is refreshed to perform a Temperature Compensated Self Refresh.
- EMR0 to EMR2 configure the part of the memory array being refresh (Partial Array Self Refresh).

4.14 Deep Power-Down command

The Deep Power-Down command is used to switch the Low Power SDRAM to Deep Power-Down Mode. This mode provides maximum power reduction as it cuts the power of the entire memory array of the device. For more information on how the command is issued and its exit sequence, see Section 3.7: Deep Power-Down, Figure 25: Deep Power-Down Entry AC Waveforms, and Figure 26: Deep Power-Down Exit AC Waveforms.

Table 3. Commands⁽¹⁾

Command	KEn-1	KEn	Ē	RAS	CAS	w	UDQM	LDQM	A10	A9, A11	A0-A7	BA0- BA1	DQ0- DQ7	DQ8- DQ15
Mode Register Set ⁽²⁾	V _{IH}	Х	V _{IL}	V _{IL}	V _{IL}	V _{IL}	Х	Х		Ol	o Code		Х	Х
Extended Mode Register Set ⁽²⁾	V _{IH}	Х	V _{IL}	V _{IL}	V _{IL}	V _{IL}	Х	Х		Ol	p Code		Х	Х
Bank (Row) Active	V _{IH}	Х	V _{IL}	V _{IL}	V _{IH}	V _{IH}	Х	Х	Start	: Row A	address	Bank Select	Х	Х
Word Read/Read with Auto Precharge	V _{IH}	Х	V _{IL}	V _{IH}	V _{IL}	V _{IH}	V _{IL}	V _{IL}	V _{IL} /V _{IH}	Х	Start Column Address	Bank Select	Our	tput lid
Upper Byte Read/Read with Auto Precharge	V _{IH}	Х	V _{IL}	V _{IH}	V _{IL}	V _{IH}	V _{IL}	V _{IH}	V _{IL} /V _{IH}	Х	Start Column Address	Bank Select	Hi-Z	Output Valid
Lower Byte Read/Read with Auto Precharge	V _{IH}	Х	V _{IL}	V _{IH}	V _{IL}	V _{IH}	V _{IH}	V _{IL}	V _{IL} /V _{IH}	Х	Start Column Address	Bank Select	Output Valid	Hi-Z
Word Write/Write with Auto Precharge							V _{IL}	V _{IL}	V _{IL} /V _{IH}	Х	Start Column Address	Bank Select	Inp Va	out llid
Upper Byte Write/Write with Auto Precharge	V _{IH}	Х	V _{IL}	V _{IH}	V _{IL}	V _{IL}	V _{IL}	V _{IH}	V _{IL} /V _{IH}	Х	Start Column Address	Bank Select	Hi-Z	Input Valid
Lower Byte Write/Write with Auto Precharge							V _{IH}	V _{IL}	V _{IL} /V _{IH}	Х	Start Column Address	Bank Select	Input Valid	Hi-Z
Write with Auto Precharge	V _{IH}	х	V _{IL}	V _{IH}	V _{IL}	V _{IL}			V _{IH}	Х	Start Column Address	Bank Select	х	Х

M65KA128AL Commands

Table 3. Commands⁽¹⁾ (continued)

Command	KEn-1	KEn	Ē	RAS	CAS	w	UDQM	LDQM	A10	A9, A11	A0-A7	BA0- BA1	DQ0- DQ7	DQ8- DQ15
Precharge All Banks	V _{IH}	Х	V _{IL}	V _{IL}	V _{IH}	V _{IL}	Х	Х	V _{IH}		Х	Х	Х	Х
Precharge Selected Bank	V _{IH}	Х	V _{IL}	V _{IL}	V _{IH}	V _{IL}	Х	Х	V _{IL}		Х	V	Х	Х
Burst Terminate	V_{IH}	V_{IH}	V_{IL}	V _{IH}	V_{IH}	V_{IL}	Х	Х		Х		Х	Х	Х
Auto Refresh	V _{IH}	V _{IH}	V_{IL}	V _{IL}	V _{IL}	V _{IH}	Х	Х		Х		Х	Х	Х
Self Refresh Entry	V _{IH}	V _{IL}	V _{IL}	V _{IL}	V _{IL}	V _{IH}	Х	Х		Х		Х	Х	Х
Self Refresh	V _{IL}	V _{IH}	V _{IH}	Х	Х	Х	Х	Х		Х		Х	Х	Х
Exit ⁽⁴⁾	V IL	VIH	V_{IL}	V _{IH}	V _{IH}	V_{IH}	^	^		Х		Х	Х	Х
Power-Down	V _{IH}	V _{IL}	V_{IL}	V _{IH}	V _{IH}	V_{IH}	Х	Х	X		Х	Х	Х	
Entry ⁽⁵⁾⁽⁶⁾	VIH	۷IL	V_{IH}	Х	Х	Х	^	^		^		^	^	^
Power-Down	V _{IL}	V _{IH}	V_{IL}	V _{IH}	V_{IH}	V_{IH}	Х	X		Х		Х	Х	Х
Exit ⁽⁵⁾⁽⁶⁾	V IL	VIH	V_{IH}	Х	Х	Х	^	^		Λ		^	^	, , , , , , , , , , , , , , , , , , ,
Deep Power- Down Entry	V _{IH}	V _{IL}	V _{IL}	V _{IH}	V _{IH}	V _{IL}	Х	Х		Х		Х	Х	Х
Deep Power- Down Exit	V _{IL}	V _{IH})	X		Х	Х		Х		Х	Х	Х
Clock Suspend Entry	V _{IH}	V _{IL}	Х	Х	Х	х	Х	Х		Х		Х	Х	Х
Clock Suspend Exit	V _{IL}	V _{IH}	Х	Х	Х	х	Х	Х		Х		Х	х	Х
Data Mask / Output Enable	V _{IH}	Х	Х	Х	Х	х	V _{IL}	V _{IL}	Х		Х	х	х	
Data Mask / Output Disable	V _{IH}	Х	Χ	Х	Х	Х	V _{IH}	V _{IH}		Х		Х	Hi-Z	Hi-Z

^{1.} $X = Don't Care V_{IL} or V_{IH}$. V = Valid.

^{2.} BA1 and BA0 must both be driven Low, V_{IL} , to issue the Mode Register Set command. BA1 and BA0 must be driven High, V_{IH} and Low, V_{IL} , respectively, to issue the Extended Mode Register Set Command.

^{3.} To perform Read or Write operations with Autoprecharge, A10 must be held High, V_{IH} .

^{4.} The Self Refresh mode is exited by asynchronously driving KE from Low to High.

^{5.} The Power-Down mode is exited by asynchronously driving KE from Low to High.

^{6.} Banks must be precharged before issuing a Power-Down command.

5 Register descriptions

5.1 Mode Register description

The Mode Register is used to select the CAS Latency (1, 2 or 3), the Burst Type (sequential, interleaved), and the Burst Length (1-, 2-, 4-, 8-Word width or full page).

It is loaded by issuing a Mode Register Set command that programs A0 to A11 address bits. The values placed on the address lines are then latched into the Mode Register. BA0-BA1 must be set to '0'.

See Table 4: Mode Register Definition, for more details.

Table 4. Mode Register Definition

Address Bits	Mode Register Bit	Register Description	Value	Bit Description
A11-A7	-	-	00000	
			010	2 Clock Cycles
A6-A4	MR6-MR4	CAS Latency Bits	011	3 Clock Cycles
			Other configuration	ons reserved
A 2	MD2	Durat Time	0	Sequential
A3	MR3	Burst Type	1	Interleaved
			000	1 Word (A3 is Don't Care)
			001	2 Words (A3 is Don't Care)
			010	4 Words (A3 is Don't Care)
A2-A0	MR2-MR0	Burst Length Bit	011	8 Words (A3 is Don't Care)
			111	Full Page if A3 Low
				Reserved if A3 High
			Other configuration	ons reserved
BA1-BA0	-	-	00	

5.2 Extended Mode Register description

The Extended Mode Register is used to program Low Power self-refresh operation of the device (PASR, DS, TCSR). It is used to select the area of the memory array refreshed during Partial Array Self Refresh operations, and the driver strength.

It is loaded by issuing a Extended Mode Register Set command that programs A0 to A11 address bits. The values placed on the address lines are then latched into the Extended Mode Register. BA0 and BA1 must be set to '0' and '1' respectively.

See Table 5: Extended Mode Register Definition, for more details.

Table 5. Extended Mode Register Definition

Address Bits	Mode Register Bit	Register Description	Value	Bit Description
A11-A10	-	-	00	
		Auto	0	Enabled
A9	EMR9	Temperature Compensated Self Refresh (ATCSR)	1	Reserved
A8-A7	-	-	00	
			00	Full Strength
A6-A5	EMR6-EMR5	Driver Strength	01	1/2 Strength
A0-A3	EWINO-EWING	Bits	10	1/4 Strength
			11	1/8 Strength
A4-A3	EMR4-EMR3		00	
			000	All Banks
A2-A0	EMR2-EMR0	Self Refresh	001	Two Banks (BA1=0)
A2-A0	LIVINZ-EIVINU	Area Bits	010	One Banks (BA0 and BA1 =0)
			Other configurat	ions reserved
BA1-BA0	-	-	10	

21/53

Maximum rating M65KA128AL

6 Maximum rating

Stressing the device above the ratings listed in *Table 6: Absolute Maximum Ratings*, may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the Operating sections of this specification is not implied. Exposure to Absolute Maximum Rating conditions for extended periods may affect device reliability. Refer also to the STMicroelectronics SURE Program and other relevant quality documents.

Table 6. Absolute Maximum Ratings

Symbol	Parameter	Va	Value				
Symbol	Faranielei	Min	Max	Unit			
T_J	Junction Temperature	-25	90	°C			
T _{STG}	Storage Temperature	-55	125	°C			
V _{IO}	Input or Output Voltage	-0.5	2.6	V			
V _{DD} , V _{DDQ}	Supply Voltage	-0.5	2.6	V			
I _{OS}	Short Circuit Output Current	Short Circuit Output Current 50		mA			
PD	Power Dissipation		1				

7 DC and AC parameters


This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics Tables that follow, are derived from tests performed under the Measurement Conditions summarized in *Table 7: Operating and AC Measurement Conditions*. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.

Table 7. Operating and AC Measurement Conditions

Parameter ⁽¹⁾⁽²⁾	1	-	Units	
Parameter (A-7	Min	Тур	Max	Units
Supply Voltage (V _{DD})	1.65	1.8	1.95	V
Input/Output Supply Voltage (V _{DDQ}) ⁽³⁾	1.65	1.8	1.95	V
Junction Temperature (T _J)	-25		90	°C
Load Capacitance (C _L)		30		pF
Output Impedance (Z ₀)		50		Ω
Input Rise/Fall Time (t _R , t _F)		1		ns
Input High Voltage (V _{IH})		1.6		V
Input Low Voltage (V _{IL})		0.2		V
Input and Output Timing Ref. Voltages		V _{DDQ} /2		V
Output Transition Timing Reference Voltages	0.3V _{DDQ}		0.7V _{DDQ}	V

- 1. All voltages are referenced to $V_{SS} = 0V$.
- 2. $T_J = -25 \text{ to } 90^{\circ}\text{C}, f = 1\text{MHz}$
- 3. V_{DDQ} must not exceed the level of V_{DD} .

Figure 3. AC Measurement I/O Waveform

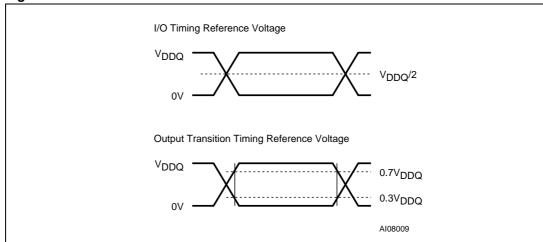

AI08008c

DEVICE UNDER TEST Z₀ O OUT

C_L includes probe capacitance

Table 8. AC Measurement Load Circuit

Table 9. Capacitance⁽¹⁾⁽²⁾

Symbol	Parameter	Pin	M65KA	Unit	
	rarameter	FIII	Min	Max	Offic
C _{I1}		К	2.0	3.5	pF
C _{I2}	Input Capacitance	A0-A11, BA0, BA1, KE, E, RAS, CAS, W, UDQM, LDQM	2.0	3.8	pF
C _{IO}	Data I/O Capacitance	DQ0-DQ15	6.0	7.5	pF

^{1.} $T_J = 25^{\circ}C$, f = 1MHz

Table 10. DC Characteristics 1

Symbol	Parameter	Test Condition ⁽¹⁾	M65K	Unit		
Symbol	Farameter	rest Condition 7	Min	Max		
I _{LI}	Input Leakage Current	0V≤V _{IN} ≤1.8V	-1	1	μA	
I _{LO} ⁽²⁾	Output Leakage Current	0V≤V _{OUT} ⊴.8V	-1.5	1.5	μA	
V _{IL}	Input Low Voltage	$V_{IN} = 0V$	-0.3 ⁽³⁾	0.3	V	
V _{IH}	Input High Voltage	V _{IN} = 0V	0.8V _{DDQ}	V _{DDQ} + 0.3 ⁽⁴⁾	V	
V _{OL}	Output Low Voltage	$I_{OUT} = 100 \mu A, V_{IN} = 0 V$		0.2	V	
V _{OH}	Output High Voltage	$I_{OUT} = -100\mu A, V_{IN} = 0V$	V _{DDQ} – 0.2		V	

^{1.} $T_J = -25 \text{ to } 90^{\circ}\text{C}$.

^{2.} Sampled only, not 100% tested.

^{2.} Data outputs are disabled.

^{3.} V_{IL} may undershoot to -1.0V for less that 5ns.

^{4.} V_{IH} may overshoot to 2.6V for less that 5ns.

Table 11. DC Characteristics 2

Symbol	Parameter	Test Condition ⁽¹⁾	Тур	Unit	
I _{DD1} ⁽²⁾	Operating Current	Burst length = 1, one bank active $t_{RC} \ge t_{RC}(min)$, $I_{OL} = 0mA$	36	mA	
I _{DD2P}		KE ≤V _{IL} (max), t _{CK} = 15ns	0.6		
I _{DD2PS}	Standby Current in Power-Down Mode	$KE \le V_{IL}(max), t_{CK} = \infty$ Input signal stable	0.5	mA	
I _{DD2N}	Standby Current in Non Power-Down	$KE \ge V_{IH}$ (min), $\overline{E} \ge V_{IH}$ (min), t_{CK} = 15ns Input signals are changed once in 30ns	3	mA.	
I _{DD2NS}	Mode	$KE \ge V_{IH}$ (min), $t_{CK} = \infty$ Input signals are stable	1	IIIA	
I _{DD3P}	Active Standby Current in Power-	KE ≤V _{IL} (max), t _{CK} = 15ns	1	mA	
I _{DD3PS}	Down Mode	$KE \le V_{IL}(max), t_{CK} = \infty$	0.8		
I _{DD3N}	Active Standby Current in Non Power-	$KE \ge V_{IH} \text{ (min)}, \ \overline{E} \ge V_{IH} \text{ (min)}, \ t_{CK} = 15 \text{ns}$ ov Current in Non Power-Input signals are changed once in 30ns		mA	
I _{DD3NS}	Down Mode	$KE \ge V_{IH}$ (min), $t_{CK} = \infty$ Input signals are stable	5	1 IIIA	
I _{DD4} ⁽²⁾	Burst Mode Current, CL=2	$t_{CK} \ge t_{CK} \text{ (min)}, I_{OL} = 0\text{mA}$	35	mA	
IDD4` ′	Burst Mode Current, CL=3	All banks active	52	mA	
(3)(4)	Auto Refresh Current, CL=2	4 > 4 (min)	0.5	mA	
I _{DD5} ⁽³⁾⁽⁴⁾	Auto Refresh Current, CL=3	$t_{RC1} \ge t_{RC1}(min)$	65		
I _{DD6}	Self Refresh Current	KE ≤0.2V	See Table 12.	μΑ	
I _{DD7}	Standby Current in Deep Power-down Mode	See Figure 25: Deep Power-Down Entry AC Waveforms, and Figure 26: Deep Power-Down Exit AC Waveforms.	10	μΑ	

^{1.} $T_J = -25 \text{ to } 90^{\circ}\text{C}$.

Table 12. Self Refresh Current (I_{DD6}) Values in Normal Operating Mode⁽¹⁾

Temperature	4 Ba	anks	2 Ba	ınks	1 Bank		Unit
remperature	Тур.	Max.	Тур.	Max.	Тур.	Max.	Oilit
T _J < 40°C		150		130		120	μΑ
40°C < T _J ≤70°C		200		170		150	μA
70°C ≤T _J ≤90°C		600		350		220	μΑ

^{1.} $V_{DD} = 1.8V$, $V_{DDQ} = 1.8V$, $V_{SS} = 0V$, KE $\leq 0.2V$.

I_{DD1} and I_{DD4} depend on the output loading and cycle rates. All measurements are made with the output open and on condition that the addresses are changed only once during t_{CK}(min.).

^{3.} The minimum value of t_{RC} (RAS cycle time for Refresh operation) is shown in *Table 14: Asynchronous AC Characteristics*.

^{4.} I_{DD5} is measured on condition that the addresses are changed only once during t_{CK} (min.).

Table 13. Synchronous AC Characteristics

Symbol	Parameter	Test Condition		Max	Unit
4	Access Time From Clock	CAS Latency = 3		7	ns
t _{AC}	Access Time From Clock	CAS Latency = 2		9	ns
t _{AS}	Address Setup Time		2		ns
t _{AH}	Address Hold Time		1		ns
+	Clock Period	CAS Latency = 3	9.6		ns
t _{CK}	Clock Fellou	CAS Latency = 2	15		ns
t _{CS}	Command Setup Time		2		ns
t _{CH}	Command Hold Time		1		ns
t _{CHW}	Clock High Pulse Width		3		ns
t _{CLW}	Clock Low Pulse Width		3		ns
t _{CKS}	Clock Enable Setup Time		2		ns
t _{CKSP}	Clock Enable Setup Time (Power-Down Exit)		2		ns
t _{CKH}	Clock Enable Hold Time		1		ns
t _{DS}	Data Input Setup Time		2		ns
t _{DH}	Data Input Hold Time		1		ns
t _{OH}	Data Output Hold Time		3		ns
t _{OLZ}	Clock to Data Output Low-Z		0		ns
4	Clock to Data Output High 7	CAS Latency = 3	3	7	ns
t _{OHZ}	Clock to Data Output High-Z	CAS Latency = 2	3	9	ns

Table 14. Asynchronous AC Characteristics

Cumah al	Dorometer		M65KA128AL		- Unit ⁽¹⁾
Symbol	Parameter	Min	Max	Unit	
t _{DPL}	Data Input Valid to Precharge Command		2		t _{CK}
4	Data Input Valid to Bank/Row Activate	CAS Latency = 3	2CLK + 28.5		ns
t _{DAL}	Command	CAS Latency = 2	2CLK + 30		ns
t _{DQZ}	UDQM or LDQM High to Data Output Hi-	Z		2	
t _{DQM}	UDQM or LDQM High to Data Input Masl	ked	0		t _{CK}
t _{MRD}	Mode Register Set Cycle Time		2		t _{CK}
t _{RC}	RAS Cycle Time		86		ns
t _{RCD}	Delay Time, RAS Active to CAS Active		28.5		ns
t _{RAS}	RAS Active Time		57	120,000	ns
t _{RP}	RAS Precharge Time		28.5		ns
t _{RRD}	Delay Time, RAS Active to RAS Bank Active		2		t _{CK}
t _{RC1}	Auto Refresh Exit Time		105		ns
t _{RC2} ⁽²⁾	Self Refresh Exit Time		105		ns
t _{REF}	Refresh Time			64	ms
t_{τ}	Transition Time		1	30	ns
t _{WTL}	Delay Time, Write Command to Data Input		0		t _{CK}

^{1.} The unit $t_{\mbox{\footnotesize CK}}$ is the system Clock cycle time.

^{2.} A new command can be issued $t_{\mbox{\scriptsize RC}}$ after the Self Refresh mode is exited.

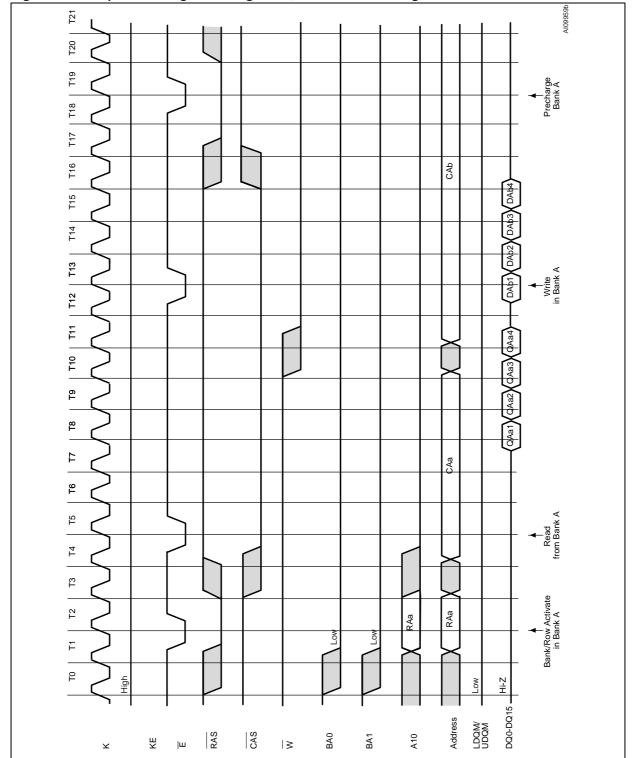


Figure 4. Chip Enable Signal During Read, Write and Precharge

- 1. The Chip Enable signal, \overline{E} , must be issued at a minimum rate with respect to the other signals.
- 2. Burst Length = 4 Words, Latency = 3 clock cycles.
- 3. RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A, QAan= Data n read from Column a in Bank A, DAan= Data n written to Column a in Bank A.

5//


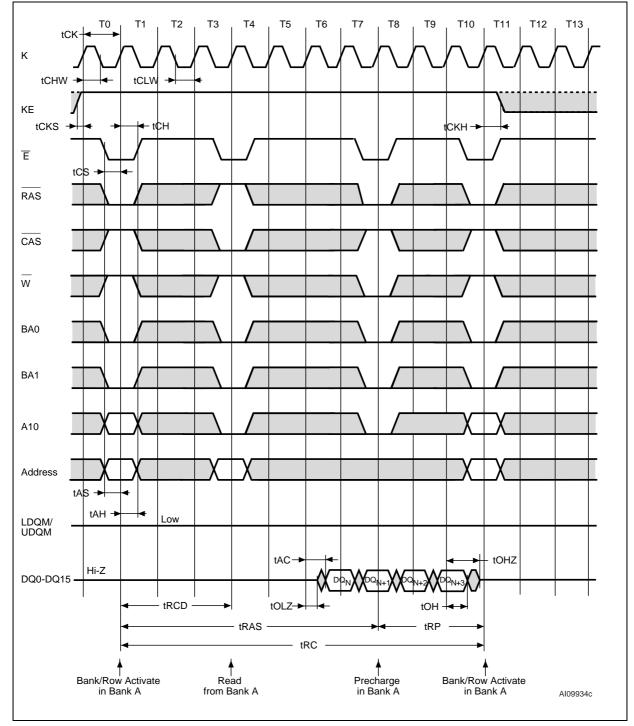


Figure 5. Read with Precharge AC Waveforms

1. Burst Length = 4 Words, Latency = 3 clock cycles.

Figure 6. Read with Auto Precharge AC Waveforms

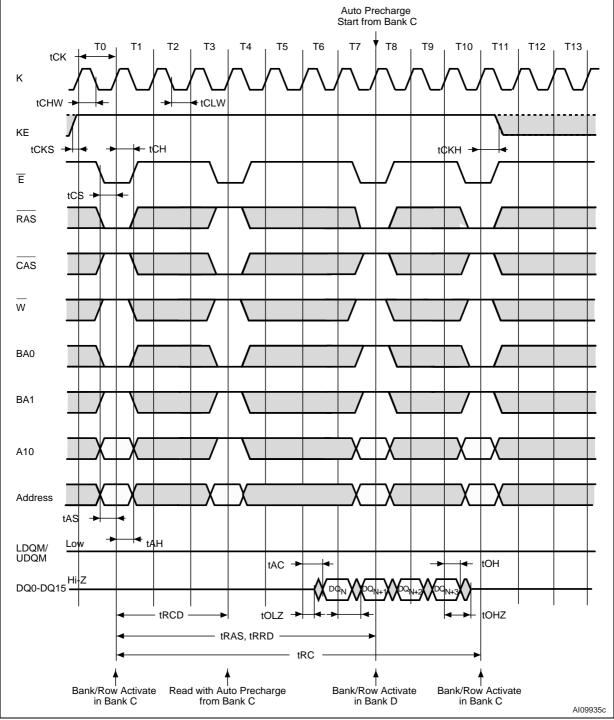

^{1.} Burst Length = 4 Words, Latency = 3 clock cycles.

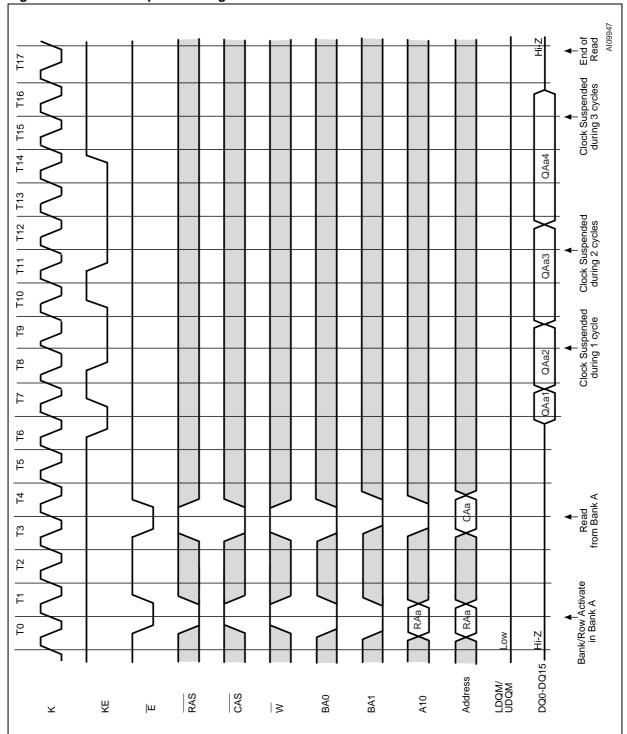


Figure 7. Clock Suspend During Burst Read AC Waveforms

^{1.} Burst Length = 4 Words, Latency = 3 clock cycles.

^{2.} RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A, QAan= Data n read from Column a in Bank A.

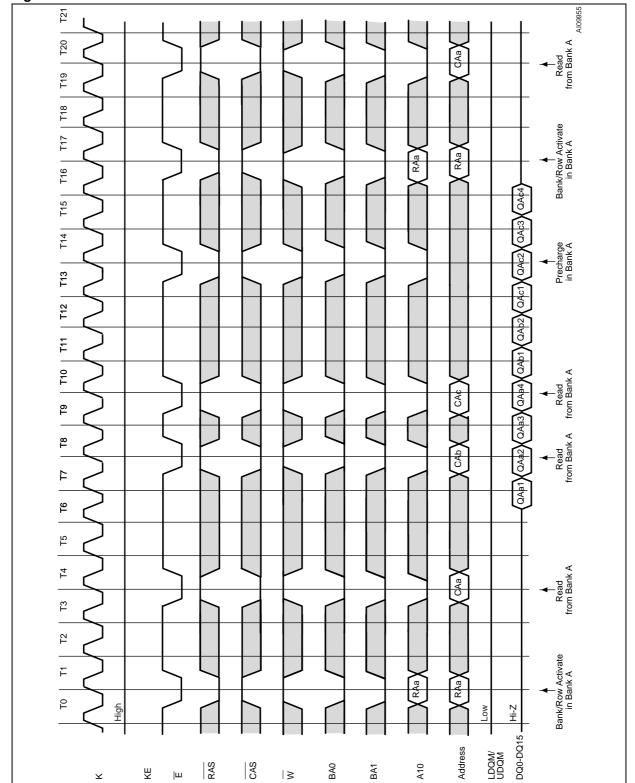


Figure 8. Random Column Read AC Waveforms

- 1. Burst Length = 4 Words, Latency = 3 clock cycles.
- 2. RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A, QAmn= Data n read from Column m in Bank A.

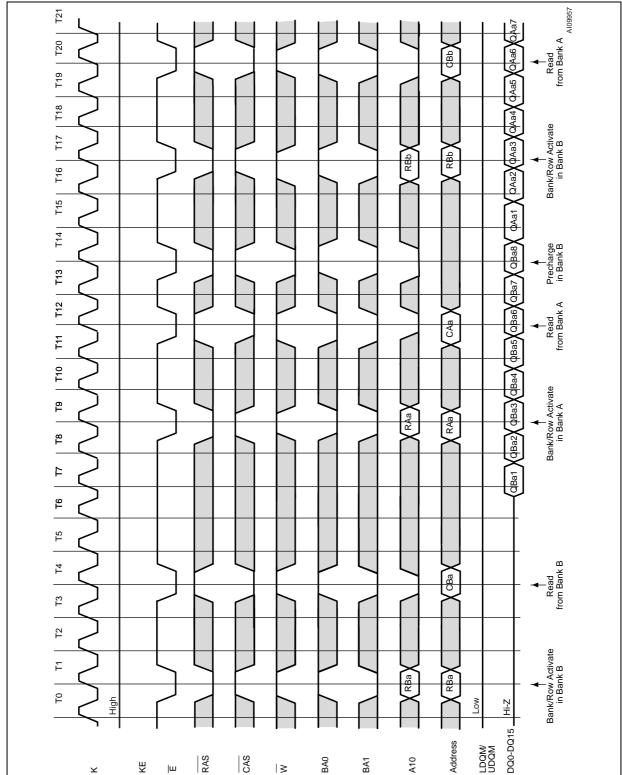


Figure 9. Random Row Read AC Waveforms

- 1. Burst Length = 8 Words, Latency = 3 clock cycles.
- 2. RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A, QAmn= Data n read from row m in Bank A.

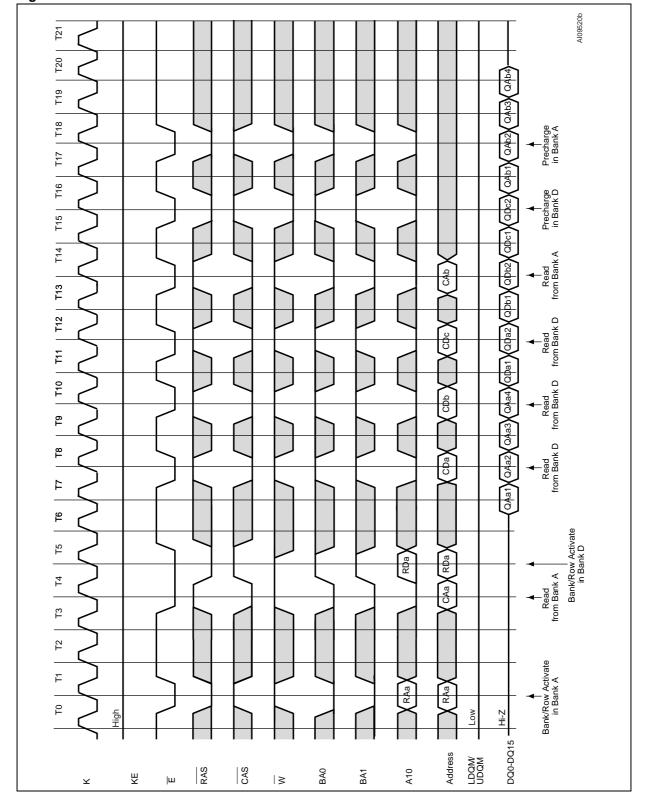


Figure 10. Column Interleaved Read AC Waveforms

^{1.} Burst Length = 4 Words, Latency = 3 clock cycles.

^{2.} RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A, QAmn= Data n read from Column m in Bank A.


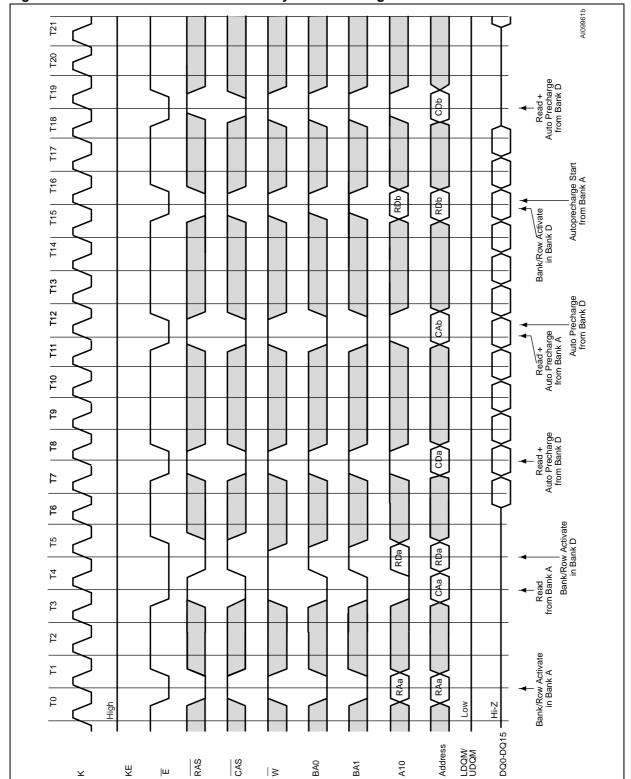


Figure 11. Burst Column Read Followed by Auto Precharge AC Waveforms


- 1. Burst Length = 4 Words, Latency = 3 clock cycles.
- 2. RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A.

Figure 12. Write AC Waveforms

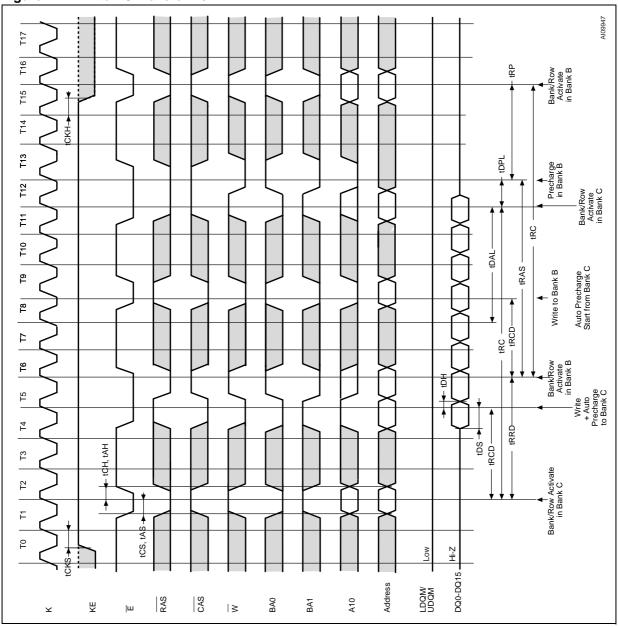

1. Burst Length = 4 Words.

Figure 13. Byte Write AC Waveforms

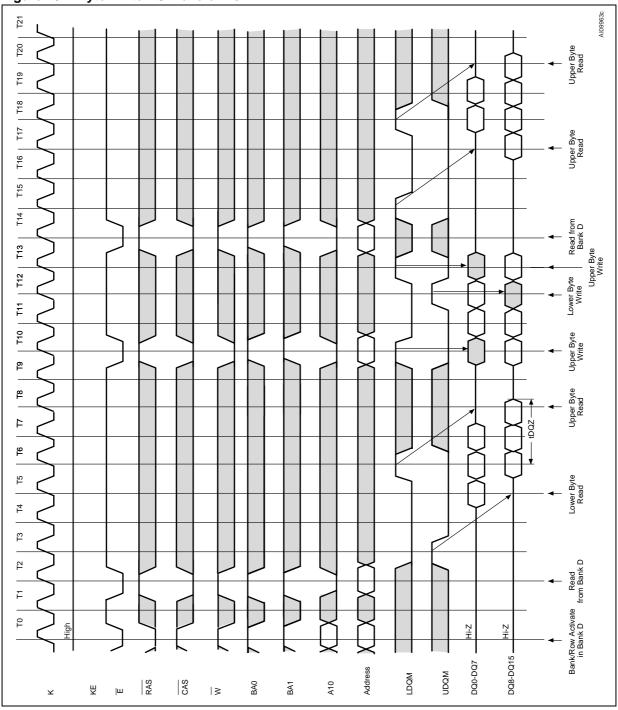

1. Burst Length = 4 Words.

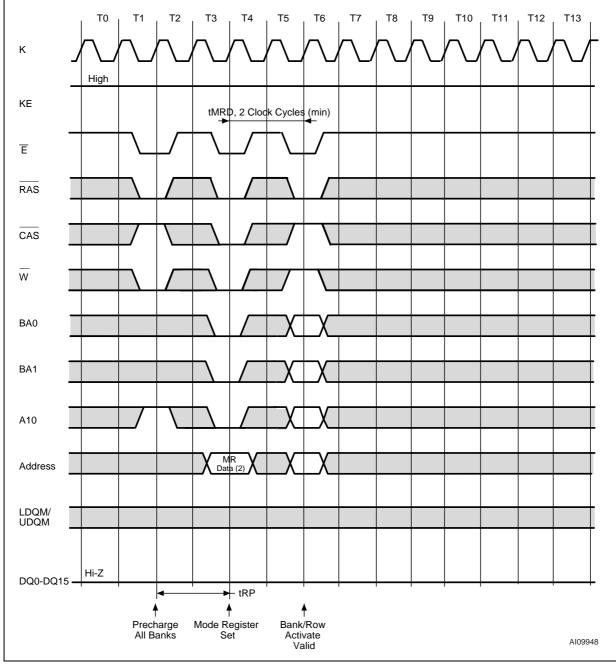


Figure 14. Mode Register Set AC Waveforms

To program the Extended Mode Register, BA0 and BA1 must be set to '0' and '1' respectively, and A0 to A11 to the Extended Mode Register Data.

^{2.} MR Data is the value to be written to the Mode Register.

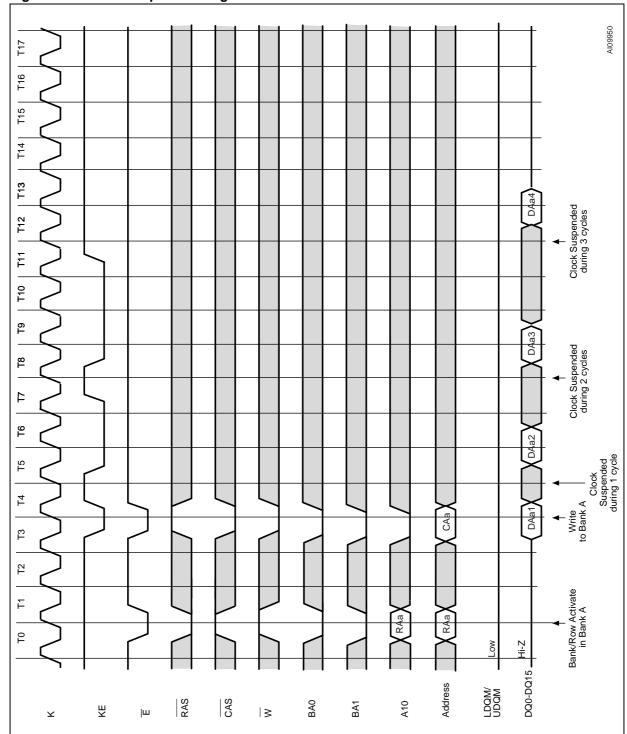


Figure 15. Clock Suspend During Burst Write AC Waveforms

^{1.} RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A, DAan= Data n Written to Column a in Bank A.

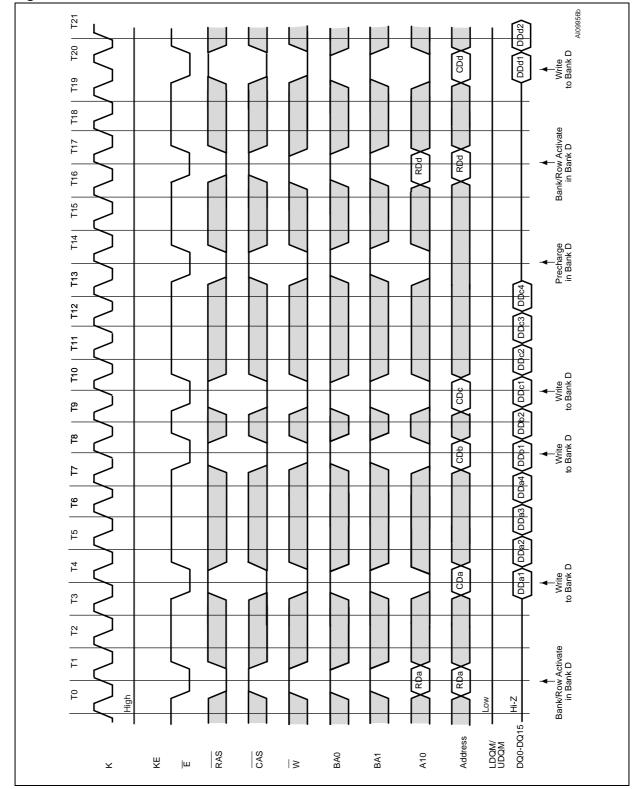


Figure 16. Random Column Write AC Waveforms

- 1. Burst Length = 4 Words.
- 2. RDa = Address of Row a in Bank D, CDa = Address of Column a in Bank D, DDmn= Data n written to Column m in Bank D.

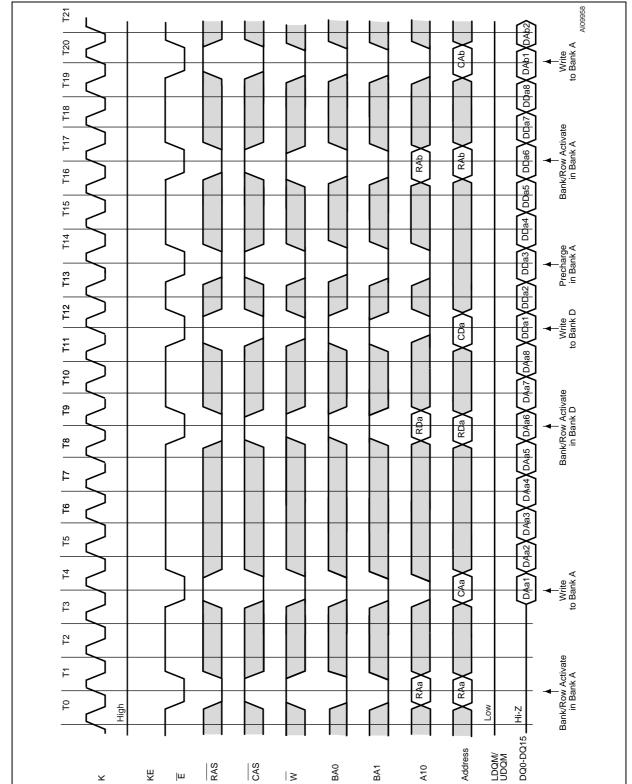


Figure 17. Random Row Write AC Waveforms

- 1. Burst Length = 8 Words.
- 2. RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A, DAmn= Data n written to row m in Bank A.

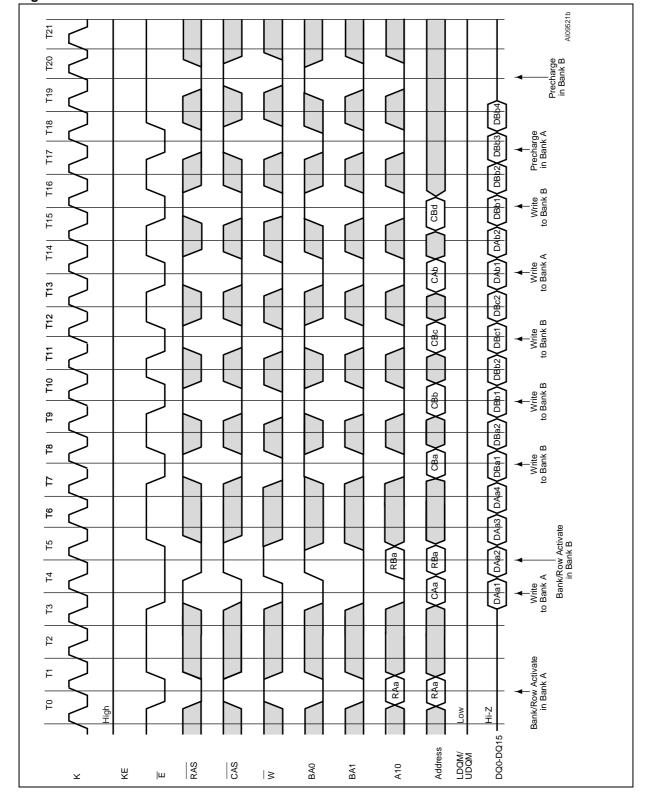


Figure 18. Column Interleaved Write AC Waveforms

- 1. Burst Length = 4 Words.
- 2. RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A, DAmn= Data n written to Column m in Bank A.

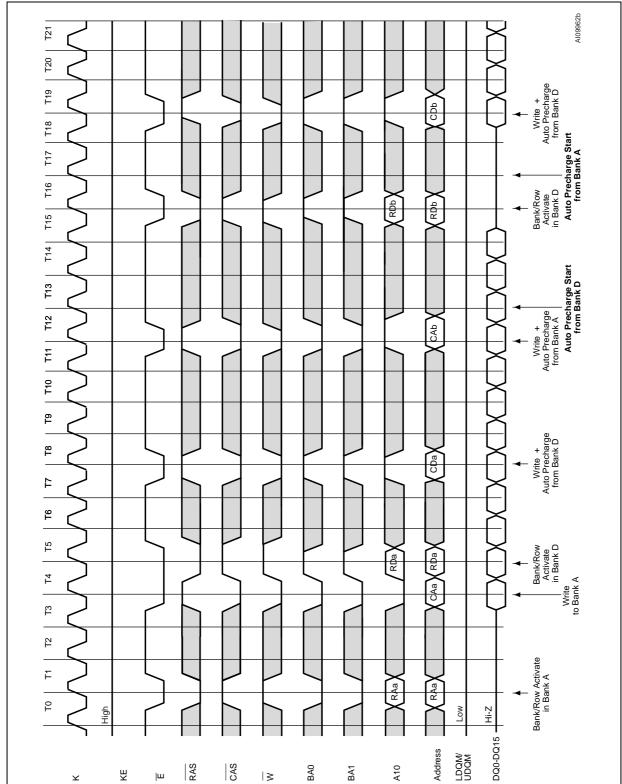



Figure 19. Burst Column Write Followed by Auto Precharge AC Waveforms

47/

^{1.} Burst Length = 4 Words

^{2.} RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A.


Figure 20. Precharge Termination

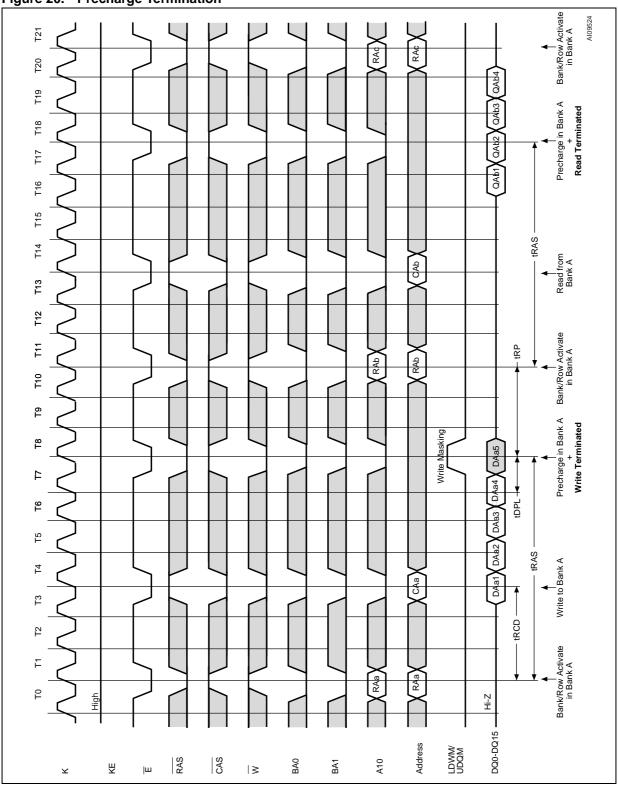

^{1.} Burst Length = 8 Words, Latency = 3 clock cycles.

RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A, QAan= Data n read from Column a in Bank A, DAan= Data n written to Column a in Bank A.

Figure 21. Power-On Sequence

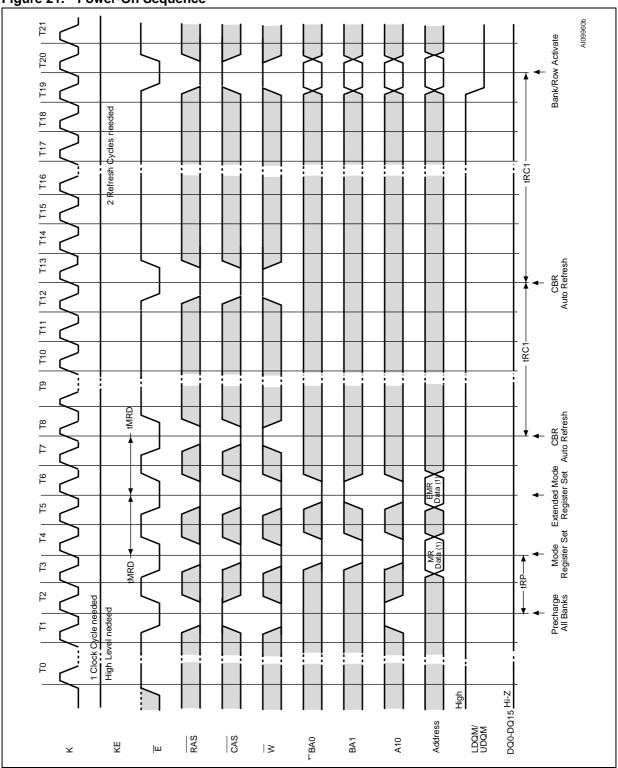

1. MR Data and EMR data are the values to be written to the Mode Register and the Extended Mode Register, respectively.

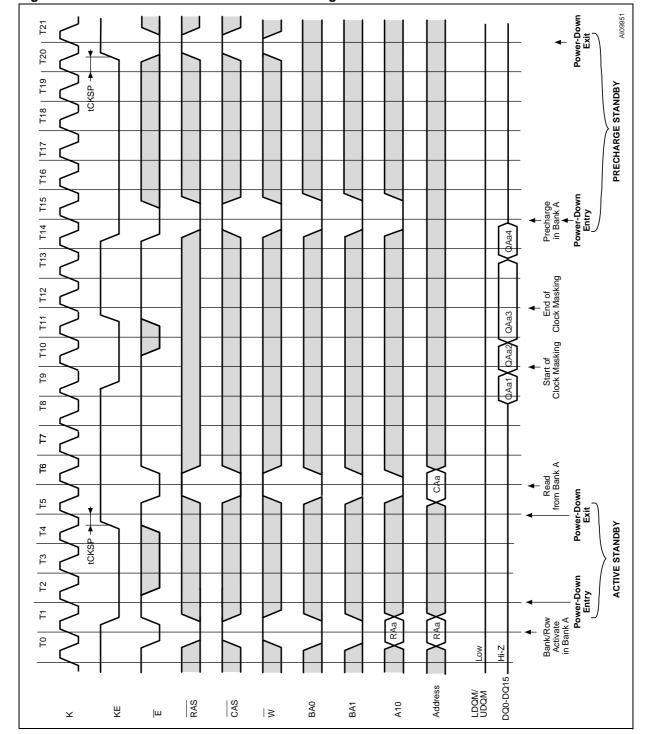


Figure 22. Power-Down Mode and Clock Masking AC Waveforms

^{1.} Burst Length = 4 Words, Latency = 3 clock cycles.

^{2.} RAa = Address of Row a in Bank A, CAa = Address of Column a in Bank A, QAan= Data n read from Column a in Bank A.

Figure 23. Auto Refresh

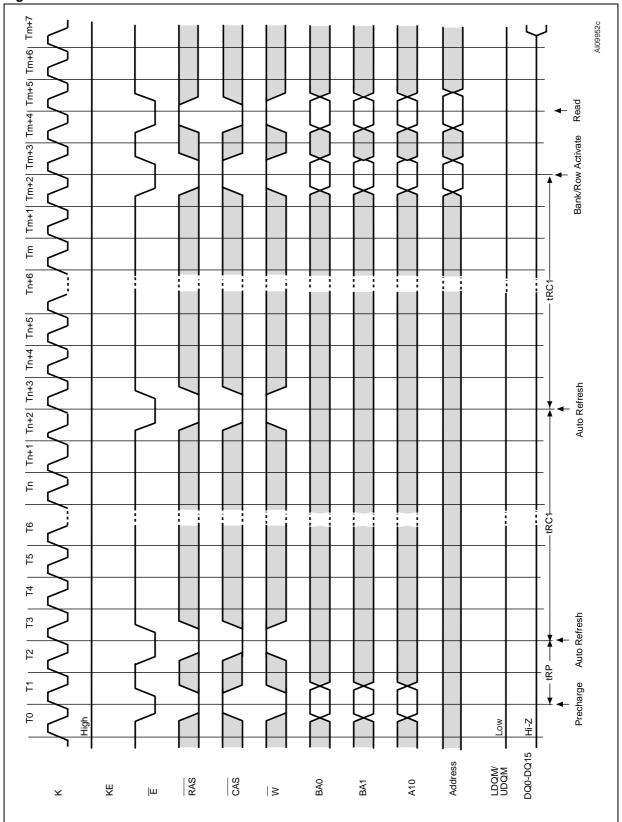
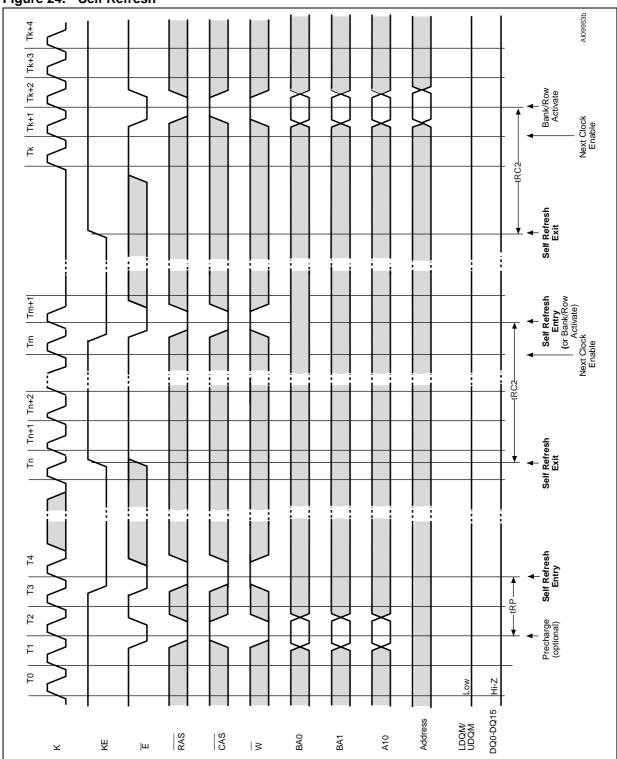


Figure 24. Self Refresh



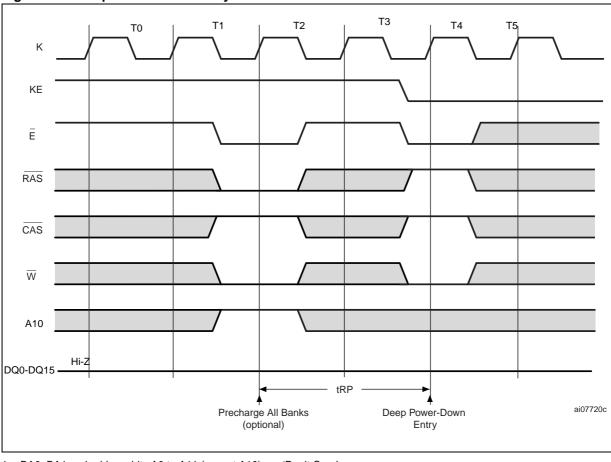


Figure 25. Deep Power-Down Entry AC Waveforms

1. BA0, BA1 and address bits A0 to A11 (except A10) are 'Don't Care'.

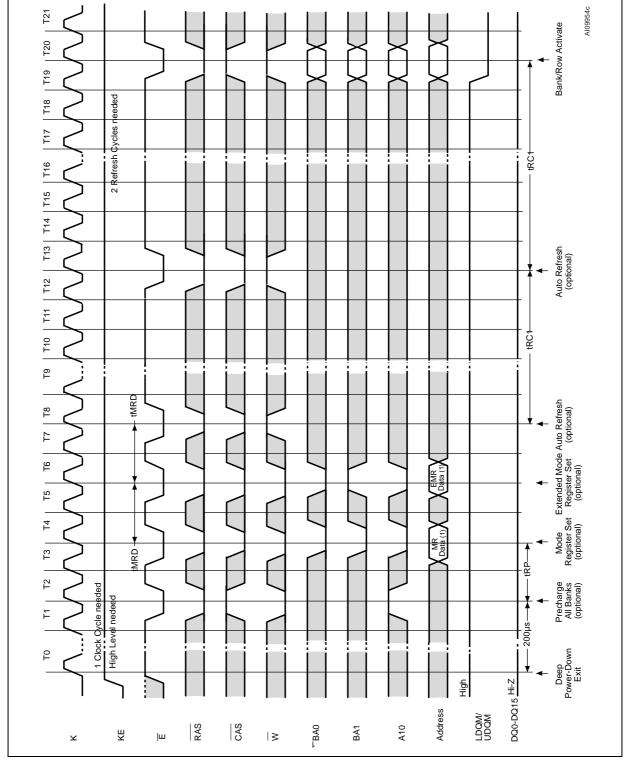



Figure 26. Deep Power-Down Exit AC Waveforms

^{1.} MR Data and EMR data are the values to be written to the Mode Register and the Extended Mode Register, respectively.

M65KA128AL Part numbering

8 Part numbering

Table 15. Ordering Information Scheme

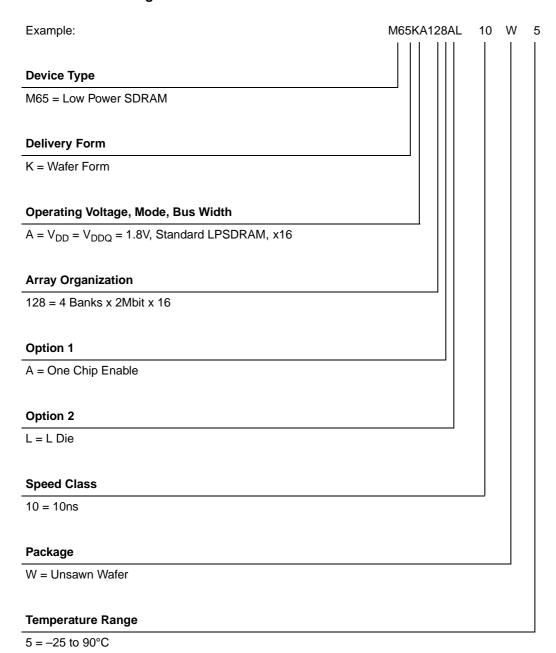

For a list of available options (Speed, Package, etc.) or for further information on any aspect of this device, please contact the ST Sales Office nearest to you.

51/53

Revision history M65KA128AL

9 Revision history

Table 16. Document revision history

Date	Revision	Changes
28-Nov-2005	1	First Issue.
05-Jan-2006	2	Wafer and die specifications section removed.
28-Apr-2006	3	Datasheet status updated to Full Datasheet.

Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WRITING BY AN AUTHORIZE REPRESENTATIVE OF ST, ST PRODUCTS ARE NOT DESIGNED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS, WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2006 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com

