

SPECIFICATION FOR APPROVAL

Preliminary Specification
 Final Specification


Title


Buyer	General
Model	

15.0" XGA TFT LCD

Supplier	LG.Philips LCD Co., Ltd.	
*Model	LM150X06	
Suffix	C3	

*When you obtain standard approval, please use the above model name without suffix

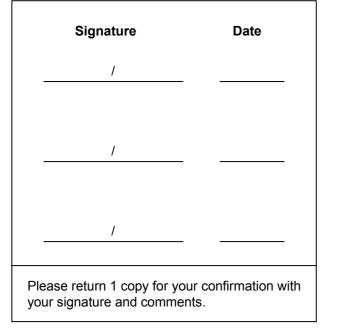

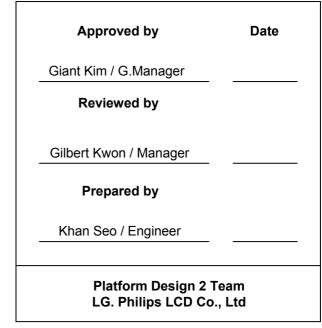



NO.	ITEM	Page
-	COVER	1
-	CONTENTS	2
-	RECORD OF REVISIONS	3
1	GENERAL DESCRIPTION	4
2	ABSOLUTE MAXIMUM RATINGS	5
3	ELECTRICAL SPECIFICATIONS	6
3-1	ELECTRICAL CHARACTREISTICS	6
3-2	INTERFACE CONNECTIONS	8
3-3	SIGNAL TIMING SPECIFICATIONS	11
3-4	SIGNAL TIMING WAVEFORMS	13
3-5	COLOR INPUT DATA REFERENECE	14
3-6	POWER SEQUENCE	15
3-7	POWER DIP CONDITION	16
4	OPTICAL SPECIFICATIONS	17
5	MECHANICAL CHARACTERISTICS	21
6	RELIABILITY	24
7	INTERNATIONAL STANDARDS	25
7-1	SAFETY	25
7-2	EMC	25
8	PACKING	26
8-1	DESIGNATION OF LOT MARK	26
8-2	PACKING FORM	
9	PRECAUTIONS	27



RECORDS OF REVISIONS

Revision No.	Date	Page	DESCRIPTION
1.0	Jan. 28, 2003	-	First Draft




1. General Description

The LM150X06-C3 is a Color Active Matrix Liquid Crystal Display with an integral Cold Cathode Fluorescent Lamp(CCFL) backlight system. The matrix employs a-Si Thin Film Transistor as the active element. It is a transmissive type display operating in the normally white mode. This TFT-LCD has a 15.0 inches diagonally measured active display area with XGA resolution(768 vertical by 1024 horizontal pixel array). Each pixel is divided into Red, Green and Blue sub-pixels or dots which are arranged in vertical stripes. Gray scale or the brightness of the sub-pixel color is determined with a 6-bit gray scale signal for each dot, thus, presenting a palette of more than 262,144 colors.

The LM150X06-C3 has been designed to apply the 2-port TTL (2-pixel 1-clock) interface method.

The LM150X06-C3 LCD is intended to support applications where high brightness, wide viewing angle, high color saturation, and high color depth are very important. In combination with the vertical arrangement of the sub-pixels, the LM150X06-C3 characteristics provide an excellent flat panel display for office automation products such as monitors.

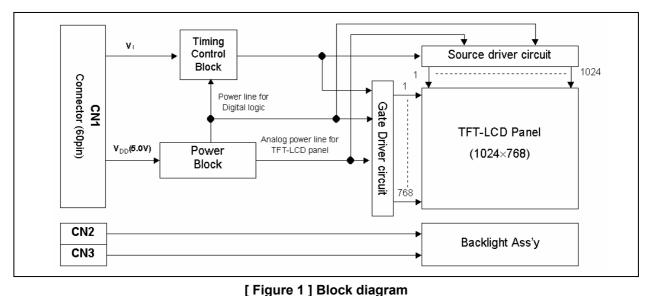

General Features

Ver. 1.0	Jan. 28, 2003	4/28		
Surface treatments	Hard coating(3H) Anti-glare treatment of the front polarizer			
Display operating mode	Transmissive mode, normally white			
Weight	1000 g (Typ.) 1050 g (Max.)			
Power Consumption	10.18 Watt(Typ.) (2.5W logic(Typ.) + 7.68W CCFL(Typ.))			
Luminance, white	250 cd/m ² (Typ.)			
Color depth	6-bit, 262,144 colors			
Pixel format	1024 Horiz. by 768 Vert. Pixels RGB stripes arrangement			
Pixel Pitch	0.297 mm x 0.297mm			
Outline Dimension	331.3(H) × 257.9(V) × 11.0(D) mm (Typ.)			
Active screen size	15.0 inches(304.128 x 228.096) diagonal			

Ver. 1.0




2. Absolute Maximum Ratings

The following are maximum values which, if exceeded, may cause operation or damage to the unit.

Parameter	overbol	Va	lues	Units	Notes
Farameter	symbol	Min.	Max.	Units	Notes
Power Input Voltage	V _{DD}	-0.3	5.5	Vdc	At $25 \pm 5^{\circ}C$
Signal Input Voltage	V	-0.3	3.6	V	
Operating Temperature	T _{OP}	0	50	°C	1
Storage Temperature	T _{ST}	-20	60	°C	1
Operating Ambient Humidity	H _{OP}	10	90	%RH	1
Storage Humidity	H _{ST}	10	90	%RH	1

Table 1.	Absolute	maximum	ratings
----------	----------	---------	---------

Note : 1. Temperature and relative humidity range are shown in the [Figure 2] Wet bulb temperature should be 39 °C Max., and no condensation of water.

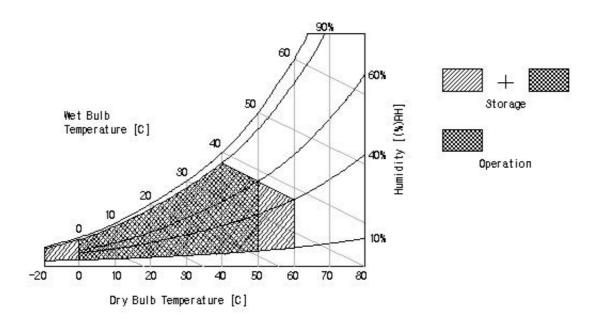

[Figure 2] Temperature and relative humidity



3. Electrical Specifications

3-1. Electrical Characteristics

The LM150X06-C3 requires two power inputs. One is employed to power the LCD electronics and to drive the TFT array and liquid crystal. Another which powers the CCFL, is typically generated by an inverter. The inverter is an external unit to the LCD.

Parameter	Symbol Values			Units	Notes	
Farameter	Symbol	Min.	Тур.	Max.	Units	Notes
MODULE :						
Signal Input Voltage	V	3.0	3.3	3.6	V	
Power Supply Input Voltage	V _{DD}	4.5	5.0	5.5	V	
Permissive power input ripple	V _{RF}	-	-	0.1	V _{PP}	
Power Supply Input Current	I _{DD}	-	0.498	0.573	Â	1
Power Consumption	\bar{P}_{c}	-	2.5	3.1	Watts	
Rush Current	I _{RUSH}		1.0	2.0	A	2
LAMP :						
Operating Voltage	V _{BL}	460	480	620	V _{RMS}	3
Operating Current	I _{BL}	2.5	8.0	9.0	mA	
Established Starting Voltage	V _{BS}					4
at 25 °C	20	-	-	850	V _{RMS}	
at 0 °C		-	-	1100	V _{RMS}	
Operating Frequency	f _{BL}	45	60	80	kHz	5
Discharge Stabilization Time	Ts			3	Minutes	6
Power Consumption	P _{BL}	-	7.68	8.44	Watts	7
Life Time		40,000	-	-	Hrs	8

Table 2. Electrical characteristics	Table 2.	Electrical	characteristics
-------------------------------------	----------	------------	-----------------


Note : 1. The design of the inverter must have specifications for the lamp in LCD Assembly.

The performance of the Lamp in LCM, for example life time or brightness, is extremely influenced by the characteristics of the DC-AC Inverter. So all the parameters of an inverter should be carefully designed so as not to produce too much leakage current from high-voltage output of the inverter. When you design or order the inverter, please make sure unwanted lighting caused by the mismatch of the lamp and the inverter(no lighting,flicker,etc) never occurs.When you confirm it,the LCD Assembly should be operated in the same condition as installed in your instrument.

- Note : 2. Do not attach a conducting tape to lamp connecting wire.. If the lamp wire attach to conducting tape, TFT-LCD Module have a low luminance and the inverter has abnormal action because leakage current occurs between lamp wire and conducting tape.
 - The specified current and power consumption are under the V_{DD}=5.0V, 25°C, f_V(frame frequency) =60Hz condition whereas mosaic(black & white) pattern shown in the [Figure 3] is displayed.
 - 2. The duration of rush current is about 25ms.
 - 3. Operating voltage is measured under 25 $^\circ\!C$. The variance of the voltage is \pm 10%.
 - The voltage above V_{BS} should be applied to the lamps for more than 1second for start-up and starting voltage in inverter must be over max. value of lamp V_{BS}.
 Otherwise, the lamps may not be turned on.




- 5. The output of the inverter must have symmetrical(negative and positive) voltage waveform and symmetrical current waveform.(Unsymmetrical ratio is less than 10%) Please do not use the inverter which has unsymmetrical voltage and unsymmetrical current and spike wave. Lamp frequency may produce interference with horizontal synchronous frequency and as a result this may cause beat on the display.Therefore lamp frequency shall be as away as possible from the horizontal synchronous frequence.
- Let's define the brightness of the lamp after being lighted for 5 minutes as 100%.
 T_s is the time required for the brightness of the center of the lamp to be not less than 95%. The used lamp current is the lamp typical current.
- 7. The lamp power consumption shown above does not include loss of external inverter under 25 °C. The used lamp current is the lamp typical current.
- 8. The life time is determined as the time at which brightness of lamp is 50% compared to that of initial value at the typical lamp current on condition of continuous operating at 25 \pm 2°C.
- 9. Requirements for a system inverter design, which is intended to have a better display performance, a better power efficiency and a more reliable lamp.
 - It shall help increase the lamp lifetime and reduce its leakage current.
 - a. The unbalance rate of the inverter waveform should be 10% below;
 - b. The distortion rate of the waveform should be within $\sqrt{2}$ $\pm10\%;$
 - c. The ideal sine wave form shall be symmetric in positive and negative polarities.

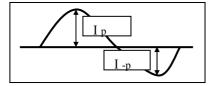

* Asymmetry rate = I _p – I _{–p} / I _{rms} * 100%
* Distortion rate = I_p (or I_{-p}) / I_{rms}

- 10. Inverter output voltage must be more than lamp starting voltage.
- 11. The inverter which is combined with this LCM, is highly recommended to connect coupling(ballast) condenser at the high voltage output side. When you use the inverter which has not coupling(ballast) condenser, it may cause abnormal lamp lighting because of biased mercury as time goes.

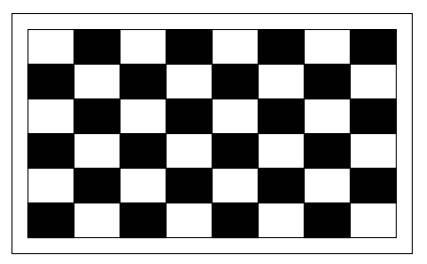

[Figure 3] Mosaic pattern for power consumption measurement



3-2. Interface Connections

This LCM has three interface connections, a 60 pin connector is used for the module electronics and, two three pin connectors are used for the integral back light system.

The interface pin configuration for the connector is shown in the table below.

LCD Connector : FX8-60S-SV(Hirose Electric Co.,Ltd.)

Mating Connector : FX8-60P-SV or FX8-60P-SV-1(Hirose Electric Co.,Ltd.)


Table 3. Module connector pin's configuration	
-	

Pin	Symbol	Description	Notes
	Cynisor	Description	10103
1	GND	GND	
2	RB0	RED even data signal(LSB)	Even data means
3	RB1	RED even data signal	second pixel data
4	RB2	RED even data signal	
5	RB3	RED even data signal	
6	RB4	RED even data signal	
7	RB5	RED even data signal(MSB)	
8	GND	GND	
9	GB0	GREEN even data signal(LSB)	
10	GB1	GREEN even data signal	
11	GB2	GREEN even data signal	
12	GB3	GREEN even data signal	
13	GB4	GREEN even data signal	
14	GB5	GREEN even data signal(MSB)	
15	GND	GND	
16	BB0	BLUE even data signal(LSB)	
17	BB1	BLUE even data signal	
18	BB2	BLUE even data signal	
19	BB3	BLUE even data signal	
20	BB4	BLUE even data signal	
21	BB5	BLUE even data signal(MSB)	
22	GND	GND	
23	RA0	RED odd data signal(LSB)	Odd data means
24	RA1	RED odd data signal	first pixel data
25	RA2	RED odd data signal	
26	RA3	RED odd data signal	
27	RA4	RED odd data signal	
28	RA5	RED odd data signal(MSB)	
29	GND	GND	
30	GA0	GREEN odd data signal(LSB)	



Pin	Symbol	Description	Notes
31	GA1	GREEN odd data signal	
32	GA2	GREEN odd data signal	
33	GA3	GREEN odd data signal	
34	GA4	GREEN odd data signal	
35	GA5	GREEN odd data signal(MSB)	
36	GND	GND	
37	BA0	BLUE odd data signal(LSB)	
38	BA1	BLUE odd data signal	
39	BA2	BLUE odd data signal	
40	BA3	BLUE odd data signal	
41	BA4	BLUE odd data signal	
42	BA5	BLUE odd data signal(MSB)	
43	GND	GND	
44	GND	GND	
45	GND	GND	
46	Vsync.	Vertical synchronous signal	
47	Hsync.	Horizontal synchronous signal	
48	ENAB.	Data enable signal(signal to settle the display position)	
49	GND	GND	
50	GND	GND	
51	СКВ	Clock B signal for sampling even data signal	
52	СКА	Clock A signal for sampling odd data signal	
53	GND	GND	
54	GND	GND	
55	GND	GND	
56	MODE	Timing signal select	1
57	Vcc	+5V power supply	
58	Vcc	+5V power supply	
59	Vcc	+5V power supply	
60	Vcc	+5V power supply	

Notes : 1. Mode is set "Low" in LCD module, if this pin is "OPEN" or "Low" then data latch is at falling edge trigger, "High" then rising edge trigger. Mode signal circuit in LCD module is shown in the [Figure 4].

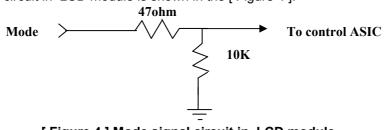

[Figure 4] Mode signal circuit in LCD module



LM150X06-C3 Liquid Crystal Display


Product Specification

Note 2. Correspondence between input data and screen image. Display data of 2-pixel are latched by 1-cycle of DCLK.

	 (1,1) 	(2,1)			(2,1) Odd data refers to first pixel data. Even data refers to second pixel data.						
RO	GO	B0	RE	GE	BE		2.01. 44				
		_	•				Pixel as	signment of LCD active area			
	(1,1		2,1		3,1		1024,1		
			1,2		2,2		3,2		1024,2		
			1,3		2,3		3,3		1024,3		
			1,768		2,76	8	3,768		1024,768		

[Figure 5] Pixel assignment

- Note : 3. All GND(ground) pins should be connected together and to Vss which should also be connected to the LCD's metal frame.
- Note : 4. All VoD (power input) pins should be connected together.

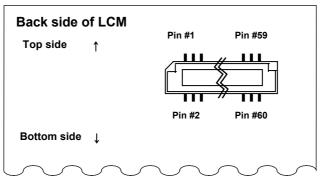

[Figure 6] User connector view




The backlight interface connector is a model BHR-03VS-1, manufactured by JST. The mating connector part number is SM02(8.0)B-BHS-1-TB or equivalent.

The pin configuration for the connector is shown in the table below.

Pin	Symbol	Description	Notes
1	HV	Power supply for lamp (High voltage side)	1
2	NC	No Connect	
3	LV	Power supply for lamp (Low voltage side)	

Table 4. Backlight connector pin's configuration

Notes : 1. The high voltage side terminal is colored pink.

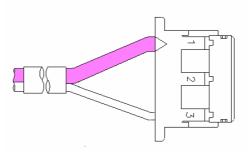

[Figure 7] Backlight connector view



3-3. Signal Timing Specifications

This is the signal timing required at the input of the user connector. All of the interface signal timing should be satisfied with the following specifications for it's proper operation.

Item		Symbol	Min.	Тур.	Max.	Unit	Notes
Dclk		t _{CLK}	25	30.8	40	ns	
Doint	Frequency		25	32.5	40	MHz	Note 2
Hsync.	Period	t _{HP}	604	672	680	t _{cLK}	
	Width	t _{wH}	12	68	120	CLK	
Vsync.	Period	t _{VP}	780	806	830	t _{HP}	
v Syric.	Frequency	f_V	50	60	75	Hz	Note 2
	Width	t _{wv}	1	6	24	t _{HP}	
	Horizontal Valid	t _{HV}	512	512	512		Note 1
	Horizontal Back Porch	t _{HBP}	24	80	-	t _{CLK}	
DE	Horizontal Front Porch	t _{HFP}	12	12	-	OLK	
(Data Enable)	Horizontal Blank	-	48	160	t _{HP} - t _{HV}		t_{WH} + t_{HBP} + t_{HFP}
	Vertical Valid	t _{vv}	768	768	768		
	Vertical Back Porch	t _{VBP}	2	29	-	t _{HP}	
	Vertical Front Porch	t _{VFP}	1	3	-	٩P	
	Vertical Blank	-	4	38	t _{vP} - t _{vv}		t_{WV} + t_{VBP} + t_{VFP}
	Set up time	t _{sı}	3	-	-		
	Hold time		3	-	-	ns	For Dclk
Data	Set up time	t _{SD}	3	-	-		
	Hold time	t _{HD}	3	-	-		

Table 5. Timing table

Note 1: No variation of Hsync.(or DE) input is required for normal operation.


Note 2: There may be a little flicker around Dclk Min. 25MHz and Vsync. Min. 50Hz.

But there is no timing distortion at Dclk Min. 25MHz and Vsync. Min. 50Hz.

Jan. 28, 2003



3-4. Signal Timing Waveforms

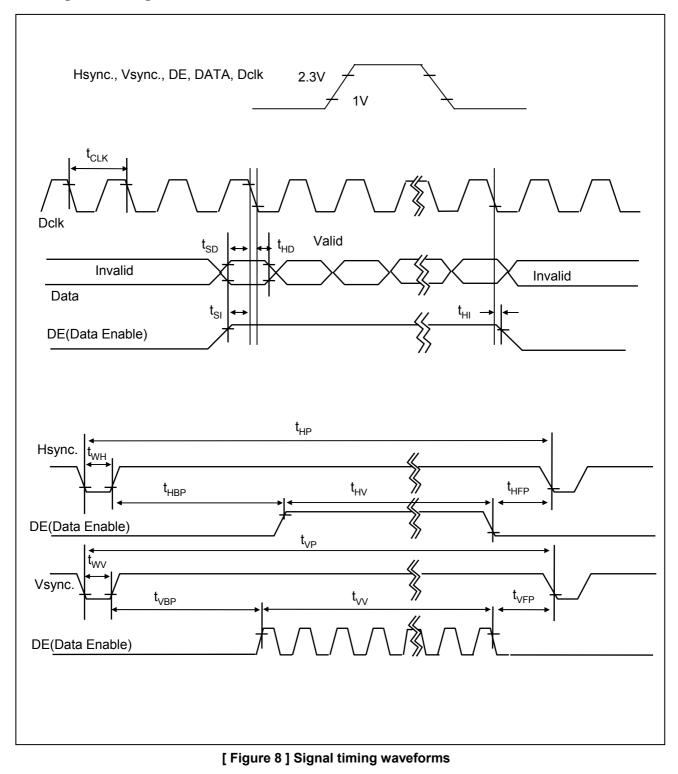

Ver. 1.0

Jan. 28, 2003

13/28



3-5. Color Input Data Reference

The brightness of each primary color(red,green and blue) is based on the 6-bit gray scale data input for the color; the higher the binary input, the brighter the color. The table below provides a reference for color versus data input.


									Inpu	ut Co	olor D	Data							
	Color		Red MSB I				LSB	Green MSB LSB				LSB	Blue MSB LSB						
		RO5 RE5	RO4 RE4	RO3 RE3	RO2 RE2	RO1 RE1	RO0	GO5 GE5		GO3 GE3	GO2 GE2	GO1 GE1	GO0 GE0	BO5 BE5	BO4 BE4	BO3 BE3	-	BO1 BE1	BO0 BE0
Basic Colors	Black Red(63) Green(63) Blue(63) Cyan Magenta Yellow White	0 1 0 0 1 1 1	0 1 0 0 1 1	0 1 0 0 1 1 1	0 1 0 0 1 1 1	0 1 0 0 1 1 1	0 1 0 0 1 1 1	0 0 1 0 1 0 1	0 0 1 0 1 0 1	0 0 1 0 1 0 1 1	0 0 1 0 1 0 1	0 0 1 0 1 0 1	0 0 1 0 1 0 1	0 0 1 1 1 0 1	0 0 1 1 1 0	0 0 1 1 1 0	0 0 1 1 1 0 1	0 0 1 1 1 0	0 0 1 1 1 0 1
Red	Red(00) Dark Red(01) Red(02) : Red(61) Red(62) Red(63) Bright	0 0 : 1 1 1	0 0 : 1 1 1	0 0 : 1 1 1	0 0 : 1 1 1	0 0 1 : 0 1	0 1 0 : 1 0 1	0 0 : 0 0 0 0	0 0 : 0 0 0 0	0 0 : 0 0 0 0	0 0 : 0 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0 0	0 0 0 : 0 0 0	0 0 : 0 0 0 0	0 0 0 : 0 0 0	0 0 : 0 0 0 0
Green	Green(00)Dark Green(01) Green(02) : Green(61) Green(62) Green(63)Bright	0 0 : 0 0 0	0 0 : 0 0 0	0 0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 1 1 1	0 0 : 1 1	0 0 : 1 1 1	0 0 : 1 1	0 0 1 : 0 1	0 1 0 : 1 0 1	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0 0
Blue	Blue(00) Dark Blue(01) Blue(02) : Blue(61) Blue(62) Blue(63) Bright	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 0 0 0	0 0 : 1 1	0 0 1 1	0 0 1 1	0 0 : 1 1	0 0 1 : 0 1	0 1 0 : 1 0 1

Table 6.	Color	data	reference
----------	-------	------	-----------

Ver. 1.0



3-6. Power Sequence

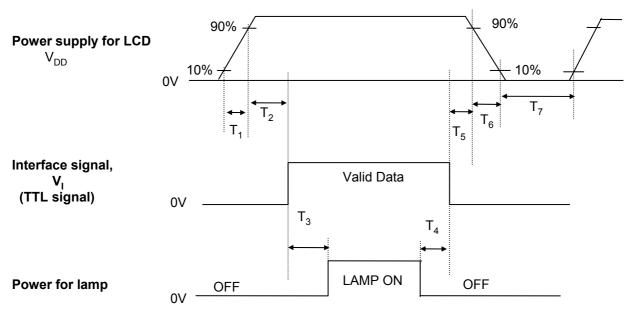

[Figure 9] Power sequence

Deverseder		Units			
Parameter	Min. Typ.		Max.	Units	
T₁	-	-	10	ms	
T_2	0	-	50	ms	
T_3^{-}	200	-	-	ms	
T_4	200	-	-	ms	
T ₅	0	-	50	ms	
T_6	-	-	10	ms	
T ₇	500	-	-	ms	


Table 7. Power sequence time delay

Notes : 1. Please avoid floating state of interface signal at invalid period.

2. When the interface signal is invalid, be sure to pull down the power supply for LCD V_{DD} to 0V. 3. Lamp power must be turn on after power supply for LCD and interface signal are valid.



3-7. V_{DD} Power Dip Condition

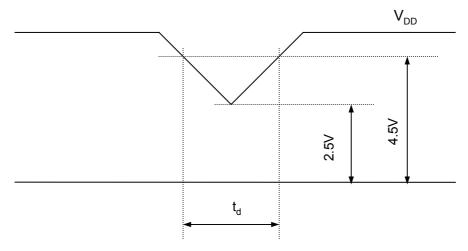

[Figure 10] Power dip condition

1) Dip condition

$$2.5V \le V_{DD} < 4.5V$$
 , $t_d \le 20ms$


 $V_{\mbox{\scriptsize DD}}\mbox{-dip}$ conditions should also follow the power on/off conditions for supply voltage.



4. Optical Specification

Optical characteristics are determined after the unit has been 'ON' and stable for approximately 30 minutes in a dark environment at 25 °C. The values specified are at an approximate distance 50cm from the LCD surface at a viewing angle of Φ and θ equal to 0 °.

[Figure 11] presents additional information concerning the measurement equipment and method.

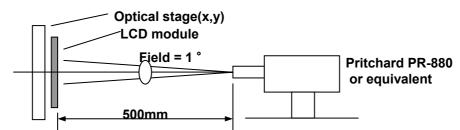

[Figure 11] Optical characteristic measurement equipment and method

al characteristics	Table 8. Optica
al characteristics	Table 8. Optica

(Ta=25 °C, V_{DD} =5.0V, f_V =60Hz Dclk=32.5MHz, I_{BL} =8mA)

Parameter	Symbol	Values			Units	Notes
Parameter	Symbol	Min.	Тур.	Max.	Units	Notes
Contrast Ratio	CR	300	400	-		1
Surface Luminance, white	L _{WH}	200	250	-	cd/m ²	2
Luminance Variation	δ_{WHITE}	-	1.25	1.40		3
Response Time Rise Time Decay Time	Tr Tr _R Tr _D	-	25 7.5 17.5	30 10 20	ms	4
CIE Color Coordinates Red Green Blue White	XR YR XG YB YB XW YW	0.596 0.317 0.278 0.558 0.116 0.089 0.283 0.299	0.626 0.347 0.308 0.588 0.146 0.119 0.313 0.329	0.656 0.377 0.338 0.618 0.176 0.149 0.343 0.359		
Viewing Angle					degree	5
by CR ≥ 5 x axis, right (Φ=0°) x axis, left(Φ=180°) y axis, up(Φ=90°) y axis, down (Φ=270°)	θr θl θu θd	70 70 50 50	80 80 60 60	- - - -		
by CR ≥ 10 x axis, right(φ=0°) x axis, left (φ=180°) y axis, up (φ=90°) y axis, down (φ=270°)	θr θl θu θd	55 55 40 40	60 60 45 55	- - - - -		
Gray Scale		-	2.2	-		6
Flicker		-	-	-18	dB	7
Ver. 1.0		Jan. 28, 20	003			17/28



Notes: 1. Contrast Ratio(CR) is defined mathematically as :

Surface Luminance with all white pixels

Contrast Ratio =

Surface Luminance with all black pixels

- Surface luminance is the center point across the LCD surface 50cm from the surface with all pixels displaying white. For more information see [Figure 12]. When I_{BI} =8mA, L_{WH}=200cd/m²(Min.) 250cd/m²(Typ.)
- 3. The variation in surface luminance , δ WHITE is determined by measuring L_{ON} at each test position 1 through 9, and then dividing the maximum L_{ON} of 9 points luminance by minimum L_{ON} of 9 points luminance. For more information see [Figure 12].
- δ WHITE = Maximum(L_{ON1},L_{ON2},, L_{ON9}) ÷ Minimum(L_{ON1},L_{ON2},, L_{ON9}) 4. Response time is the time required for the display to transition from to black(Rise Time, Tr_R) and from black to white(Decay Time, Tr_D). For additional information see [Figure 13].
- 5. Viewing angle is the angle at which the contrast ratio is greater than 10. The angles are determined for the horizontal or x axis and the vertical or y axis with respect to the z axis which is normal to the LCD surface. For more information see [Figure 14].
- 6. Gray scale specification

Table 9. Gray scale								
Gray level	Luminance(%) (Typ.)							
LO	0.22							
L7	0.81							
L15	4.29							
L23	11.4							
L31	22.1							
L39	36.4							
L47	55.4							
L55	78.0							
L63	100							

Table 9. Gray scale

7. Flicker is measured at cyan dot pattern of foreground RGB(0,0,0) and background RGB(0,31,31).




384

(pixel)

Product Specification

[Figure 12] Luminance measuring point


<measuring point for luminance variation>

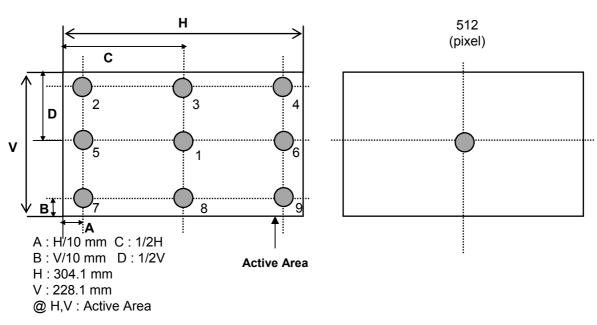

<measuring point for surface luminance>

[Figure 13] Response time


The response time is defined as the following figure and shall be measured by switching the input signal for "black" and "white".

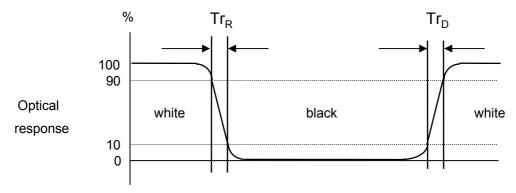



[Figure 14] Viewing angle

<Dimension of viewing angle range>

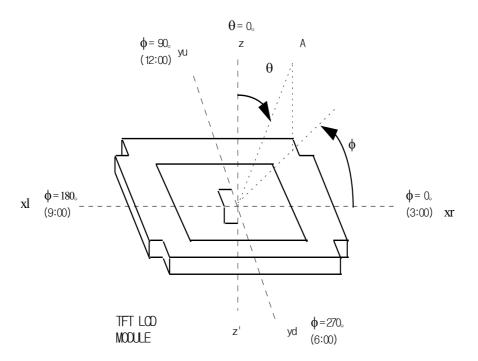




5. Mechanical Characteristics

The contents provide general mechanical characteristics for the model LM150X06-C3. In addition, the figures in the next page are detailed mechanical drawing of the LCD.

	Horizontal	331.3 ± 0.5 mm					
Outside dimensions	Vertical	$257.9\pm0.5~\text{mm}$					
	Depth	11.0 ± 0.5 mm					
Bezel area	Horizontal	307.4 ± 0.5 mm					
Dezel alea	Vertical	$231.3\pm0.5~\text{mm}$					
Active display area	Horizontal	304.128 mm					
Active display area	Vertical	228.096 mm					
Weight	1000 g(Typ.) 1050 g(Max.)						
Surface Treatment	Hard coating 3H. Anti-glare, LR coating treatment of the front polarizer.						



[Figure 15]LM150X06-C3 Front View

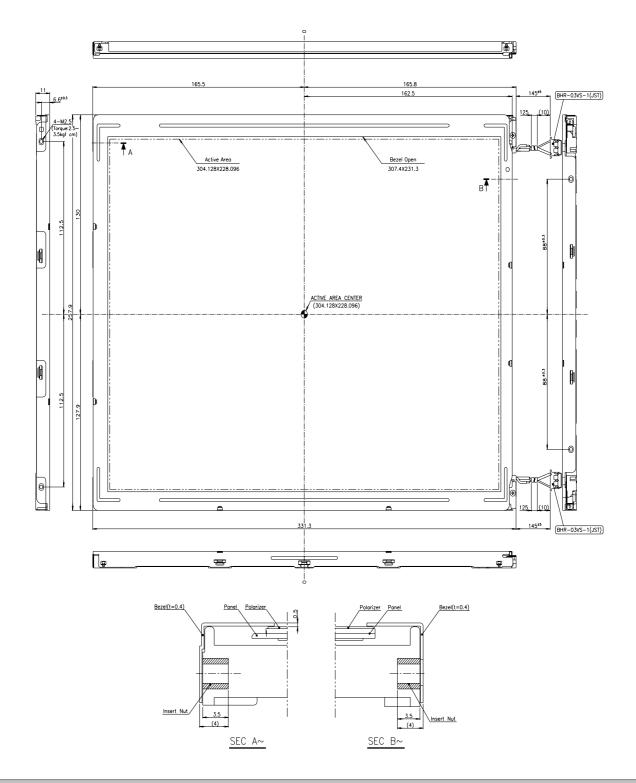


Jan. 28, 2003



LM150X06-C3 Liquid Crystal Display

Product Specification

[Figure 16] LM150X06-C3 Rear View

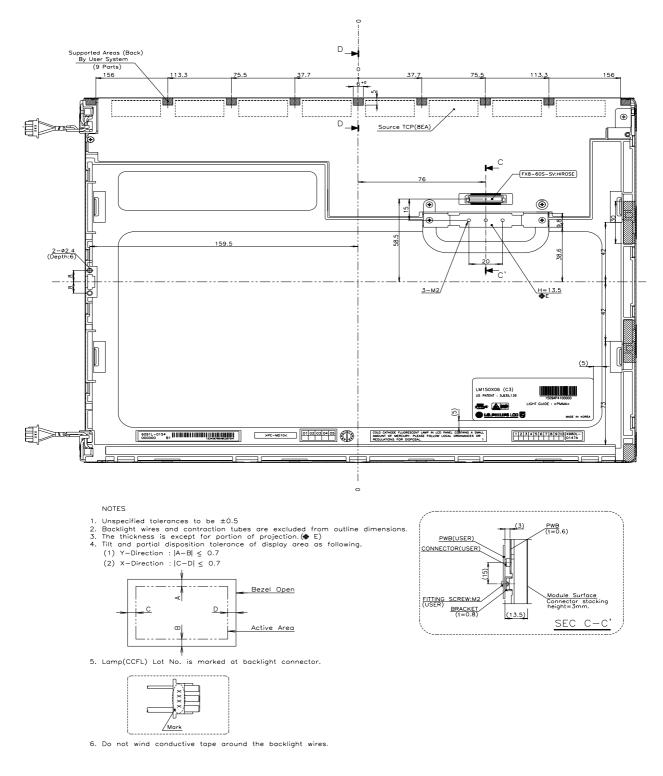



6. Reliability

No.	Test Item	Conditions					
1	High temperature storage test	Ta= 60°C 240h					
2	Low temperature storage test	Ta= -20°C 240h					
3	High temperature operation test	Ta= 50°C 50%RH 240h					
4	Low temperature operation test	Ta= 0°C 240h					
5	Humidity Condition operation	10%RH ~ 90%RH					
6	Humidity Condition storage	10%RH ~ 90%RH					
7	Vibration test (non-operating)	Wave form : random Vibration level : 1.0G RMS Bandwidth : 10-500Hz Duration : X,Y,Z, 20 min. One time each direction					
8	Shock test (non-operating)	$\begin{array}{llllllllllllllllllllllllllllllllllll$					
9	Altitude storage / shipment	0 - 40,000 feet(12,192m)					

Table 11. Environment test condition

{ Result evaluation criteria }

There should be no change which might affect the practical display function when the display quality test is conducted under normal operating condition.



7. International Standards

7-1. Safety

- a) UL 1950 Third Edition, Underwriters Laboratories, Inc. Jan. 28, 1995.
- Standard for Safety of Information Technology Equipment Including Electrical Business Equipment. b) CAN/CSA C22.2 No. 950-95 Third Edition, Canadian Standards Association, Jan. 28, 1995.
- Standard for Safety of Information Technology Equipment Including Electrical Business Equipment. c) EN 60950 : 1992+A1: 1993+A2: 1993+A3: 1995+A4: 1997+A11: 1997
- IEC 950 : 1991+A1: 1992+A2: 1993+A3: 1995+A4: 1996 European Committee for Electrotechnical Standardization(CENELEC) EUROPEAN STANDARD for Safety of Information Technology Equipment Including Electrical Business Equipment.

7-2. EMC

- a) ANSI C63.4 "Methods of Measurement of Radio-Noise Emissions from Low-Voltage Electrical and Electrical Equipment in the Range of 9kHZ to 40GHz. "American National Standards Institute(ANSI), 1992
- b) C.I.S.P.R "Limits and Methods of Measurement of Radio Interface Characteristics of Information Technology Equipment." International Special Committee on Radio Interference
- c) EN 55022 "Limits and Methods of Measurement of Radio Interface Characteristics of Information Technology Equipment." European Committee for Electrotechnical Standardization (CENELEC), 1998



8. Packing

8-1. Designation of Lot Mark

a) Lot Mark



A,B,C : SIZE D : YEAR E : MONTH F,G : PANEL CODE H : ASSEMBLY CODE

I,J,K,L,M : SERIAL NO.

Note:

1. YEAR

YEAR	97	98	99	2000	2001	2002	2003	2004	2005	2006	2007
Mark	7	8	9	0	1	2	3	4	5	6	7

2. MONTH

MONTH	Jan.	Feb.	Mar.	Apr.	May.	Jun.	Jul.	Aug.	Sep.	Oct.	Nov.	Dec.
Mark	1	2	3	4	5	6	7	8	9	А	В	С

3. Serial No.

Serial No.	1 ~ 99999	100000 ~
Mark	00001 ~ 99999	A0001 ~ A9999,, Z9999

b) Location of Lot Mark

Serial NO. is printed on the label. The label is attached to the backside of the LCD module. This is subject to change without prior notice.

8-2. Packing Form

a) Package quantity in one box : 8 pcs

b) Box Size : 344mm X 315mm X 410mm.

9. PRECAUTIONS

Please pay attention to the following when you use this TFT LCD module.

9-1. MOUNTING PRECAUTIONS

- (1) You must mount a module using holes arranged in four corners or four sides.
- (2) You should consider the mounting structure so that uneven force(ex. Twisted stress) is not applied to the module.

And the case on which a module is mounted should have sufficient strength so that external force is not transmitted directly to the module.

- (3) Please attach a transparent protective plate to the surface in order to protect the polarizer. Transparent protective plate should have sufficient strength in order to the resist external force.
- (4) You should adopt radiation structure to satisfy the temperature specification.
- (5) Acetic acid type and chlorine type materials for the cover case are not describe because the former generates corrosive gas of attacking the polarizer at high temperature and the latter causes circuit break by electro-chemical reaction.
- (6) Do not touch, push or rub the exposed polarizers with glass, tweezers or anything harder than HB pencil lead. And please do not rub with dust clothes with chemical treatment. Do not touch the surface of polarizer for bare hand or greasy cloth.(Some cosmetics are determined to the polarizer.)
- (7) When the surface becomes dusty, please wipe gently with absorbent cotton or other soft materials like chamois soaks with petroleum benzene. Normal-hexane is recommended for cleaning the adhesives used to attach front / rear polarizers. Do not use acetone, toluene and alcohol because they cause chemical damage to the polarizer.
- (8) Wipe off saliva or water drops as soon as possible. Their long time contact with polarizer causes deformations and color fading.
- (9) Do not open the case because inside circuits do not have sufficient strength.

9-2. OPERATING PRECAUTIONS

- (1) The spike noise causes the mis-operation of circuits. It should be lower than following voltage : $V=\pm 200 \text{mV}(\text{Over and under shoot voltage})$
- (2) Response time depends on the temperature.(In lower temperature, it becomes longer.)
- (3) Brightness depends on the temperature. (In lower temperature, it becomes lower.) And in lower temperature, response time(required time that brightness is stable after turned on) becomes longer.
- (4) Be careful for condensation at sudden temperature change. Condensation makes damage to polarizer or electrical contacted parts. And after fading condensation, smear or spot will occur.
- (5) When fixed patterns are displayed for a long time, remnant image is likely to occur.
- (6) Module has high frequency circuits. Sufficient suppression to the electromagnetic interference shall be done by system manufacturers. Grounding and shielding methods may be important to minimized the interference.



9-3. ELECTROSTATIC DISCHARGE CONTROL

Since a module is composed of electronic circuits, it is not strong to electrostatic discharge. Make certain that treatment persons are connected to ground through wrist band etc. And don't touch interface pin directly.

9-4. PRECAUTIONS FOR STRONG LIGHT EXPOSURE

Strong light exposure causes degradation of polarizer and color filter.

9-5. STORAGE

When storing modules as spares for a long time, the following precautions are necessary.

- (1) Store them in a dark place. Do not expose the module to sunlight or fluorescent light. Keep the temperature between 5°C and 35°C at normal humidity.
- (2) The polarizer surface should not come in contact with any other object.It is recommended that they be stored in the container in which they were shipped.

9-6. HANDLING PRECAUTIONS FOR PROTECTION FILM

- (1) When the protection film is peeled off, static electricity is generated between the film and polarizer. This should be peeled off slowly and carefully by people who are electrically grounded and with well ion-blown equipment or in such a condition, etc.
- (2) The protection film is attached to the polarizer with a small amount of glue. If some stress is applied to rub the protection film against the polarizer during the time you peel off the film, the glue is apt to remain on the polarizer.

Please carefully peel off the protection film without rubbing it against the polarizer.

- (3) When the module with protection film attached is stored for a long time, sometimes there remains a very small amount of glue still on the polarizer after the protection film is peeled off.
- (4) You can remove the glue easily. When the glue remains on the polarizer surface or its vestige is recognized, please wipe them off with absorbent cotton waste or other soft material like chamois soaked with normal-hexane.