



8Mx32 SDRAM

FEATURES

- 53% Space Savings vs. Monolithic Solution
- Reduced System Inductance and Capacitance
- Pinout and Footprint Compatible to SSRAM 119 BGA
- 3.3V Operating Supply Voltage
- Fully Synchronous to Positive Clock Edge
- Clock Frequencies of 133MHz, 125MHz and 100MHz
- Burst Operation
 - Sequential or Interleave
 - Burst Length = Programmable 1, 2, 4, 8 or Full Page
 - Burst Read and Write
 - Multiple Burst Read and Single Write
- Data Mask Control Per Byte
- Auto and Self Refresh
- Automatic and Controlled Precharge Commands
- Suspend Mode and Power Down Mode
- 119 Pin BGA, JEDEC MO-163

DESCRIPTION

The WED3DL328V is an 8Mx32 Synchronous DRAM configured as 4x2Mx32. The SDRAM BGA is constructed with two 8Mx16 SDRAM die mounted on a multi-layer laminate substrate and packaged in a 119 lead, 14mm by 22mm, BGA.

The WED3DL328V is an ideal SDRAM wide I/O memory solution for all high performance, computer applications which include Network Processors, DSPs and Functional ASICs.

The WED3DL328V is available in clock speeds of 133MHz, 125MHz and 100MHz. The range of operating frequencies, programmable burst lengths and programmable latencies allow the same device to be useful for a variety of high bandwidth, high performance memory system applications.

The package and design provides performance enhancements via a 50% reduction in capacitance vs. two monolithic devices. The design includes internal ground and power planes which reduces inductance on the ground and power pins allowing for improved decoupling and a reduction in system noise.

FIG. 1

PIN CONFIGURATION
(TOP VIEW)

	1	2	3	4	5	6	7	
A	V _{DDQ}	NC	BA ₀	NC	A ₁₀	A ₇	V _{DDQ}	A
B	NC	NC	NC/A ₁₂ *	CAS	A ₁₁	NC	NC	B
C	NC	NC	BA ₁	V _{DD}	A ₉	A ₈	NC	C
D	DQ _c	NC	V _{SS}	NC	V _{SS}	NC	DQ _B	D
E	DQ _c	DQ _c	V _{SS}	CE	V _{SS}	DQ _B	DQ _B	E
F	V _{DDQ}	DQ _c	V _{SS}	RAS	V _{SS}	DQ _B	V _{DDQ}	F
G	DQ _c	DQ _c	DQMC	NC	DQMB	DQ _B	DQ _B	G
H	DQ _c	DQ _c	V _{SS}	CKE	V _{SS}	DQ _B	DQ _B	H
J	V _{DDQ}	V _{DD}	NC	V _{DD}	NC	V _{DD}	V _{DDQ}	J
K	DQ _D	DQ _D	V _{SS}	CLK	V _{SS}	DQ _A	DQ _A	K
L	DQ _D	DQ _D	DQMD	NC	DQMA	DQ _A	DQ _A	L
M	V _{DDQ}	DQ _D	V _{SS}	WE	V _{SS}	DQ _A	V _{DDQ}	M
N	DQ _D	DQ _D	V _{SS}	A ₁	V _{SS}	DQ _A	DQ _A	N
P	DQ _D	NC	V _{SS}	A ₀	V _{SS}	NC	DQ _A	P
R	NC	A ₆	NC	V _{DD}	NC	A ₂	NC	R
T	NC	NC	A ₅	A ₄	A ₃	NC	NC	T
U	V _{DDQ}	NC	NC	NC	NC	NC	V _{DDQ}	U
	1	2	3	4	5	6	7	


PIN DESCRIPTION

A ₀ – A ₁₁	Address Bus
BA ₀₋₁	Bank Select Addresses
DQ	Data Bus
CLK	Clock
CKE	Clock Enable
DQM	Data Input/Output Mask
RAS	Row Address Strobe
CAS	Column Address Strobe
CE	Chip Enable
V _{DD}	Power Supply pins, 3.3V
V _{DDQ}	Data Bus Power Supply pins, 3.3V
V _{SS}	Ground pins

*NOTE: Pin B₃ is designated as NC/A₁₂. This pin is used for future density upgrades as address pin A₁₂.



FIG. 2 8MX32 SDRAM BLOCK DIAGRAM

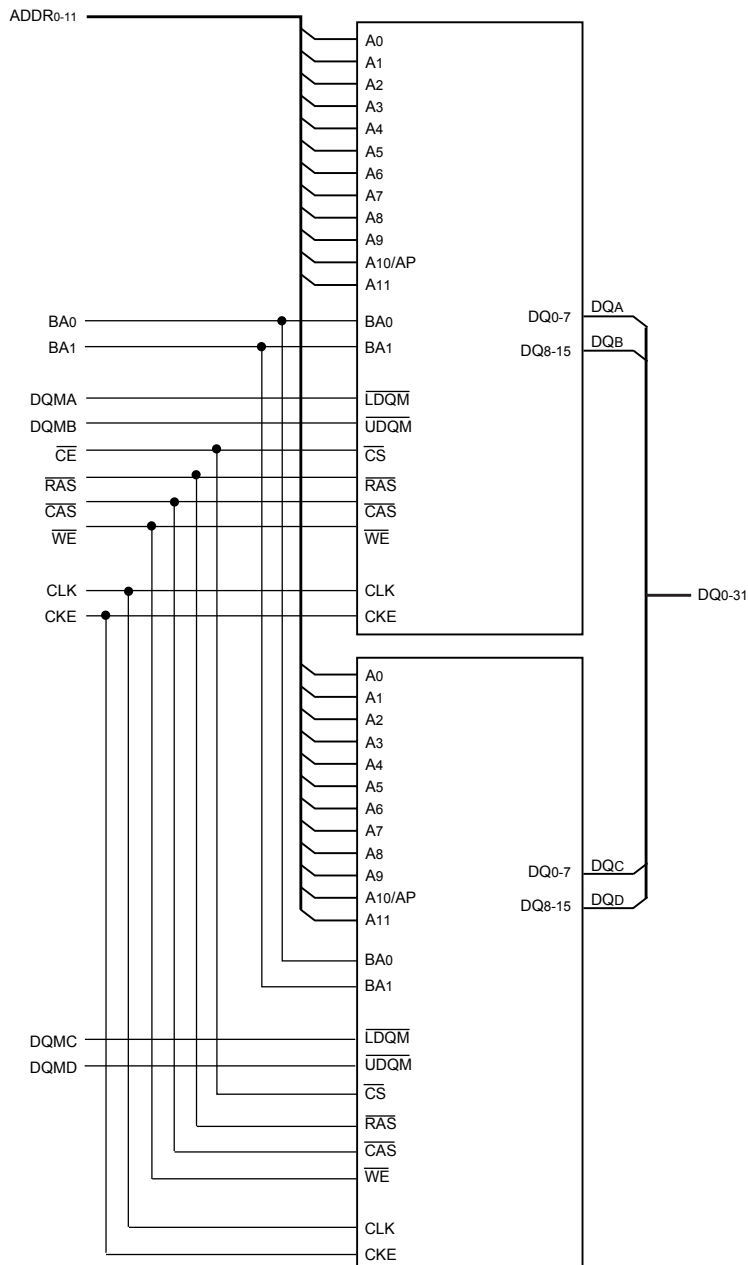



INPUT/OUTPUT FUNCTIONAL DESCRIPTION

Symbol	Type	Signal	Polarity	Function
CLK	Input	Pulse	Positive Edge	The system clock input. All of the SDRAM inputs are sampled on the rising edge of the clock.
CKE	Input	Level	Active High	Activates the CLK signal when high and deactivates the CLK signal when low. By deactivating the clock, CKE low initiates the Power Down mode, Suspend mode, or the Self Refresh mode.
$\overline{CE}$	Input	Pulse	Active Low	$\overline{CE}$ disable or enable device operation by masking or enabling all inputs except CLK, CKE and DQM.
$\overline{RAS}$, $\overline{CAS}$ $\overline{WE}$	Input	Pulse	Active Low	When sampled at the positive rising edge of the clock, $\overline{CAS}$, $\overline{RAS}$, and $\overline{WE}$ define the operation to be executed by the SDRAM.
BA0,BA1	Input	Level	—	Selects which SDRAM bank is to be active.
A0-11, A10/AP	Input	Level	—	During a Bank Activate command cycle, A0-11 defines the row address (RA0-11) when sampled at the rising clock edge. During a Read or Write command cycle, A0-8 defines the column address (CA0-8) when sampled at the rising clock edge. In addition to the row address, A10/AP is used to invoke Autoprecharge operation at the end of the Burst Read or Write cycle. If A10/AP is high, autoprecharge is selected and BA0, BA1 defines the bank to be precharged. If A10/AP is low, autoprecharge is disabled. During a Precharge command cycle, A10/AP is used in conjunction with BA0, BA1 to control which bank(s) to precharge. If A10/AP is high, all banks will be precharged regardless of the state of BA0, BA1. If A10/AP is low, then BA0, BA1 is used to define which bank to precharge.
DQ	Input/Output	Level	—	Data Input/Output are multiplexed on the same pins
DQM	Input	Pulse	Mask Active High	The Data Input/Output mask places the DQ buffers in a high impedance state when sampled high. In Read mode, DQM has a latency of two clock cycles and controls the output buffers like an output enable. In Write mode, DQM has a latency of zero and operates as a word mask by allowing input data to be written if it is low but blocks the Write operation if DQM is high.
VDD, VSS	Supply			Power and ground for the input buffers and the core logic.
VDDQ	Supply			Isolated power and ground for the output buffers to improve noise immunity.

ABSOLUTE MAXIMUM RATINGS*

Parameter	Symbol	Min	Max	Units
Power Supply Voltage	VDD/VDDQ	-1.0	+4.6	V
Input Voltage	VIN	-1.0	+4.6	V
Output Voltage	VOUT	-1.0	+4.6	V
Operating Temperature	TOPR	-0	+70	°C
Storage Temperature	TSTG	-55	+125	°C
Power Dissipation	PD	—	1.5	W
Short Circuit Output Current	Ios	—	50	mA

*Stress greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions greater than those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

RECOMMENDED DC OPERATING CONDITIONS

(Voltage Referenced to: VSS = 0V, TA = 0°C to +70°C)

Parameter	Symbol	Min	Typ	Max	Unit
Supply Voltage	VDD/VDDQ	3.0	3.3	3.6	V
Input High Voltage	VIH	2.0	3.0	VDD +0.3	V
Input Low Voltage	VIL	-0.3	—	0.8	V
Output High Voltage (IOH = -2mA)	VOH	2.4	—	—	V
Output Low Voltage (IOL = 2mA)	VOL	—	—	0.4	V
Input Leakage Voltage	IIL	-5	—	5	μA
Output Leakage Voltage	IOL	-5	—	5	μA

CAPACITANCE

(TA = 25°C, f = 1MHz, VDD = 3.3V)

Parameter	Symbol	Max	Unit
Input Capacitance	CI1	4	pF
Input/Output Capacitance (DQ)	COut	5	pF



OPERATING CURRENT CHARACTERISTICS

(V_{CC} = 3.6V)


Parameter	Symbol	Conditions	7	8	10	Units
Operating Current (One Bank Active) (1)	I _{CC1}	Burst Length = 1, t _{RC} ≥ t _{RC} (min), I _{OL} = 0mA	300	280	225	mA
Operating Current (Burst Mode) (1)	I _{CC4}	Page Burst, 4 banks active, t _{CCD} = 2 clocks	340	290	240	mA
Precharge Standby Current in Power Down Mode	I _{CC2P}	CKE ≤ V _{IL} (max), t _{CC} = 15ns	2	2	2	mA
	I _{CC2PS}	CKE, CLK ≤ V _{IL} (max), t _{CC} = ∞, Inputs Stable	2	2	2	mA
Precharge Standby Current in Non-Power Down Mode	I _{CC1N}	CKE = V _{IH} , t _{CC} = 15ns Input Change one time every 30ns	100	100	100	mA
	I _{CC1NS}	CKE ≥ V _{IH} (min), t _{CC} = ∞ No Input Change	70	70	70	mA
Precharge Standby Current in Power Down Mode	I _{CC3P}	CKE ≤ V _{IL} (max), t _{CC} = 15ns	12	12	12	mA
	I _{CC3PS}	CKE ≤ V _{IL} (max), t _{CC} = ∞	12	12	12	mA
Active Standby Current in Non-Power Down Mode (One Bank Active)	I _{CC3N}	CKE = V _{IH} , t _{CC} = 15ns Input Change one time every 30ns	60	60	60	mA
	I _{CC3NS}	CKE ≥ V _{IH} (min), t _{CC} = ∞, No Input Change	40	40	40	mA
Refresh Current (2)	I _{CC5}	t _{RC} ≥ t _{RC} (min)	440	420	420	mA
Self Refresh Current	I _{CC6}	CKE ≤ 0.2V	3	3	3	mA

NOTES:

1. Measured with outputs open.
2. Refresh period is 64ms.



MODE REGISTER DEFINITION

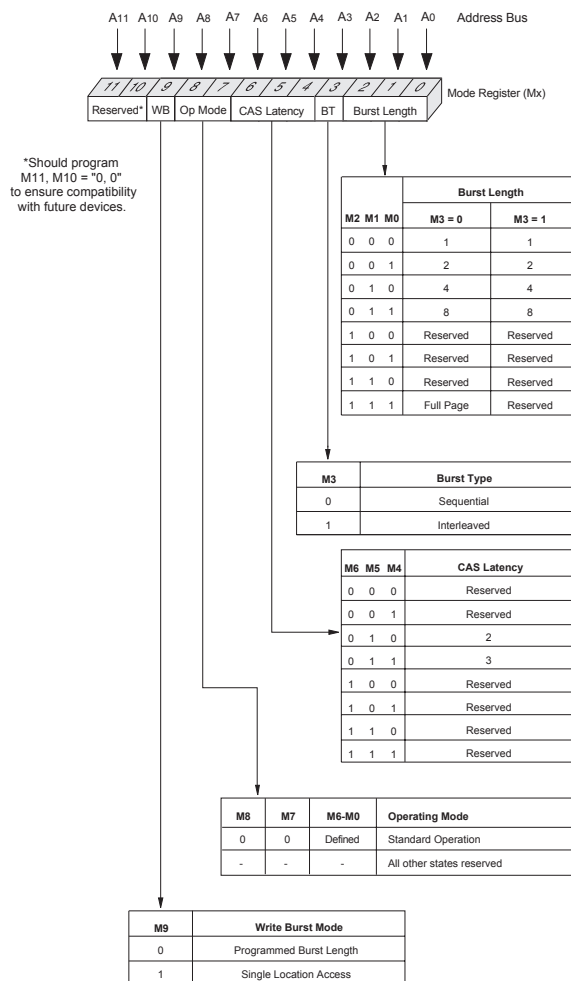

BURST DEFINITION

Burst Length	Starting Column Address	Order of Accesses Within a Burst	
		Type = Sequential	Type = Interleaved
2	A0		
	0	0-1	0-1
	1	1-0	1-0
4	A1 A0		
	0 0	0-1-2-3	0-1-2-3
	0 1	1-2-3-0	1-0-3-2
	1 0	2-3-0-1	2-3-0-1
	1 1	3-0-1-2	3-2-1-0
8	A2 A1 A0		
	0 0 0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7
	0 0 1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6
	0 1 0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5
	0 1 1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4
	1 0 0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3
	1 0 1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2
	1 1 0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1
	1 1 1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0
Full Page (y)	n = A0-A11/9/8 (location 0-y)	Cn, Cn + 1, Cn + 2 Cn + 3, Cn + 4... ...Cn - 1, Cn...	Not Supported

NOTES:

- For full-page accesses: $y = 2,048$ (x4), $y = 1,024$ (x8), $y = 512$ (x16).
- For a burst length of two, A1-A9, A11 (x4), A1-A9 (x8) or A1-A8 (x16) select the block-of-two burst; A0 selects the starting column within the block.
- For a burst length of four, A2-A9, A11 (x4), A2-A9 (x8) or A2-A8 (x16) select the block-of-four burst; A0-A1 select the starting column within the block.
- For a burst length of eight, A3-A9, A11 (x4), A3-A9 (x8) or A3-A8 (x16) select the block-of-eight burst; A0-A2 select the starting column within the block.
- For a full-page burst, the full row is selected and A0-A9, A11 (x4), A0-A9 (x8) or A0-A8 (x16) select the starting column.
- Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.
- For a burst length of one, A0-A9, A11 (x4), A0-A9 (x8) or A0-A8 (x16) select the unique column to be accessed, and mode register bit M3 is ignored.



SDRAM AC CHARACTERISTICS

Parameter		Symbol	133MHz		125MHz		100MHz		Units
			Min	Max	Min	Max	Min	Max	
Clock Cycle Time (1)	CL = 3	t _{CC}	7	1000	8	1000	10	1000	ns
	CL = 2	t _{CC}	7.5	1000	10	1000	12	1000	
Clock to valid Output delay (1,2)		t _{SAC}		5.4		6		7	ns
Output Data Hold Time (2)		t _{OH}	3		3		3		ns
Clock HIGH Pulse Width (3)		t _{CH}	2.5		3		3		ns
Clock LOW Pulse Width (3)		t _{CL}	3		3		3		ns
Input Setup Time (3)		t _{SS}	2		2		2		ns
Input Hold Time (3)		t _{SH}	1		1		1		ns
CLK to Output Low-Z (2)		t _{SLZ}	1.0		1.0		1.0		ns
CLK to Output High-Z		t _{SHZ}		7		7		8	ns
Row Active to Row Active Delay (4)		t _{RRD}	15		20		20		ns
RAS to CAS Delay (4)		t _{RCD}	15		20		20		ns
Row Precharge Time (4)		t _{RP}	20		20		24		ns
Row Active Time (4)		t _{RAS}	50	120,000	50	120,000	60	120,000	ns
Row Cycle Time - Operation (4)		t _{RC}	60		70		80		ns
Row Cycle Time - Auto Refresh (4,8)		t _{RFC}	70		70		80		ns
Last Data in to New Column Address Delay (5)		t _{CDL}	1		1		1		CLK
Last Data in to Row Precharge (5)		t _{RDL}	1		1		1		CLK
Last Data in to Burst Stop (5)		t _{BDL}	1		1		1		CLK
Column Address to Column Address Delay (6)		t _{CCD}	1.5		1.5		1.5		CLK
Number of Valid OutputData (7)			2		2		2		ea
			1		2		1		

NOTES:

- Parameters depend on programmed CAS latency.
- If clock rise time is longer than 1ns ($t_{rise}/2 - 0.5$)ns should be added to the parameter.
- Assumed input rise and fall time = 1ns. If trise or tfall are longer than 1ns. $[(t_{rise} = t_{fall})/2] - 1$ ns should be added to the parameter.
- The minimum number of clock cycles required is determined by dividing the minimum time required by the clock cycle time and then rounding up to the next higher integer.
- Minimum delay is required to complete write.
- All devices allow every cycle column address changes.
- In case of row precharge interrupt, auto precharge and read burst stop.
- A new command may be given t_{RFC} after self-refresh exit.



COMMAND TRUTH TABLE

Function		CKE		$\overline{\text{CE}}$	$\overline{\text{RAS}}$	$\overline{\text{CAS}}$	$\overline{\text{WE}}$	DQM	BA	A _{10/AP} A ₉₋₀	A ₁₁	Notes
		Previous Cycle	Current Cycle									
Register	Mode Register Set	H	X	L	L	L	L	X	OP CODE			
Refresh	Auto Refresh (CBR)	H	H	L	L	L	H	X	X	X	X	
	Entry Self Refresh	H	L	L	L	L	H	X	X	X	X	
Precharge	Single Bank Precharge	H	X	L	L	H	L	X	BA	L	X	2
	Precharge all Banks	H	X	L	L	H	L	X	X	H	X	
Bank Activate		H	X	L	L	H	H	X	BA	Row Address		2
Write		H	X	L	H	L	L	X	BA	L	Column	2
Write with Auto Precharge		H	X	L	H	L	L	X	BA	H	Column	2
Read		H	X	L	H	L	L	X	BA	L	Column	2
Read with Auto Precharge		H	X	L	H	L	H	X	BA	H	Column	2
Burst Termination		H	X	L	H	H	L	X	X	X	X	3
No Operation		H	X	L	H	H	H	X	X	X	X	
Device Deselect		H	X	H	X	X	X	X	X	X	X	
Clock Suspend/Standby Mode		L	X	X	X	X	X	X	X	X	X	4
Data Write/Output Disable		H	X	X	X	X	X	L	X	X	X	5
Data Mask/Output Disable		H	X	X	X	X	X	H	X	X	X	5
Power Down Mode	Entry	X	L	H	X	X	X	X	X	X	X	6
	Exit	X	H	H	X	X	X	X	X	X	X	6

NOTES:

1. All of the SDRAM operations are defined by states of $\overline{CE}$, $\overline{WE}$, $\overline{RAS}$, $\overline{CAS}$, and DQM at the positive rising edge of the clock.
2. Bank Select (BA), if BA = 0 then bank A is selected, if BA = 1 then bank B is selected.
3. During a Burst Write cycle there is a zero clock delay, for a Burst Read cycle the delay is equal to the CAS latency.
4. During normal access mode, CKE is held high and CLK is enabled. When it is low, it freezes the internal clock and extends data Read and Write operations. One clock delay is required for mode entry and exit.
5. The DQM has two functions for the data DQ Read and Write operations. During a Read cycle, when DQM goes high at a clock timing the data outputs are disabled and become high impedance after a two clock delay. DQM also provides a data mask function for Write cycles. When it activates, the Write operation at the clock is prohibited (zero clock latency).

All banks must be precharged before entering the Power Down Mode. The Power Down Mode does not perform any Refresh operations, therefore the device can't remain in this mode longer than the Refresh period (t_{REF}) of the device. One clock delay is required for mode entry and exit.



CLOCK ENABLE (CKE) TRUTH TABLE

Current State	CKE		Command						Action	Notes
	Previous Cycle	Current Cycle	$\overline{\text{CE}}$	$\overline{\text{RAS}}$	$\overline{\text{CAS}}$	$\overline{\text{WE}}$	BA ₀₋₁	A ₁₀₋₁₁		
Self Refresh	H	X	X	X	X	X	X	X	INVALID	1
	L	H	H	X	X	X	X	X	Exit Self Refresh with Device Deselect	2
	L	H	L	H	H	H	X	X	Exit Self Refresh with No Operation	2
	L	H	L	H	H	L	X	X	ILLEGAL	2
	L	H	L	H	L	X	X	X	ILLEGAL	2
	L	H	L	L	X	X	X	X	ILLEGAL	2
	L	L	X	X	X	X	X	X	Maintain Self Refresh	
Power Down	H	X	X	X	X	X	X	X	INVALID	1
	L	H	H	X	X	X	X	X	Power Down Mode exit, all banks idle	2
	L	H	L	X	X	X	X	X	ILLEGAL	2
	H	X	L	H	L	L	X		Maintain Power Down Mode	2
All Banks Idle	H	H	H	X	X	X			Refer to the Idle State section of the Current State Truth Table	3
	H	H	L	H	X	X				
	H	H	L	L	H	X				
	H	H	L	L	L	H	X	X	CBR Refresh	
	H	H	L	L	L	L	OP Code		Mode Register Set	4
	H	L	H	X	X	X			Refer to the Idle State section of the Current State Truth Table	3
	H	L	L	H	X	X				
	H	L	L	L	H	X				
	H	L	L	L	L	H	X	X	Entry Self Refresh	4
	H	H	L	L	L	L	OP Code		Mode Register Set	
	L	X	X	X	X	X	X	X	Power Down	4
Any State other than listed above	H	H	X	X	X	X	X	X	Refer to the Operations in the Current State Truth Table	
	H	L	X	X	X	X	X	X	Begin Clock Suspend next cycle	5
	L	H	X	X	X	X	X	X	Exit Clock Suspend next cycle	
	L	L	X	X	X	X	X	X	Maintain Clock Suspend	

NOTES:

1. For the given Current State CKE must be low in the previous cycle.
2. When CKE has a low to high transition, the clock and other inputs are re-enabled asynchronously. The minimum setup time for CKE (t_{CKS}) must be satisfied before any command other than Exit is issued.
3. The address inputs (A₁₁₋₀) depend on the command that is issued. See the Idle State section of the Current State Truth Table for more information.
4. The Power Down Mode, Self Refresh Mode, and the Mode Register Set can only be entered from the all banks idle state.

Must be a legal command as defined in the Current State Truth Table.



CURRENT STATE TRUTH TABLE

Current State	Command							Action	Notes
	CE	RAS	CAS	WE	BA0-1	A ₁₁ , A ₁₀ /AP-A ₀	Description		
Idle	L	L	L	L		OP Code	Mode Register Set	Set the Mode Register	2
	L	L	L	H	X	X	Auto orSelf Refresh	Start Auto orSelf Refresh	2,3
	L	L	H	L	X	X	Precharge	No Operation	
	L	L	H	H	BA	Row Address	Bank Activate	Activate the specified bank and row	
	L	H	L	L	BA	Column	Write w/o Precharge	ILLEGAL	4
	L	H	L	H	BA	Column	Read w/o Precharge	ILLEGAL	2
	L	H	H	L	X	X	Burst Termination	No Operation	2
	L	H	H	H	X	X	No Operation	No Operation	
	H	X	X	X	X	X	Device Deselect	No Operation or Power Down	5
Row Active	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	Precharge	6
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	2
	L	H	L	L	BA	Column	Write	Start Write; Determine if Auto Precharge	7,8
	L	H	L	H	BA	Column	Read	Start Read; Determine if Auto Precharge	7,8
	L	H	H	L	X	X	Burst Termination	No Operation	
	L	H	H	H	X	X	No Operation	No Operation	
	H	X	X	X	X	X	Device Deselect	No Operation	
Read	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	Terminate Burst; Start the Precharge	
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	4
	L	H	L	L	BA	Column	Write	Terminate Burst; Start the Write cycle	8,9
	L	H	L	H	BA	Column	Read	Terminate Burst; Start a new Read cycle	8,9
	L	H	H	L	X	X	Burst Termination	Terminate the Burst	
	L	H	H	H	X	X	No Operation	Continue the Burst	
	H	X	X	X	X	X	Device Deselect	Continue the Burst	
Write	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	Terminate Burst; Start the Precharge	
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	4
	L	H	L	L	BA	Column	Write	Terminate Burst; Start a new Write cycle	8,9
	L	H	L	H	BA	Column	Read	Terminate Burst; Start the Read cycle	8,9
	L	H	H	L	X	X	Burst Termination	Terminate the Burst	
	L	H	H	H	X	X	No Operation	Continue the Burst	
	H	X	X	X	X	X	Device Deselect	Continue the Burst	
Read with Auto Precharge	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	ILLEGAL	4
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	4
	L	H	L	L	BA	Column	Write	ILLEGAL	
	L	H	L	H	BA	Column	Read	ILLEGAL	
	L	H	H	L	X	X	Burst Termination	ILLEGAL	
	L	H	H	H	X	X	No Operation	Continue the Burst	
	H	X	X	X	X	X	Device Deselect	Continue the Burst	



CURRENT STATE TRUTH TABLE (CONT.)

Current State	Command							Action	Notes
	CE	RAS	CAS	WE	BA ₀₋₁	A ₁₁ , A ₁₀ /AP-A ₀	Description		
Write with Auto Precharge	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	ILLEGAL	4
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	4
	L	H	L	L	BA	Column	Write	ILLEGAL	
	L	H	L	H	BA	Column	Read	ILLEGAL	
	L	H	H	L	X	X	Burst Termination	ILLEGAL	
	L	H	H	H	X	X	No Operation	Continue the Burst	
Precharging	H	X	X	X	X	X	Device Deselect	Continue the Burst	
	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	No Operation; Bank(s) idle after trp	
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	4
	L	H	L	L	BA	Column	Write w/o Precharge	ILLEGAL	4
	L	H	L	H	BA	Column	Read w/o Precharge	ILLEGAL	4
	L	H	H	L	X	X	Burst Termination	No Operation; Bank(s) idle after trp	
Row Activating	L	H	H	H	X	X	No Operation	No Operation; Bank(s) idle after trp	
	H	X	X	X	X	X	Device Deselect	No Operation; Bank(s) idle after trp	
	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	ILLEGAL	4
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	4,10
	L	H	L	L	BA	Column	Write	ILLEGAL	4
	L	H	L	H	BA	Column	Read	ILLEGAL	4
Write Recovering	L	H	H	L	X	X	Burst Termination	No Operation; Row active after trCD	
	L	H	H	H	X	X	No Operation	No Operation; Row active after trCD	
	H	X	X	X	X	X	Device Deselect	No Operation; Row active after trCD	
	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	ILLEGAL	4
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	4
	L	H	L	L	BA	Column	Write	Start Write; Determine if Auto Precharge	9
Write Recovering with Auto Precharge	L	H	L	H	BA	Column	Read	Start Read; Determine if Auto Precharge	9
	L	H	H	L	X	X	Burst Termination	No Operation; Row active after tDPL	
	L	H	H	H	X	X	No Operation	No Operation; Row active after tDPL	
	H	X	X	X	X	X	Device Deselect	No Operation; Row active after tDPL	
	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	ILLEGAL	4
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	4
Write Recovering with Auto Precharge	L	H	L	L	BA	Column	Write	ILLEGAL	4,9
	L	H	L	H	BA	Column	Read	ILLEGAL	4,9
	L	H	H	L	X	X	Burst Termination	No Operation; Precharge after tDPL	
	L	H	H	H	X	X	No Operation	No Operation; Precharge after tDPL	
	H	X	X	X	X	X	Device Deselect	No Operation; Precharge after tDPL	



CURRENT STATE TRUTH TABLE (CONT.)

Current State	Command						Description	Action	Notes
	CE	RAS	CAS	WE	BA ₀₋₁	A ₁₁ , A ₁₀ /AP-A ₀			
Refreshing	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	ILLEGAL	
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	
	L	H	L	L	BA	Column	Write	ILLEGAL	
	L	H	L	H	BA	Column	Read	ILLEGAL	
	L	H	H	L	X	X	Burst Termination	No Operation; Idle after tRC	
	L	H	H	H	X	X	No Operation	No Operation; Idle after tRC	
	H	X	X	X	X	X	Device Deselect	No Operation; Idle after tRC	
Mode Register Accessing	L	L	L	L		OP Code	Mode Register Set	ILLEGAL	
	L	L	L	H	X	X	Auto orSelf Refresh	ILLEGAL	
	L	L	H	L	X	X	Precharge	ILLEGAL	
	L	L	H	H	BA	Row Address	Bank Activate	ILLEGAL	
	L	H	L	L	BA	Column	Write	ILLEGAL	
	L	H	L	H	BA	Column	Read	ILLEGAL	
	L	H	H	L	X	X	Burst Termination	ILLEGAL	
	L	H	H	H	X	X	No Operation	No Operation; Idle after two clock cycles	
	H	X	X	X	X	X	Device Deselect	No Operation; Idle after two clock cycles	


NOTES:

1. CKE is assumed to be active (high) in the previous cycle for all entries. The Current State is the state of the bank that the command is being applied to.
2. Both Banks must be idle otherwise it is an illegal action.
3. If CKE is active (high) the SDRAM starts the Auto (CBR) Refresh operation, if CKE is inactive (low) then the Self Refresh mode is entered.
4. The Current State only refers to one of the banks, if BA selects this bank then the action is illegal. If BA selects the bank not being referenced by the Current State then the action may be legal depending on the state of that bank.
5. If CKE is inactive (low) then the Power Down mode is entered, otherwise there is a No Operation.
6. The minimum and maximum Active time (t_{AS}) must be satisfied.
7. The RAS to CAS Delay (t_{RCd}) must occur before the command is given.
8. Address A10 is used to determine if the Auto Precharge function is activated.
9. The command must satisfy any bus contention, bus turn around, and/or write recovery requirements.

The command is illegal if the minimum bank to bank delay time (t_{RRD}) is not satisfied.



FIG. 3 SINGLE BIT READ-WRITE CYCLE (SAME PAGE) @CAS LATENCY=3, BURST LENGTH=1

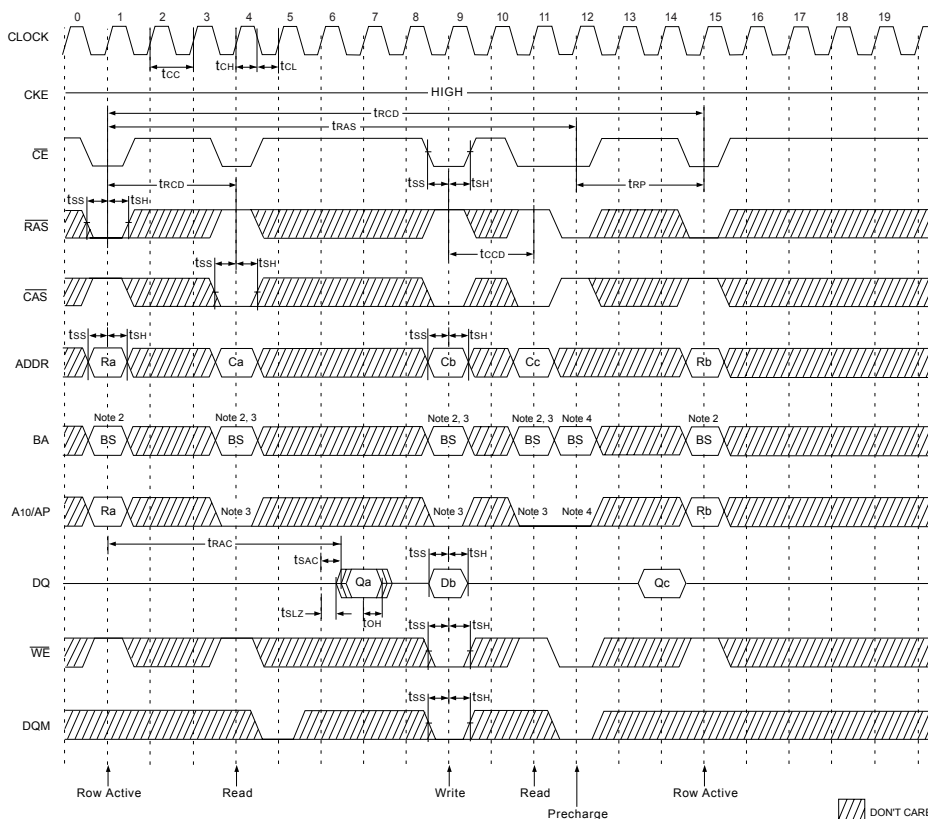

NOTES:

1. All input except CKE & DQM can be don't care when $\overline{CE}$ is high at the CLK high going edge.
2. Bank active & read/write are controlled by BA0~BA1.

BA0	BA1	Active & Read/Write
0	0	Bank A
0	1	Bank B
1	0	Bank C
1	1	Bank D

4. A10/AP and BA0~BA1 control bank precharge when precharge command is asserted.

A10/AP	BA0	BA1	Precharge
0	0	0	Bank A
0	0	1	Bank B
0	1	0	Bank C
0	1	1	Bank D
1	x	x	All Banks

3. Enable and disable auto precharge function are controlled by A10/AP in read/write command.

A10/AP	BA0	BA1	Operation
0	0	0	Distribute auto precharge, leave bank A active at end of burst.
	0	1	Disable auto precharge, leave bank B active at end of burst.
	1	0	Disable auto precharge, leave bank C active at end of burst.
	1	1	Disable auto precharge, leave bank D active at end of burst.
1	0	0	Enable auto precharge, precharge bank A at end of burst.
	0	1	Enable auto precharge, precharge bank B at end of burst.
	1	0	Enable auto precharge, precharge bank C at end of burst.
	1	1	Enable auto precharge, precharge bank D at end of burst.



FIG. 4 POWER UP SEQUENCE


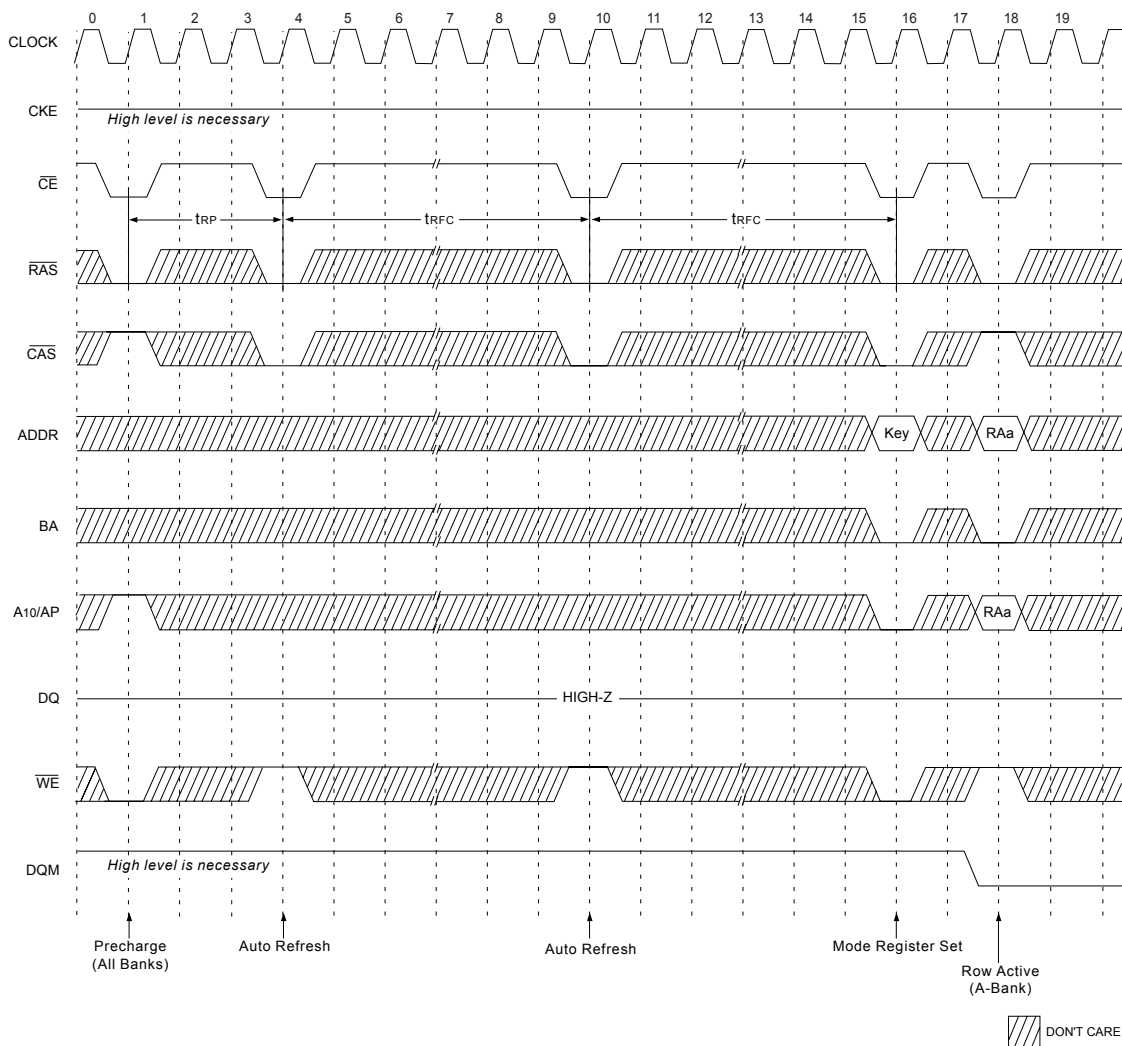




FIG. 5 READ & WRITE CYCLE AT SAME BANK @BURST LENGTH=4

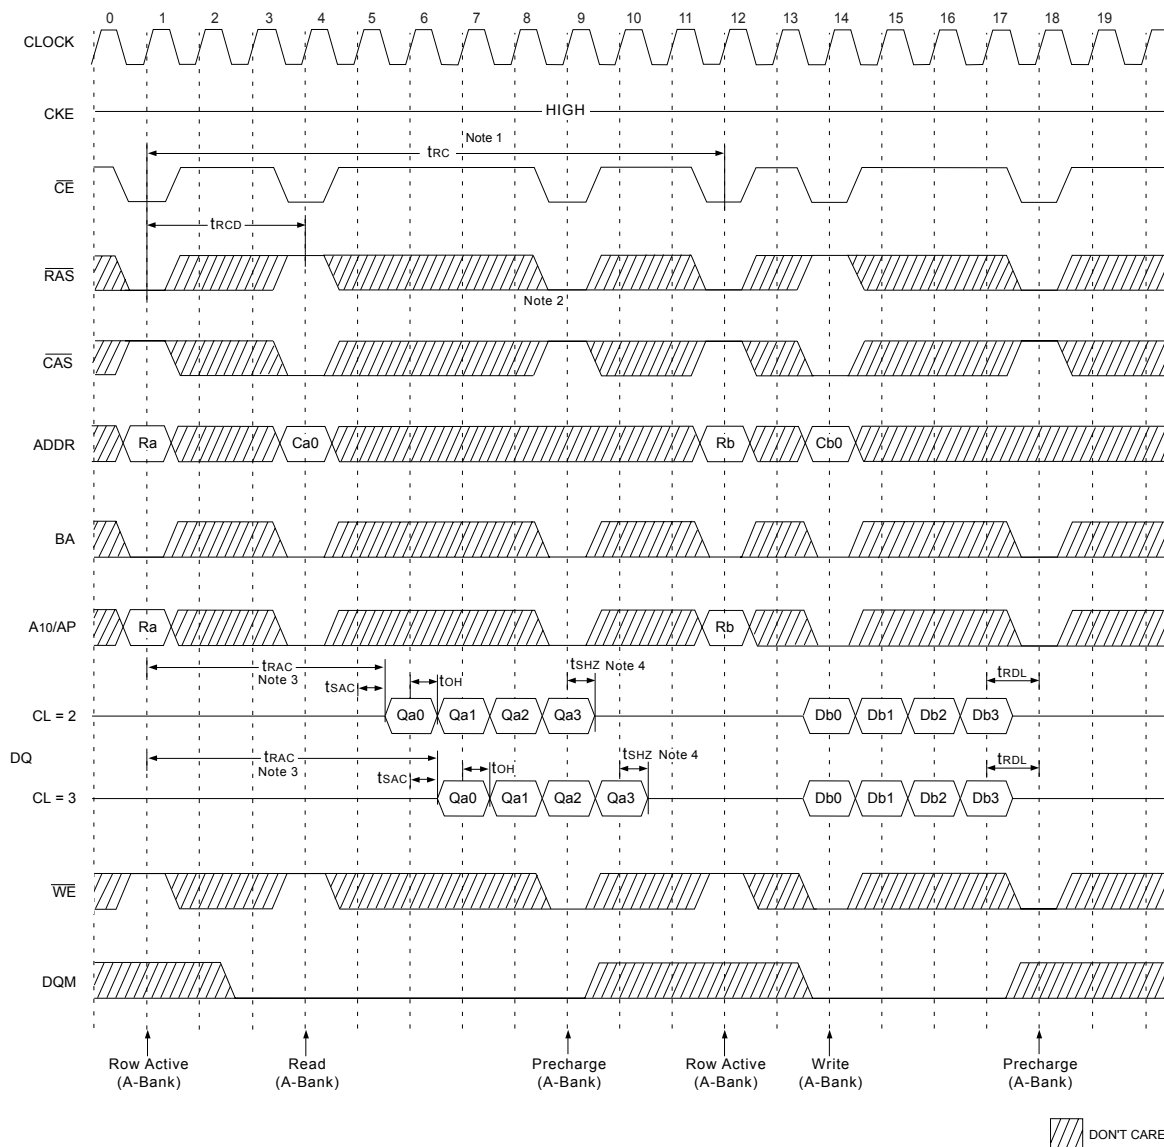


NOTES:

1. Minimum row cycle times are required to complete internal DRAM operation.
2. Row precharge can interrupt burst on any cycle. (CAS Latency - 1) number of valid output data is available after Row precharge. Last valid output will be Hi-Z(tshz) after the clock.
3. Access time from Row active command. $t_{acc} = (t_{trCD} + \text{CAS latency} - 1) + t_{sAC}$.
4. Output will be Hi-Z after the end of burst (1, 2, 4, 8 & full page bit burst).



FIG. 6 PAGE READ & WRITE CYCLE AT SAME BANK @BURST LENGTH=4

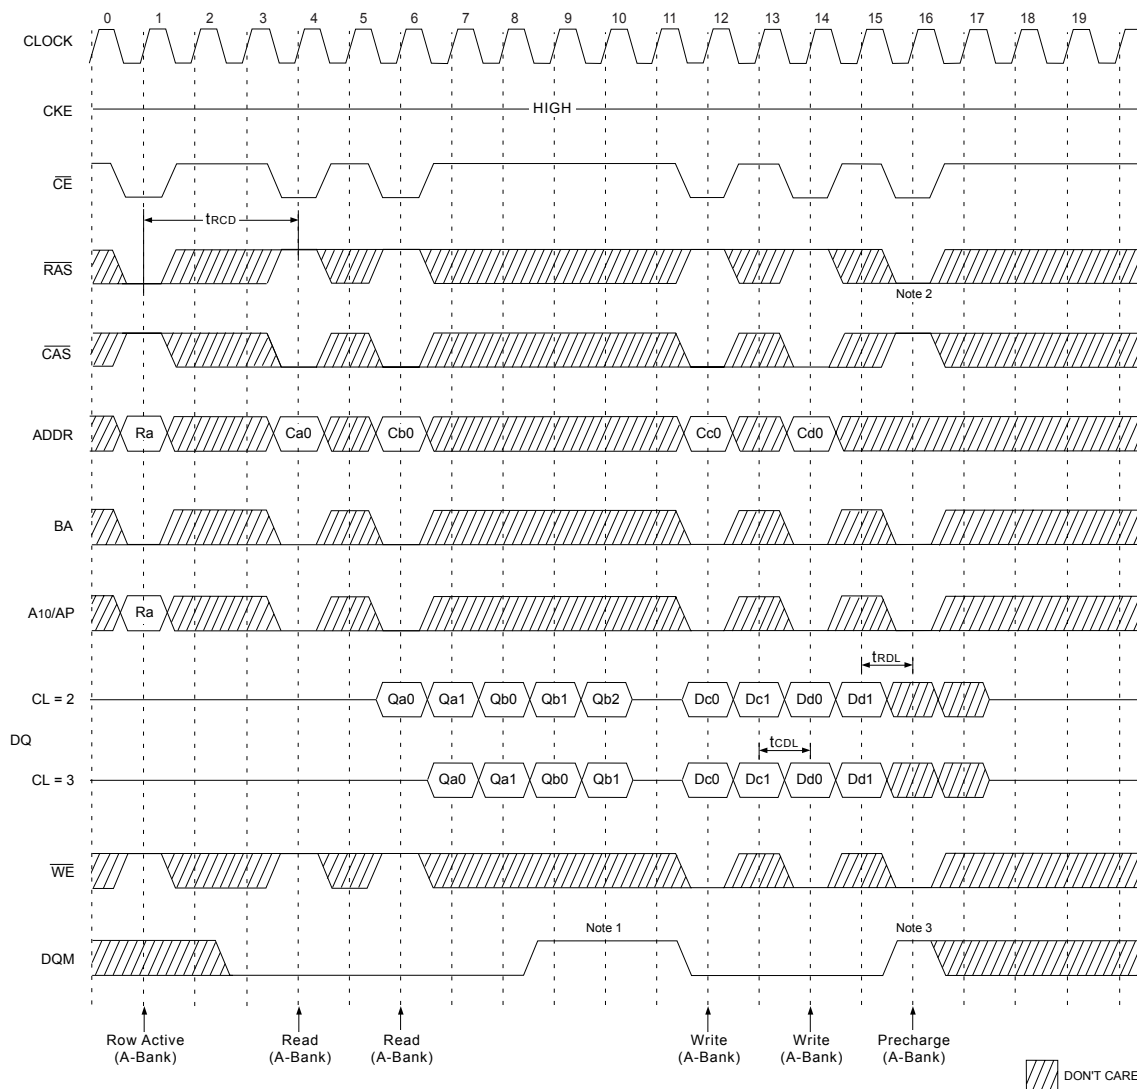


NOTES:

1. To write data before burst read ends, DQM should be asserted three cycles prior to write command to avoid bus contention.
2. Row precharge will interrupt writing. Last data input, t_{RD} before Row precharge, will be written.
3. DQM should mask invalid input data on precharge command cycle when asserting precharge before end of burst. Input data after Row precharge cycle will be masked internally.



FIG. 7 PAGE READ CYCLE AT DIFFERENT BANK @BURST LENGTH=4

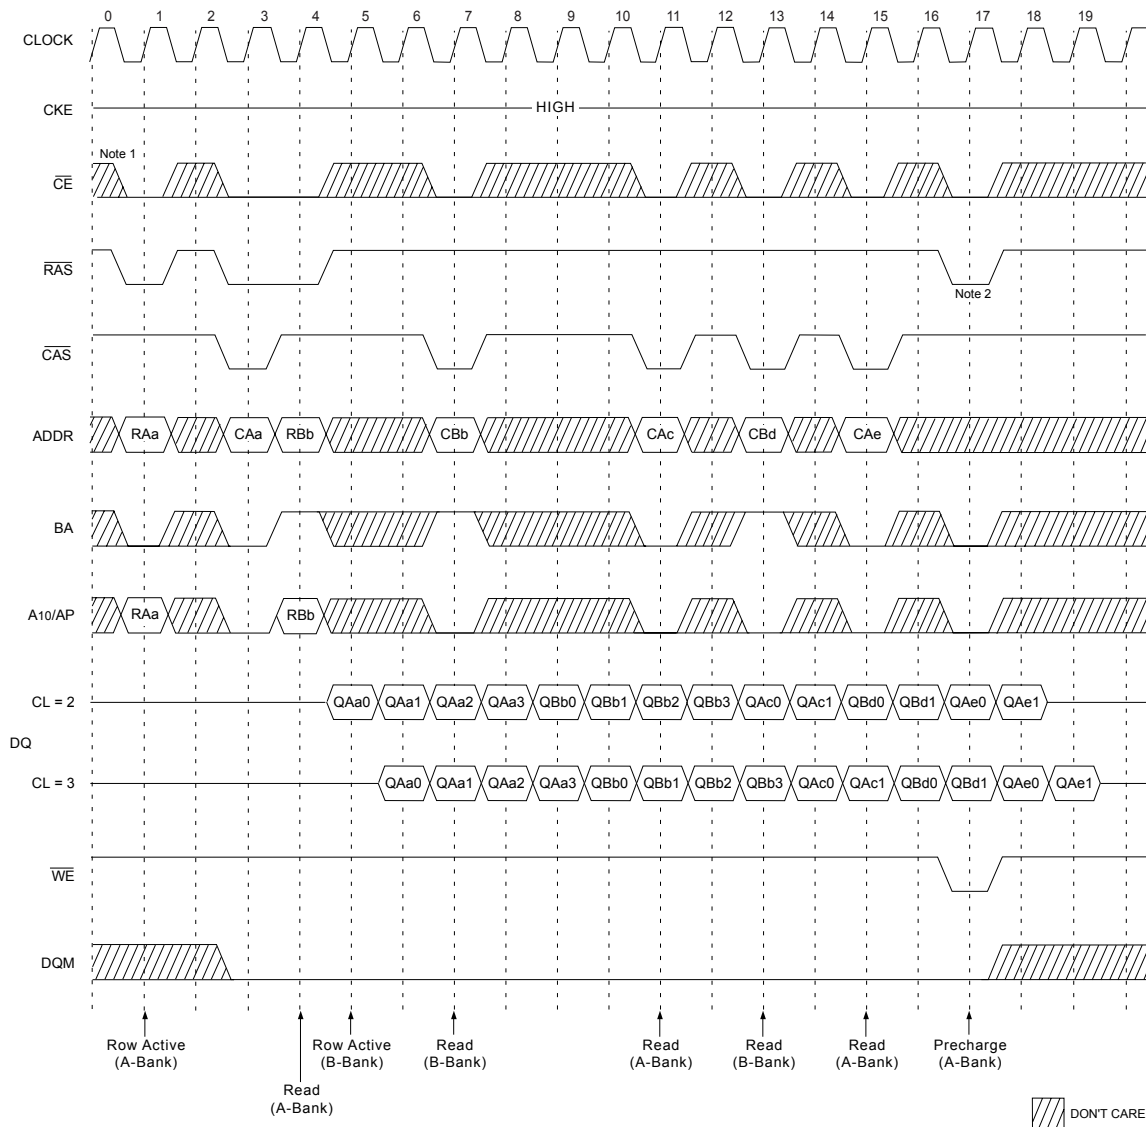


NOTES:

1. CE can be don't cared when $\overline{\text{RAS}}$, $\overline{\text{CAS}}$ and $\overline{\text{WE}}$ are high at the clock high going edge.
2. To interrupt a burst read by row precharge, both the read and the precharge banks must be the same.




FIG. 8 PAGE WRITE CYCLE AT DIFFERENT BANK @BURST LENGTH=4

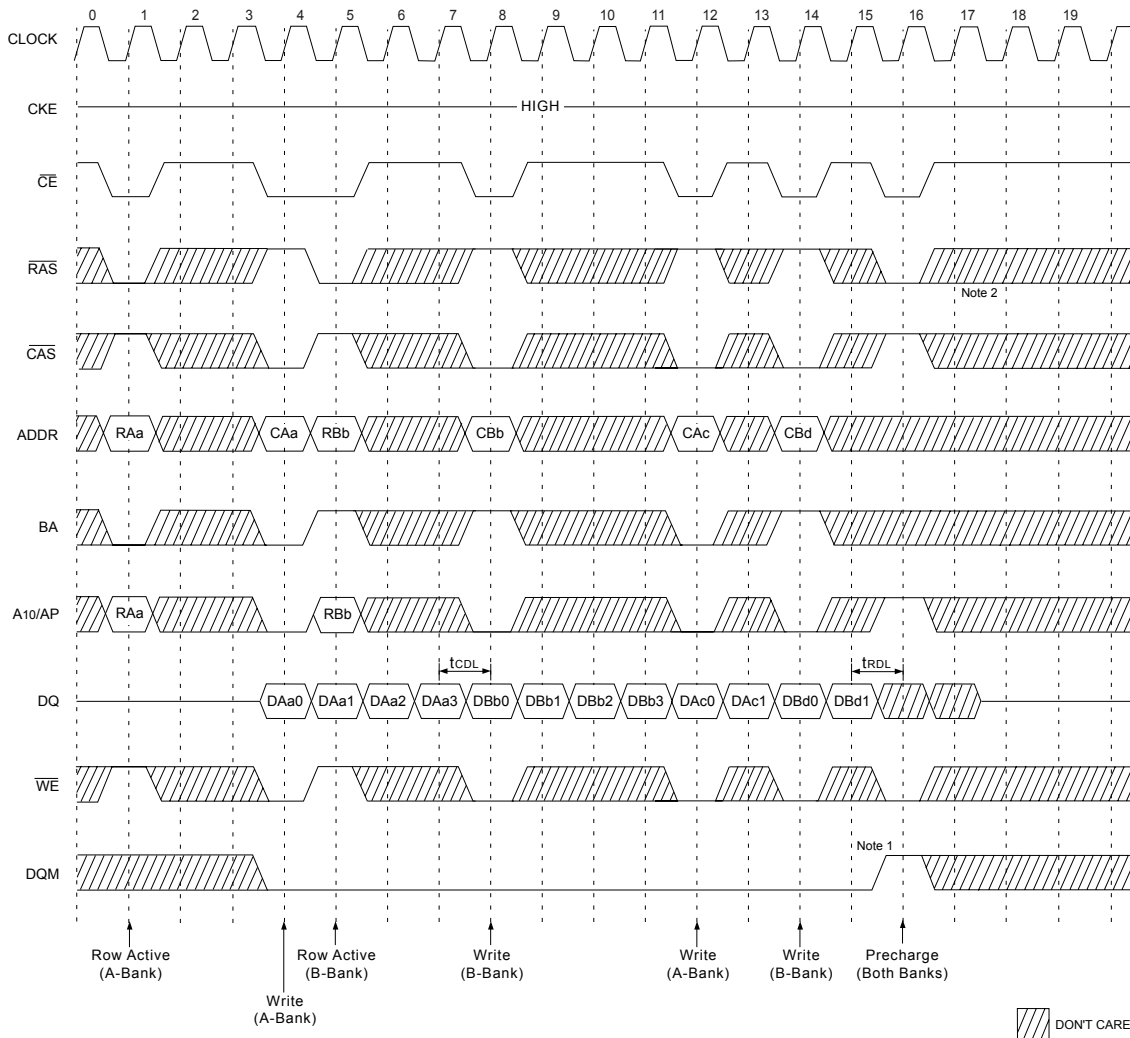


NOTES:


1. To interrupt burst write by Row precharge, DQM should be asserted to mask invalid input data.
2. To interrupt burst write by Row precharge, both the write and the precharge banks must be the same.

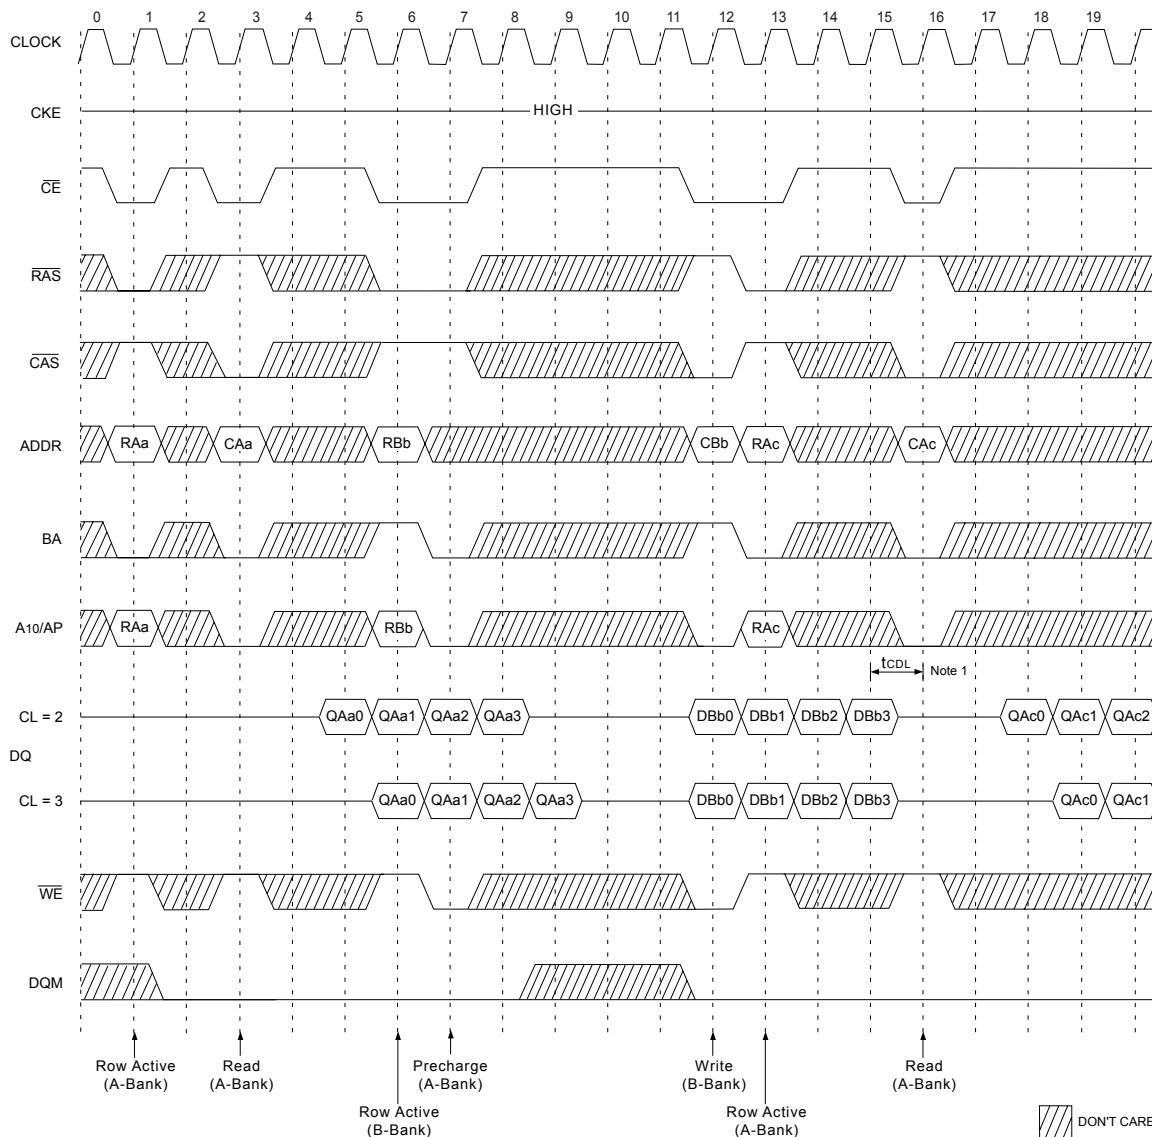**FIG. 9 READ & WRITE CYCLE AT DIFFERENT BANK @BURST LENGTH=4****NOTE:**

1. t_{CDL} should be met to complete write.

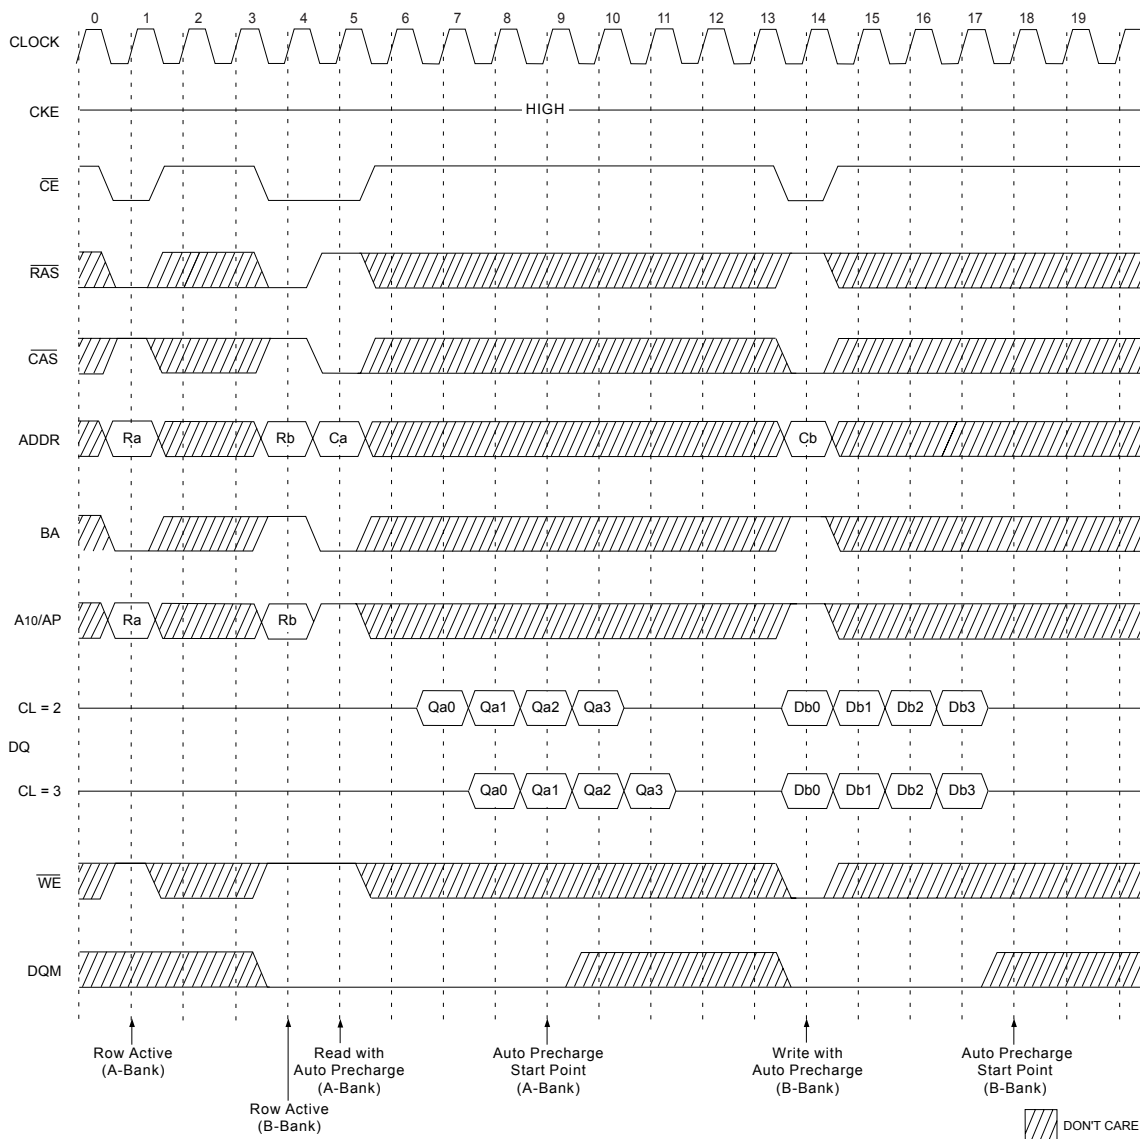**FIG. 10 READ & WRITE CYCLE WITH AUTO PRECHARGE @BURST LENGTH=4****NOTE:**


1. t_{CDL} should be controlled to meet minimum t_{RAS} before internal precharge start.
(in the case of Burst Length=1 & 2 and BRSW mode)

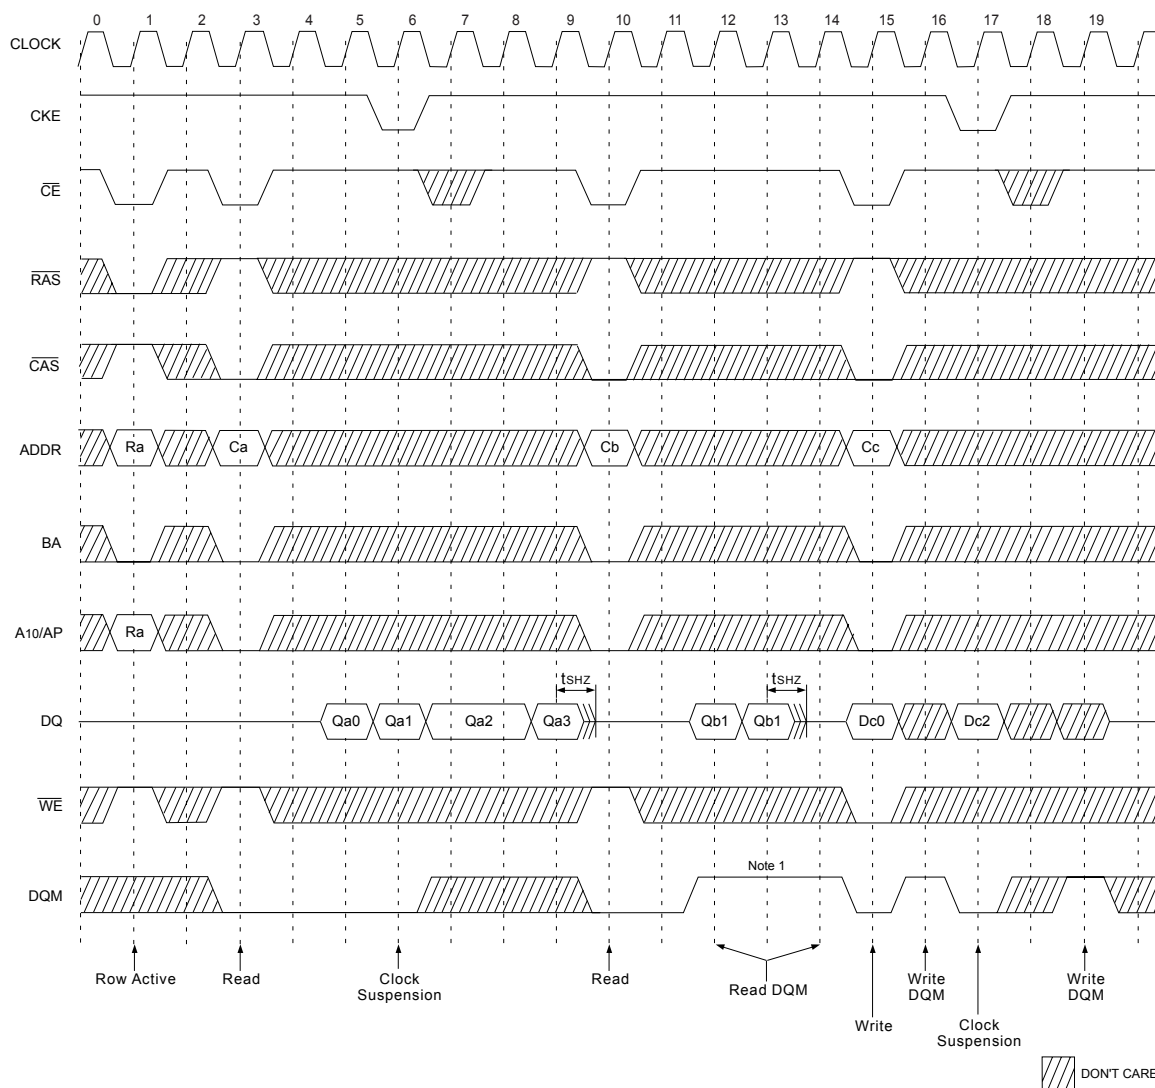**FIG. 11 CLOCK SUSPENSION & DQM OPERATION CYCLE @CAS
LATENCY=2, BURST LENGTH=4****NOTE:**

1. DQM is needed to prevent bus contention.



FIG. 12 READ INTERRUPTED BY PRECHARGE COMMAND & READ BURST STOP @BURST LENGTH=FULL PAGE

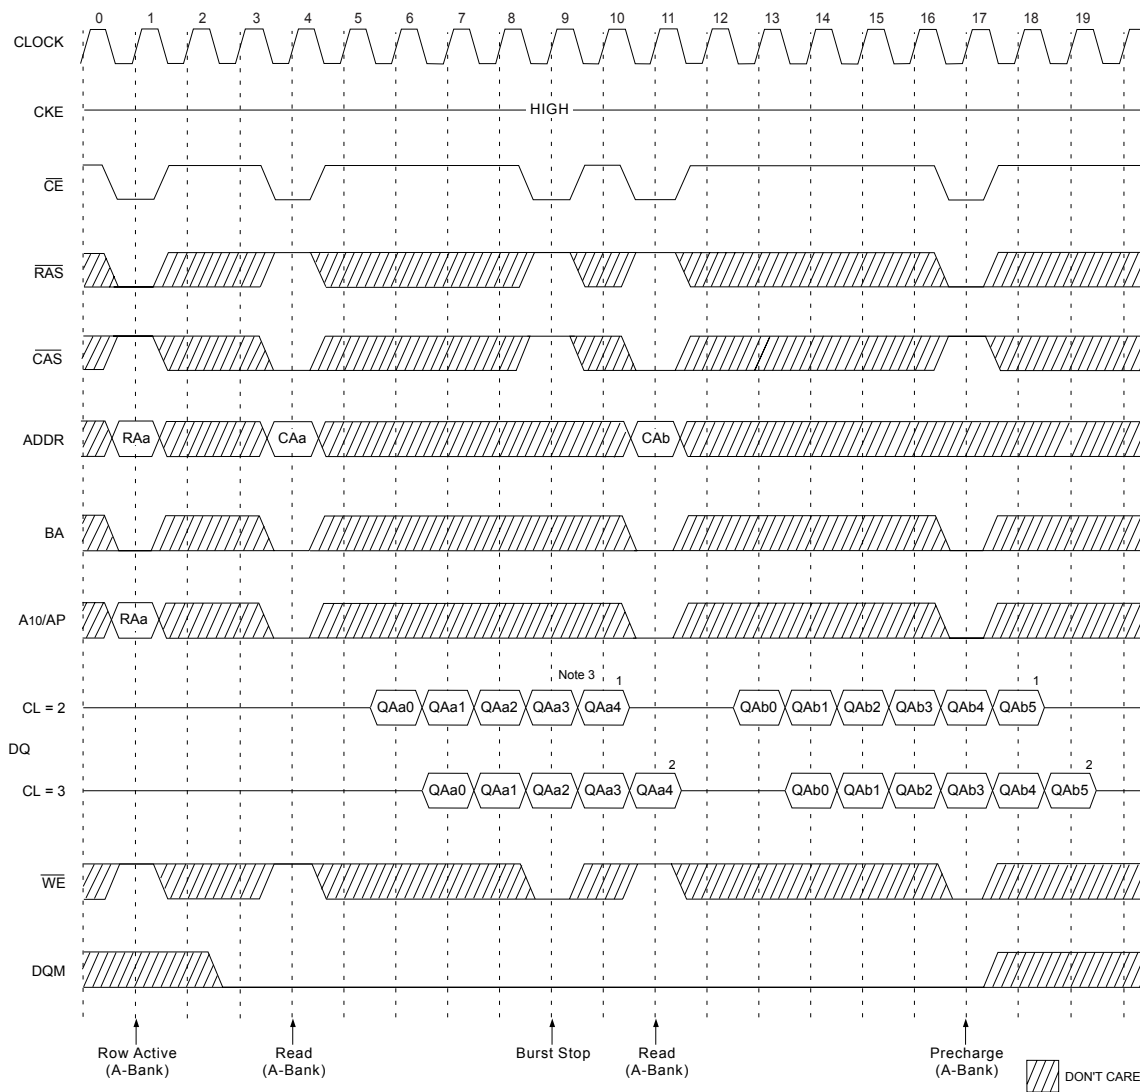


NOTES:

1. At full page mode, burst is end at the end of burst. So auto precharge is possible.
2. About the valid DQs after burst stop, it is same as the case of RAS interrupt. Both cases are illustrated in above timing diagram. See the label 1, 2. But at burst write, Burst stop and RAS interrupt should be compared carefully. Refer to the timing diagram of "Full page write burst stop cycle."
3. Burst stop is valid at every burst length.




FIG. 13 WRITE INTERRUPTED BY PRECHARGE COMMAND & WRITE BURST STOP CYCLE @BURST LENGTH=FULL PAGE

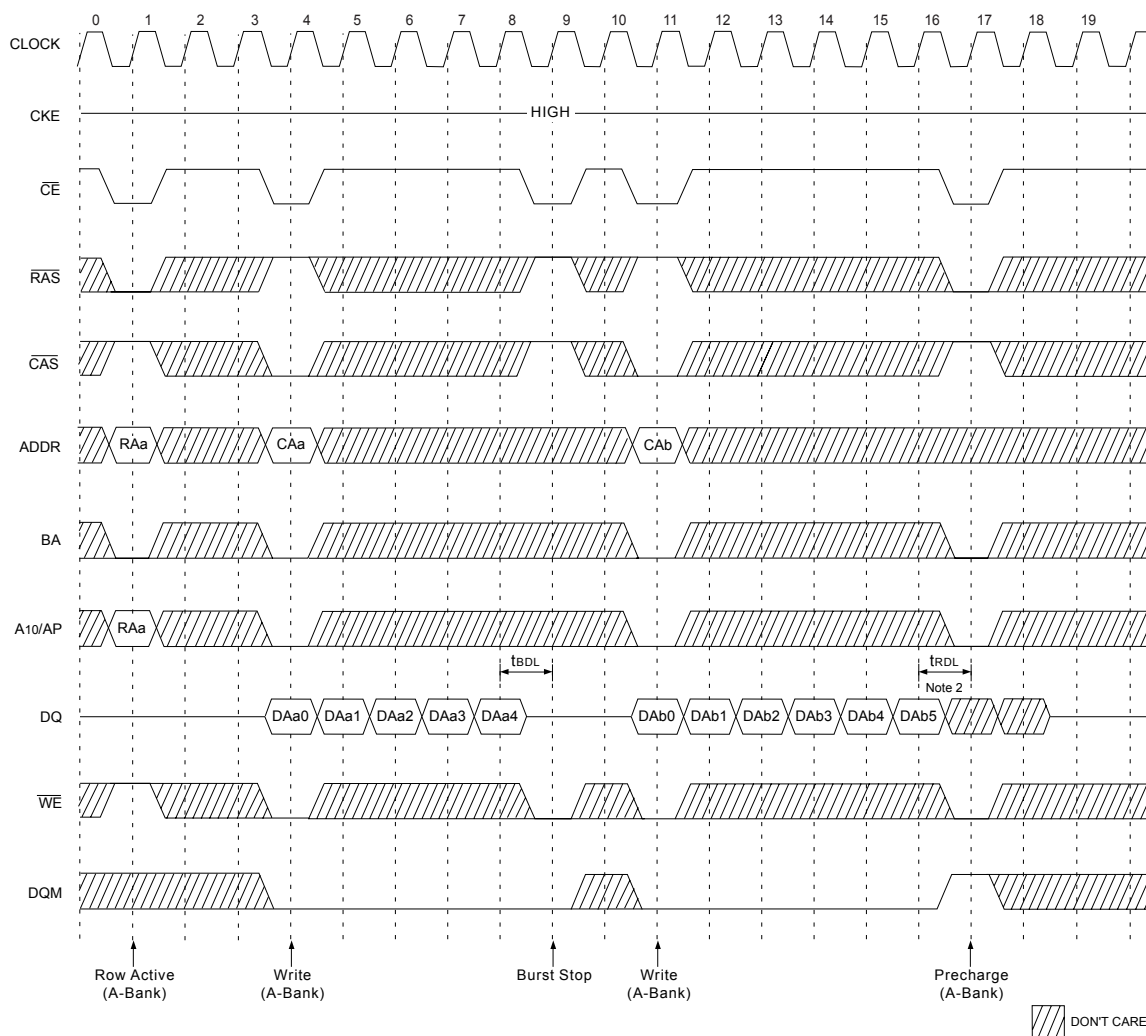


NOTES:


1. At full page mode, burst is end at the end of burst. So auto precharge is possible.
2. Data-in at the cycle of interrupted by precharge cannot be written into the corresponding memory cell. It is defined by AC parameter of t_{RDL} .
DQM at write interrupted by precharge command is needed to prevent invalid write.
DQM should mask invalid input data on precharge command cycle when asserting precharge before end of burst. Input data after Row precharge cycle will be masked internally.
3. Burst stop is valid at every burst length.

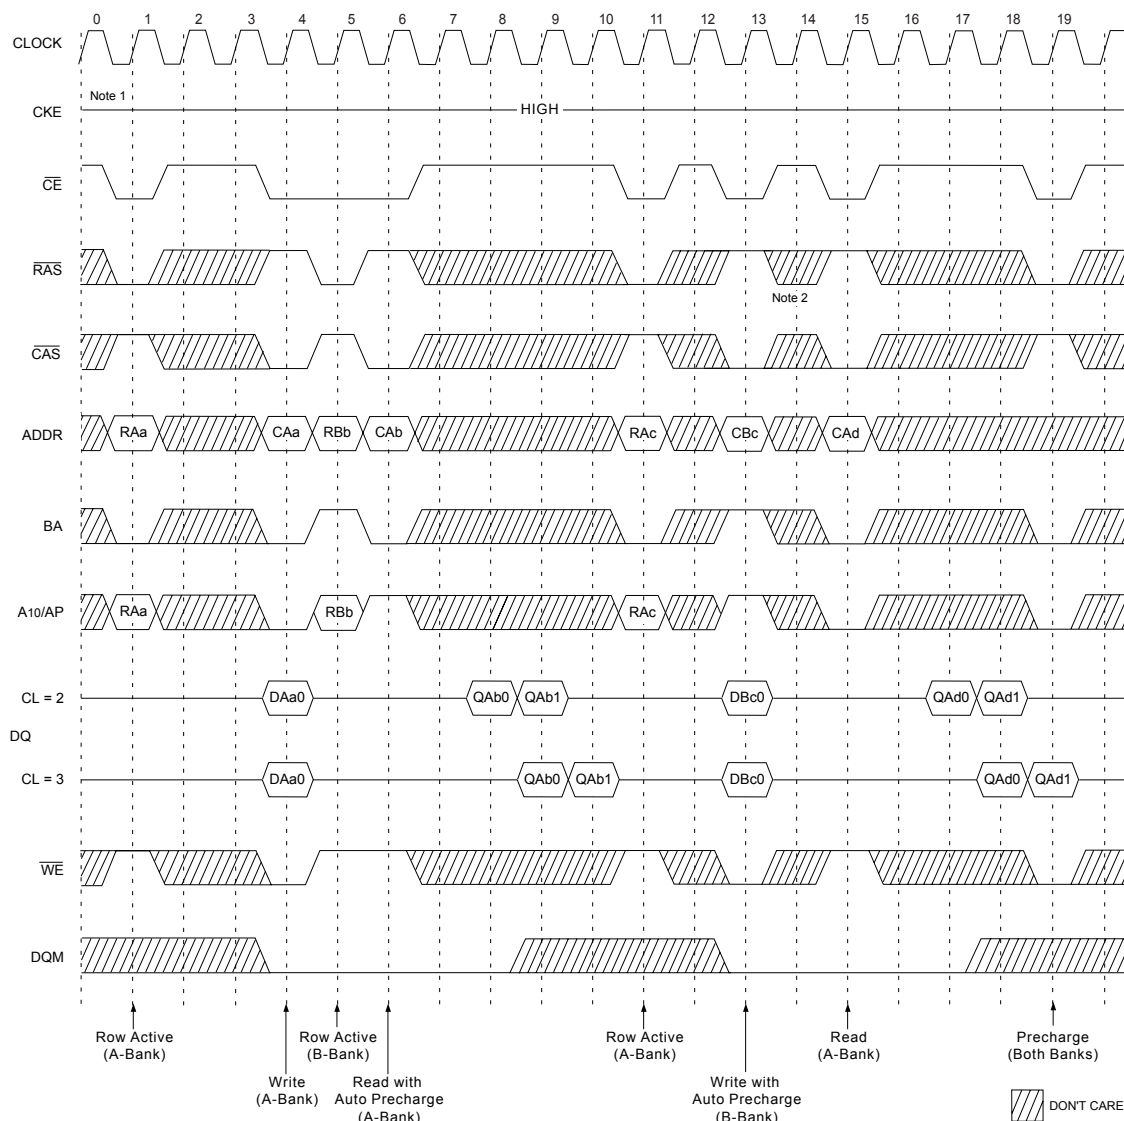**FIG. 14 BURST READ SINGLE BIT WRITE CYCLE @BURST LENGTH=2****NOTES:**

1. BRSW mode is enabled by setting As "High" at MRS (Mode Register Set). At the BRSW Mode, the burst length at write is fixed to "1" regardless of programmed burst length.
2. When BRSW write command with auto precharge is executed, keep it in mind that t_{RAS} should not be violated. Auto precharge is executed at the burst-end cycle, so in the case of BRSW write command, the next cycle starts the precharge.

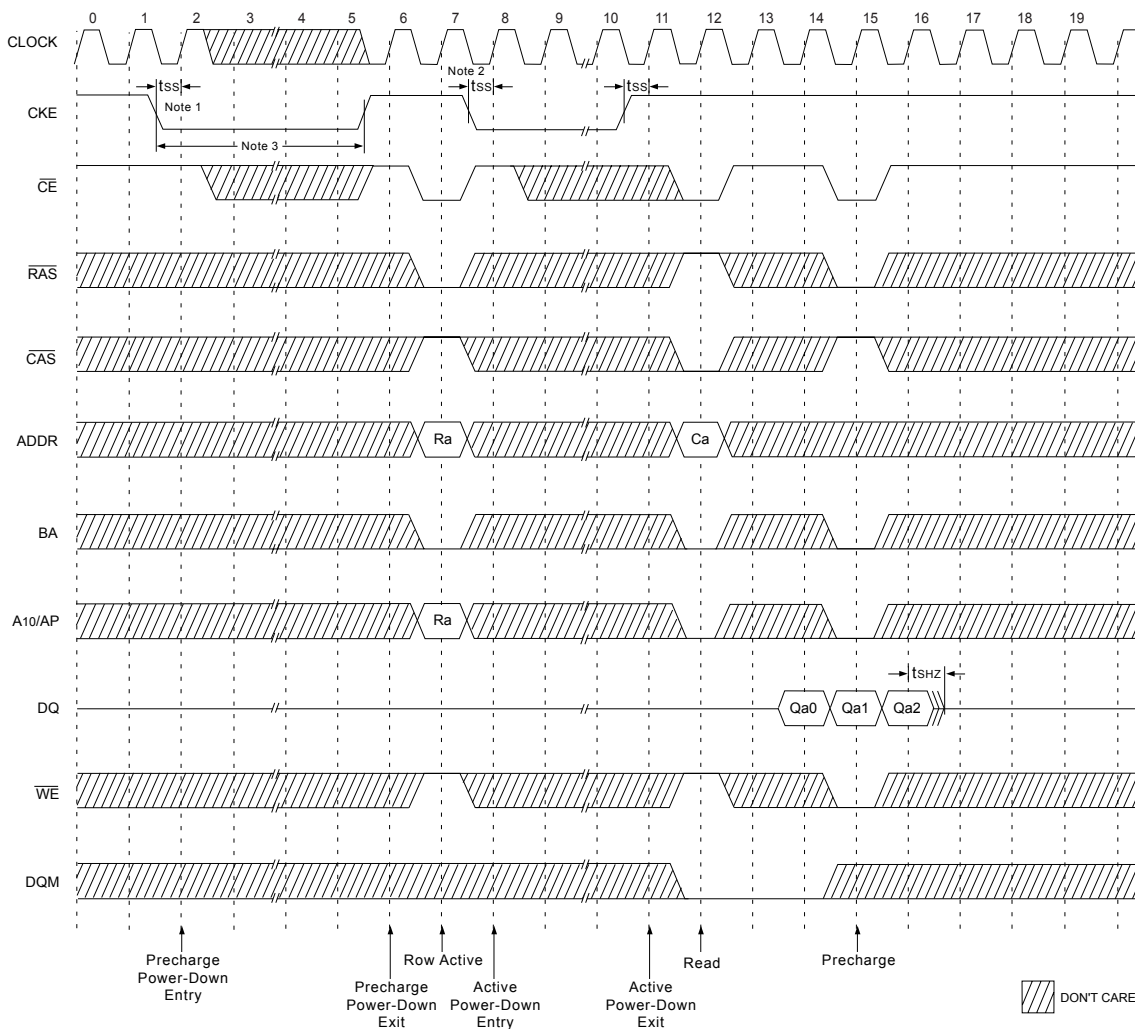**FIG. 15 ACTIVE/PRECHARGE POWER DOWN MODE @CAS
LATENCY=2, BURST LENGTH=4****NOTES:**



1. Both banks should be in idle state prior to entering precharge power down mode.
2. CKE should be set high at least 1 CLK + tss prior to Row active command.
3. Cannot violate minimum refresh specification (64ms).

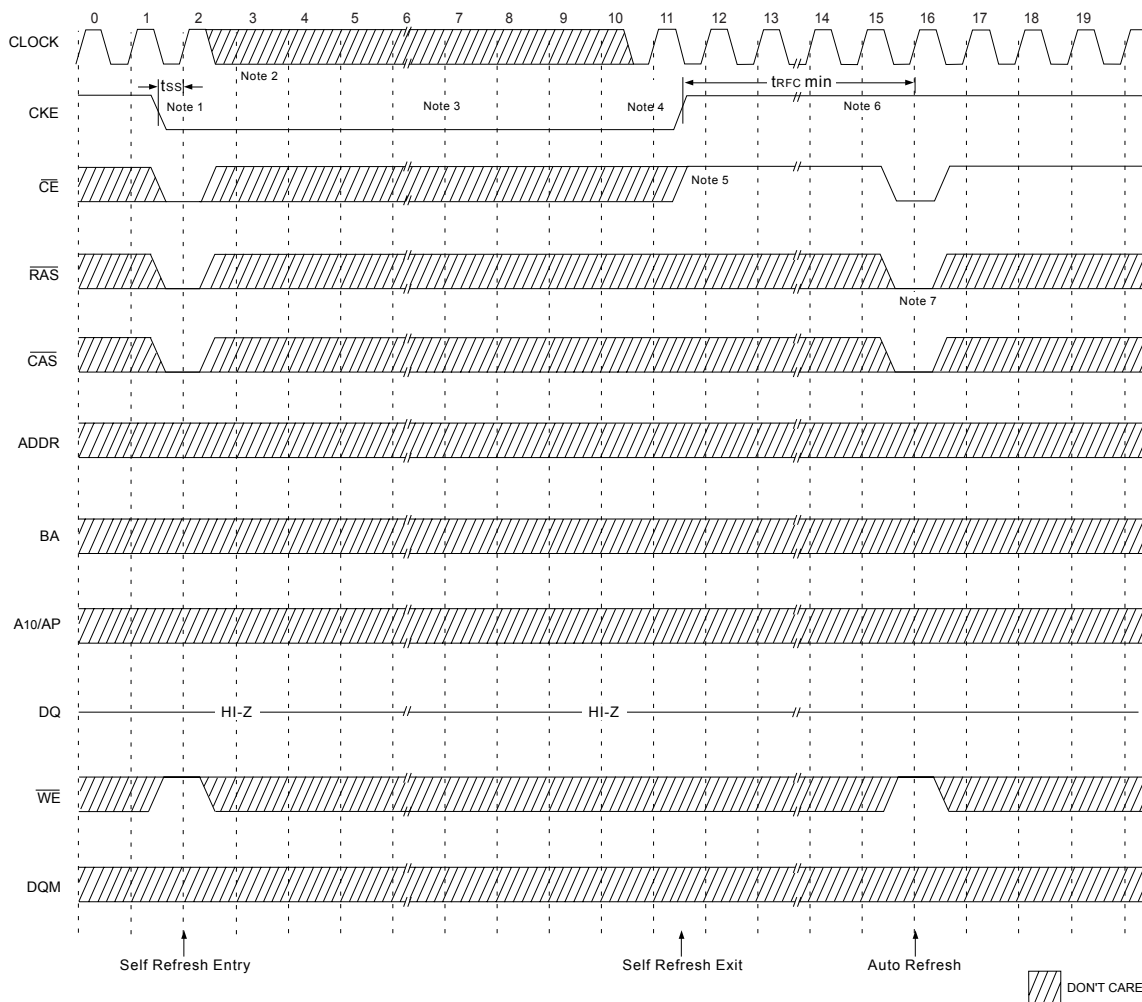**FIG. 16 SELF REFRESH ENTRY & EXIT CYCLE****NOTES:****TO ENTER SELF REFRESH MODE**

1. $\overline{CE}$, $\overline{RAS}$ & $\overline{CAS}$ with $\overline{CKE}$ should be low at the same clock cycle.
2. After 1 clock cycle, all the inputs including the system clock can be don't care except for $\overline{CKE}$.
3. The device remains in self refresh mode as long as $\overline{CKE}$ stays "Low."
Once the device enters self refresh mode, minimum t_{RAS} is required before exit from self refresh.

TO EXIT SELF REFRESH MODE

4. System clock restart and be stable before returning $\overline{CKE}$ high.
5. $\overline{CE}$ starts from high.
6. Minimum t_{RFC} is required after $\overline{CKE}$ going high to complete self refresh exit.
7. 4K cycle of burst auto refresh is required before self refresh entry and after self refresh exit if the system uses burst refresh.

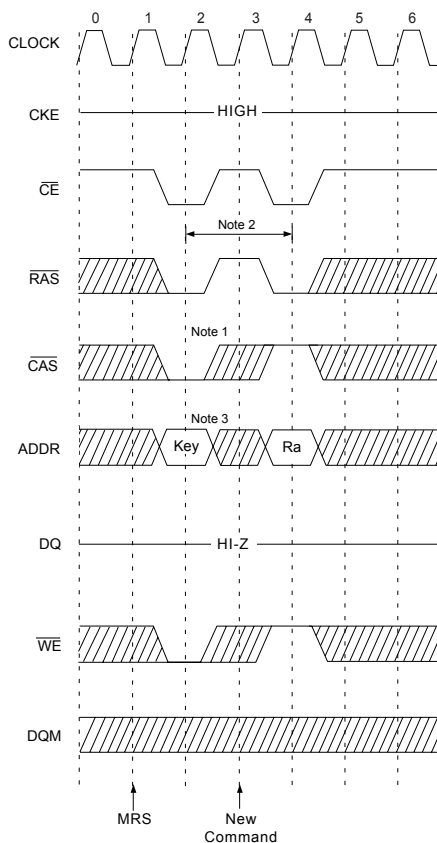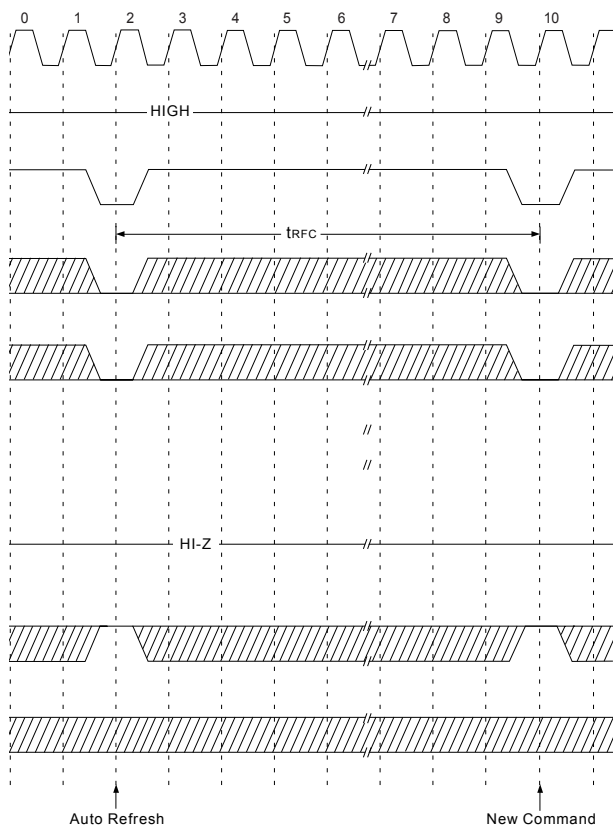**FIG. 17 MODE REGISTER SET CYCLE****FIG. 18 AUTO REFRESH CYCLE** DONT CARE**NOTES:**


Both banks precharge should be completed before Mode Register Set cycle and auto refresh cycle.

MODE REGISTER SET CYCLE

1. CE, RAS, CAS, & WE activation at the same clock cycle with address key will set internal mode register.
2. Minimum 2 clock cycles should be met before new $\overline{RAS}$ activation.
3. Please refer to Mode Register Set table.



PACKAGE DESCRIPTION 119 PIN BGA JEDEC MO-163

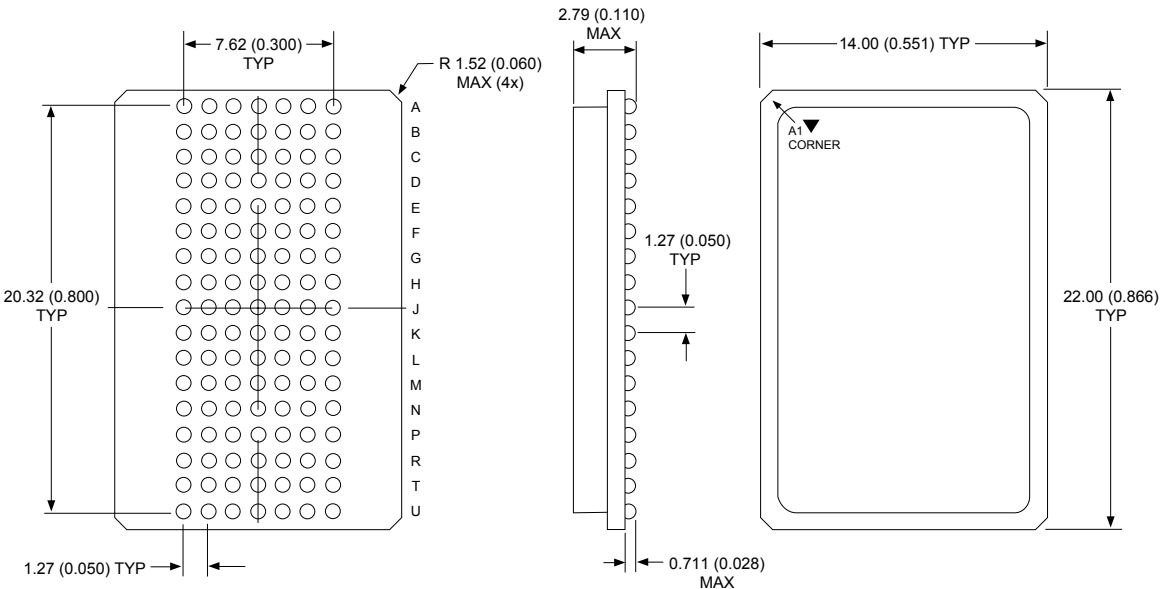

ALL DIMENSIONS ARE IN MILLIMETERS AND PARENTHETICALLY IN INCHES

ORDERING INFORMATION

Part Number	Clock Frequency	Package	Operating Range
WED3DL328V7BC	133MHz	119 BGA	Commercial
WED3DL328V8BC	125MHz	119 BGA	Commercial
WED3DL328V10BC	100MHz	119 BGA	Commercial
WED3DL328V7BI	133MHz	119 BGA	Industrial
WED3DL328V8BI	125MHz	119 BGA	Industrial
WED3DL328V10BI	100MHz	119 BGA	Industrial