







Description :


RKP-CMU1 is a fully digitalized control / monitoring unit for the RCP-2000 power system. Equipped with USB, RS-232, and ethernet interface, it can be connected locally to PC to execute the control and monitoring tasks. With built-in 4 configurable relay contacts, users can flexibility monitor specific events or alarms and react suitable action accordingly.

Features:

- 1U low profile/19-inch rack mounting
- Control and monitor RCP-2000 units
- Front panel LCD and buttons for on-site service without PC
- USB-, RS-232 or Ethernet interface for PC connection locally or remote monitoring and control via GSM modem
- Alarm/event log with time and date
- Windows-based PC communication software
- Easy Wire Connections on Rear side
- 4 user programmable relay outputs for traditional remote monitoring warning
- 3 years warranty




SELECTION GUIDE

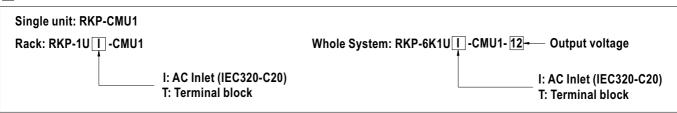


SPECIFICATION

| MODEL | 7 | RKP-1U -CMU1 | RKP-CMU1 | | | |
|-------------|-----------------------------|--|---|--|--|--|
| | DIGITAL METER | Display the DC output voltage, current, and internal temperature of each RCP-2000 unit | | | | |
| | CONTROL OUTPUT | PM Bus signal for each RCP-2000 unit | | | | |
| OUTPUT | LED INDICATOR | Green: Power on Red:Alarm | | | | |
| | RELAY CONTACT | 4 user programmable relay, relay contact rating(max.): 30V/1A | 4 user programmable relay, relay contact rating(max.): 30V/1A resistive | | | |
| | VOLTAGE RANGE Note.3 | 12 ~ 15VDC | | | | |
| INPUT | CURRENT | 1A/12VDC 0.8A/15VDC | | | | |
| | MONITORING INPUTS | PM Bus signal for each RCP-2000 unit | | | | |
| | DISPLAY | LCD 16x2 Alphanumeric Matrix Display / PC Web Page Display | 1 | | | |
| FUNCTION | MONITOR | Output Voltage / Load Current / Temperature / Input Voltage | | | | |
| FUNCTION | CONTROL | Output Voltage · Current Limit · ON/OFF | | | | |
| | COMM. INTERFACE | USB · RS-232 · Ethernet | | | | |
| | WORKING TEMP. Note.1 | -25 ~ +70℃ | | | | |
| ENVIRONMENT | WORKING HUMIDITY | 20 ~ 90% RH non-condensing | | | | |
| LIVINORMENT | STORAGE TEMP., HUMIDITY | -40 ~ +85 ℃, 10 ~ 95% RH | | | | |
| | VIBRATION | 10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes | | | | |
| | SAFETY STANDARDS | UL60950-1, TUV EN60950-1 approved | Design refer to TUV EN60950-1 | | | |
| SAFETY & | WITHSTAND VOLTAGE | I/P-O/P:3KVAC I/P-FG:1.5KVAC O/P-FG:0.7KVDC | | | | |
| EMC | ISOLATION RESISTANCE Note.2 | I/P-O/P, I/P-FG,O/P-FG:100M Ohms / 500VDC / 25°C / 70% RH | | | | |
| LINIC | EMC EMISSION | Compliance to EN55022 (CISPR22) | | | | |
| | EMC IMMUNITY | Compliance to EN61000-4-2,3,4,5,6,8,11, EN61000-6-2(EN50 | 008-2), light industry level, criteria A | | | |
| OTHERS | DIMENSION | 486.6*350.8*44mm (L*W*H) | 147.5*127*41mm (L*W*H) | | | |
| OTHERS | PACKING | 4.4Kg; 3pcs/14.2Kg/2.67CUFT | 0.8Kg; 16pcs/13.8Kg/0.79CUFT | | | |
| NOTE | | 07 1 0 | | | | |



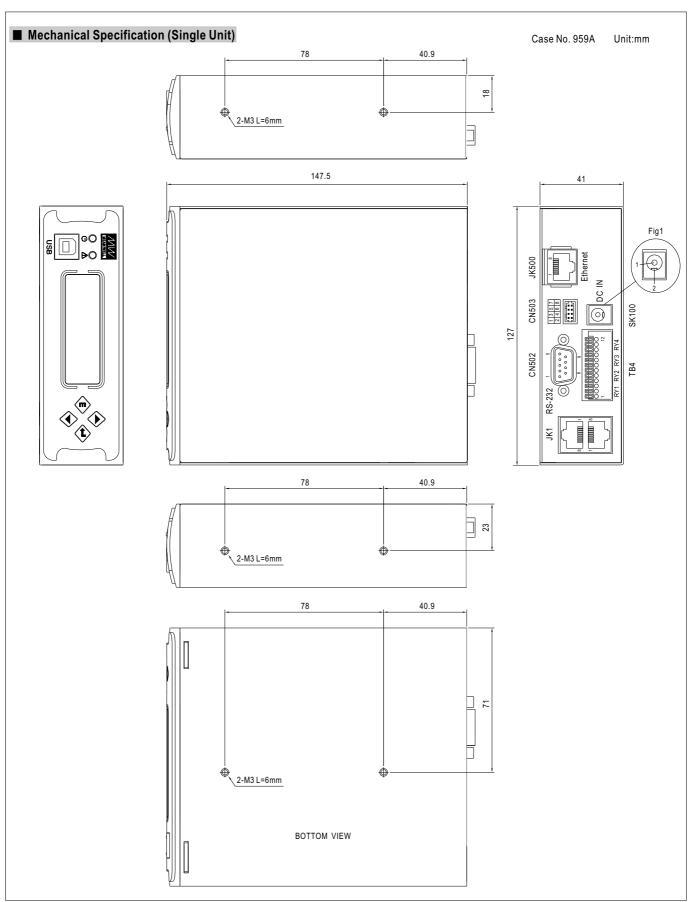



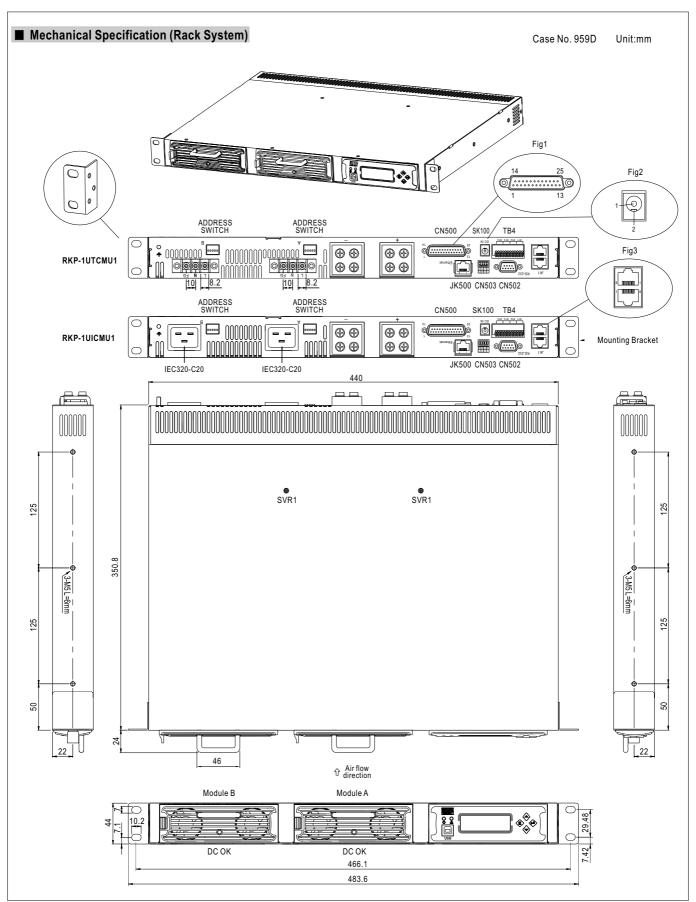



■ CN500 Pin No. Assignment

Connector Pin No. Assignment(CN500): D-Type Right Angle 25 positions

| Pin No. | Assignment |
|---------|------------|---------|------------|---------|------------|---------|------------|
| 1 | ON/OFF-A | 6 | FAN FAIL-A | 11 | T-ALARM-B | 16~21 | N.C. |
| 2 | AC-OK-A | 7 | ON/OFF-B | 12 | FAN FAIL-B | 22 | +S |
| 3 | DC-OK-A | 8 | AC-OK-B | 13 | +5V-AUX | 23 | -S |
| 4 | PV-A | 9 | DC-OK-B | 14 | +12V-AUX | 24 | +V |
| 5 | T-ALARM-A | 10 | PV-B | 15 | GND-AUX | 25 | -V |

■ JK1 Pin No. Assignment

Connector Pin No. Assignment(JK1): RJ45 8 positions

| Pin | No. | Assignment | Pin No. | Assignment | Pin No. | Assignment |
|-----|-----|------------|---------|------------|---------|------------|
| 1 | | DA | 4 | CONTROL | 7 | SCL |
| 2 | 2 | DB | 5 | NC | 8 | GND-AUX |
| 3 | } | -V | 6 | SDA | | |

■ CN502 Pin No. Assignment

Connector Pin No. Assignment(CN502): D-type Male 9 positions

| Pin No. | Assignment | Pin No. | Assignment |
|-------------|------------|---------|------------|
| 1,4,6,7,8,9 | NC | 3 | TXD |
| 2 | RXD | 5 | GND-FG |

■ CN503 Pin No. Assignment

Connector Pin No. Assignment(CN503): HRS DF11-8DP-2DS or equivalent

| Pin No. | Assignment | Pin No. | Assignment |
|---------|------------|---------|------------|
| 1 | D-IN1 | 5 | D-IN3 |
| 2,4,6,8 | GND-FG | 7 | D-IN4 |
| 3 | D-IN2 | | |

■ JK500 Pin No. Assignment

Connector Pin No. Assignment(JK500): RJ45 8 position

| Pin No. | Assignment | Pin No. | Assignment |
|---------|------------|---------|------------|
| 1 | TX+ | 4,5,7,8 | NC |
| 2 | TX- | 6 | RX- |
| 3 | RX+ | | |

■ TB4 Pin No. Assignment

Connector Pin No. Assignment(TB4): DECA MX422-25412 or equivalent

| Pin No. | Assignment |
|---------|------------|---------|------------|---------|------------|---------|------------|
| 1 | Relay1-NO | 4 | Relay2-NO | 7 | Relay3-NO | 10 | Relay4-NO |
| 2 | Relay1-NC | 5 | Relay2-NC | 8 | Relay3-NC | 11 | Relay4-NC |
| 3 | Relay1-COM | 6 | Relay2-COM | 9 | Relay3-COM | 12 | Relay4-COM |

■ SK100 Pin No. Assignment

Connector Pin No. Assignment(SK100): Schurter 4840.2201 or equivalent

| | | . 3 | |
|---------|------------|---------|------------|
| Pin No. | Assignment | Pin No. | Assignment |
| 1 | +VIN | 2 | -VIN |



■ CN500 IN/OUT Connector pins function description

| Pin No. | Function | Description |
|---------|----------|---|
| 1,7 | ON/OFF | Each unit can separately turn the output on and off by electrical signal or dry contact between ON/OFF A,B,C(pin 1,7,16) and +5V-AUX(pin 13). Short: ON, Open:OFF. (Note.2) |
| 2,8 | AC-OK | Low : When the input voltage is ≥87Vrms. High : when the input voltage in ≤75Vrms. (Note.2) |
| 3,9 | DC-OK | High: When the Vout \leq 80±5%. Low: When Vout \geq 80±5%. (Note.2) |
| 4,10 | PV | Connection for output voltage trimming. The voltage can be trimmed within its defined range. (Note.1) |
| 5,11 | T-ALARM | High: When the internal temperature (TSW1 or TSW2 open) exceeds the limit of temperature alarm. Low: When the internal temperature (TSW1 or TSW2 short) under the limit temperature. (Note.2) |
| 6,12 | FAN FAIL | High: When the internal fan fail. Low: When the internal fan is normal. (Note.2) |
| 13 | +5V-AUX | Auxiliary voltage output, 4.5 ~ 5.5V, referenced to GND-AUX (pin 15). The maximum load current is 0.3A. This output has the built-in "Oring diodes" and is not controlled by the remote ON/OFF control. |
| 14 | +12V-AUX | Auxiliary voltage output, 10.8 ~ 13.2V, referenced to GND-AUX (pin 15). The maximum load current is 0.8A. This output has the built-in "Oring diodes" and is not controlled by the remote ON/OFF control. |
| 15 | GND-AUX | Auxiliary voltage output GND. The signal return is isolated from the output terminals (+V & -V). |
| 16~21 | N.C. | |
| 22 | +S | Positive sensing. The +S signal should be connected to the positive terminal of the load. The +S and -S leads should be twisted in pair to minimize noise pick-up effect. The maximum line drop compensation is 0.5V. |
| 23 | -S | Negative sensing. The -S signal should be connected to the negative terminal of the load. The -S and +S leads should be twisted in pair to minimize noise pick-up effect. The maximum line drop compensation is 0.5V. |
| 24 | +V | Positive output voltage. For local sense use only, can't be connected directly to the load. |
| 25 | -V | Negative output voltage. For local sense use only, can't be connected directly to the load. |

■ JK1 IN/OUT Connector pins function description

| Pin No. | Function | escription | | | |
|---------|----------|--|--|--|--|
| 1,2 | DA,DB | ferential digital signal for parallel control. (Note.1) | | | |
| 3 | -V | egative output voltage. For parallel control, can't be connected directly to the load. | | | |
| 4 | CONTROL | Remote ON/OFF control pin used in the PMBus interface. (Note.2) | | | |
| 5 | NC | Not use. | | | |
| 6 | SDA | Serial Data used in the PMBus interface. (Note.2) | | | |
| 7 | SCL | Serial Clock used in the PMBus interface. (Note.2) | | | |
| 8 | GND-AUX | Auxiliary voltage output GND. The signal return is isolated from the output terminals (+V & -V). | | | |

Note.1: Non-isolated signal, referenced to the output terminals (-V).

Note.2: Isolated signal, referenced to GND-AUX.

■ CN502 IN/OUT Connector pins function description

| Pin No. | Function | Description |
|-------------|----------|--|
| 1,4,6,7,8,9 | NC | Not used. |
| 2 | RXD | Receive data used in the RS-232 interface. |
| 3 | TXD | Transmit data used in the RS-232 interface. |
| 4 | GND-FG | RS-232 common GND. This signal connects to FG and isolated from V and GND-AUX. |

■ CN503 IN/OUT Connector pins function description

| Pin No. | Function | Description |
|---------|----------------------------------|--|
| 1,3,5,7 | D-IN1 D-IN2 D-IN3 D-IN4 | The isolated digital input signal and referenced to GND-FG. Open form GND-FG or +5V: Logic "0" input to RKP-CMU1 short to GND-FG or 0V: Logic "1" input to RKP-CMU1 |
| 2,4,6,8 | GND-FG | Common GND for D-IN. This signal connects to FG and isolated from V and GND-AUX. |

■ JK500 IN/OUT Connector pins function description

| Pin No. | Function | Description | |
|---------|----------|---|--|
| 1,2 | TX+/TX- | Transmit data used in the Ethernet interface. | |
| 3,6 | RX+/RX- | Receive data used in the Ethernet interface. | |
| 4,5,7,8 | NC | Not used. | |



■ TB4 IN/OUT Connector pins function description

| Pin No. | Function | Description | | |
|----------|-----------|---|--|--|
| 1,4,7,10 | Relay-NO | Normal-open contact of programmable relay. | | |
| 2,5,8,11 | Relay-NC | Normal-close contact of programmable relay. | | |
| 3,6,9,12 | Relay-COM | Common for NO/NC contact. | | |

Note: Relay contact rating (max.): 1A @24VDC resistive.

■ SK100 IN/OUT Connector pins function description

| Pin No. | Function | Description |
|---------|----------|--------------------------------------|
| 1 | +VIN | Positive input voltage for RKP-CMU1. |
| 2 | -VIN | Negative input voltage for RKP-CMU1. |

■ Function Manual

1.Communication interface

RKP-CMU1 can control and monitor RCP-2000 parameter via PMBus communication, and PC can manage whole system by using USB or RS232 or Ethernet to connect RKP-CMU1.



2.RCP-2000 Monitoring and control

RKP-CMU1 can monitor parameter of RCP-2000 such as output voltage, output current, inner temperature, status, serial number and firmware version. It also can turn RCP-2000 on/off together or separately by using "ON/OFF" pin in CN500 or PMBus "CONTROL" pin in JK1 or PMBus "OPERATION" command, shows below. By using PMBus, output voltage and over load protection of RCP-2000 are adjustable.

| RKP-1U ON/OFF pin | PMBus CONTROL pin | PMBus OPERATION command | RCP-2000 Output status |
|----------------------|----------------------|----------------------------|---------------------------|
| Connect to +5V-AUX | Open | 80h (ON) | ON |
| Connect to +5V-AUX | Connect to +5V-AUX | 80h (ON) | ON |
| Open | Open | 80h (ON) | OFF |
| Open | Connect to +5V-AUX | 80h (ON) | ON |
| Don't care | Don't care | 00h (OFF) | OFF |

3.Real time clock, Data Log and Event Log

RKP-CMU1 has a build-in real time clock data to display actual date/time and for log time stamp. The data logger is designed to store operating data when systems work. It has 1000 recodes and the interval of log is programmable from 1 to 60 minutes. The event log store system condition when alarm occur and remove. There are 600 records in event log.

4.Programmable relay

There are 4 relays and each relay has normal open, normal close and common contact in terminal block. Their active conditions are programmable for flexible application, like charger and generator control, shows below.

| Function | Sub-function | PSU | Parameter |
|----------|---|-----|-----------|
| Alarm | 1.Any alarm 2.OVP 3.OLP 4.Short circuit 5.OTP 6.High Temperature 7.AC fail 8.Fan lock 9.PMBus error | N/A | N/A |

1U Rack Control and Monitoring Unit

| Function | Sub-function | PSU | Parameter |
|---------------|---------------|----------|--------------|
| PSU ON | 1.Immediately | PSU0~ 31 | 0 sec. |
| P30 0N | 2.Delay | | 1 ~ 600 sec. |
| DOLLOFF | 1.Immediately | PSU0~31 | 0 sec. |
| PSU OFF | 2.Delay | | 1 ~ 600 sec. |
| Digital input | D-IN1 ~ D-IN4 | N/A | N/A |

5.PMBus communication interface

RKP-CMU1 integrates PMBus into RCP-2000 control. The supported PMBus commands are shown below.

| Command Code | Command Name | Transaction Type | # of data Bytes | Description |
|-----------------|------------------------|---------------------|--------------------|---|
| 01h | OPERATION | R/W Byte | 1 | Remote ON/OFF control |
| 02h | ON_OFF_CONFIG | Read Byte | 1 | ON/OFF function configuration |
| 19h | CAPABILITY | Read Byte | 1 | Capabilities of a PMBus device |
| 20h | VOUT_MODE | R Byte | 1 | Define data format for output voltage (format: Linear, N= -9) |
| 21h | VOUT_COMMAND | R Word | 2 | Output voltage setting value (format: Linear, N= -9) |
| 22h | VOUT_TRIM | R/W Word | 2 | Output voltage trimming value (format: Linear, N= -9) |
| 46h | IOUT_OC_FAULT_LIMIT | R/W Word | 2 | Output overcurrent setting value |
| 47h | IOUT_OC_FAULT_RESPONSE | R Byte | 1 | Define protection and response when are output overcurrent fault occurred |
| 79h | STATUS_WORD | R Word | 2 | Summary status reporting |
| 7Ah | STATUS_VOUT | R Byte | 1 | Output voltage status reporting |
| 7Bh | STATUS_IOUT | R Byte | 1 | Output current status reporting |
| 7Ch | STATUS_INPUT | R Byte | 1 | AC inpit voltage statusreporting |
| 7Dh | STATUS_TEMPERATURE | R Byte | 1 | Temperature status reporting |
| 80h | STATUS_MFR_SPECIFIC | R Byte | 1 | Manufacture specific status reporting |
| 81h | STATUS_FANS_1_2 | R Byte | 1 | Fan1 and 2 status reporting |
| 88h | READ_VIN | R Word | 2 | AC input voltage reading value (format: Linear, N=-1) |
| 8Bh | READ_VOUT | R Word | 2 | Output voltage reading value (format: Linear, N= -9) |
| 8Ch | READ_IOUT | R Word | 2 | Output current reading value (format: Linear, N= -3) |
| 8Dh | READ_TEMPERATURE_1 | R Word | 2 | Temperature 1 reading value (format: Linear, N= -3) |
| 90h | READ_FAN_SPEED_1 | R Word | 2 | Fan speed 1 reading value (format: Linear, N= 4) |
| 91h | READ_FAN_SPEED_2 | R Word | 2 | Fan speed 2 reading value (format: Linear, N= 4) |
| 98h | PMBUS_REVISION | R Byte | 1 | The compliant revision of the PMBus (default: 11h for Rev. 1.1) |
| 99h | MFR_ID | Block Read | 12 | Manufacturer's name |
| 9Ah | MFR_MODEL | Block Read | 12 | Manufacturer's model name |
| 9Bh | MFR_REVISION | Block Read | 6 | Firmware revision |
| 9Ch | MFR_LOCATION | Block R/W | 3 | Manufacturer's factory location |
| 9Dh | MFR_DATE | Block R/W | 6 | Manufacture date. (format: YYMMDD) |
| 9Eh | MFR_SERIAL | Block R/W | 12 | Product serial number |